

BORGESON

Steering You Forward

#800330 SBF 289/302/351W P/S Pump Kit

Note: This Part Supersedes Part 's # 800331, 800332, 800333

KIT CONTENTS:

P/S Pump, P/S Pulley, P/S Pump Bracket, Hardware

Your Ford Saginaw P/S pump upgrade comes with the pump attached to the pump bracket and the pulley already properly installed. Please leave these items assembled for installation.


Installation notes:

- 1) This kit includes both 7/16" and 3/8" mounting bolts. Check the size of the holes tapped in the head to select the proper size before beginning installation.
- 2) This bracket set includes 2 short spacers and 2 long spacers. Cars **without** A/C will need to use both the short and long spacers. Cars **with** A/C will only need the 2 long spacers.

Installation:

Attach the bracket to the driver's side head with the correct two bolts and the proper amount of spacers for your application. *NOTE: The bracket has two upper holes. Cars **without** A/C may use the inner hole to mount the pump closer to the motor.*

Cars without A/C may use this mounting hole to position pump closer to the motor.

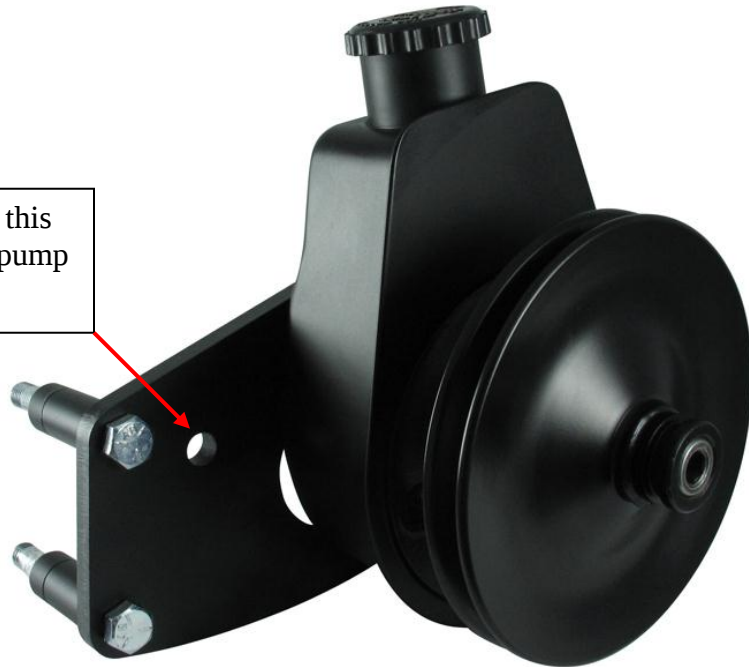

Borgeson Universal Company, Inc.
91 Technology Park Dr. Torrington, CT 06790
(860) 482-8283 www.borgeson.com

04/06/2010