




INSTRUCTIONS FOR BORGESON #800500/800502

MOUNTING A BORGESON REMOTE PUMP TO #800500/800502 PUMP MOUNT KIT

Mounting the Borgeson remote P/S pump to a part #800500 pump mounting kit will require you to drill out one set of threads with a 5/16" drill bit and tap an existing metric hole to 5/16-18. SEE PHOTO BELOW.

NOTE: YOU MUST USE A PULLEY INSTALLATION TOOL TO AVOID DAMAGING P/S PUMP

The pump is not pre-drilled to allow it to attach to different mounting kits.

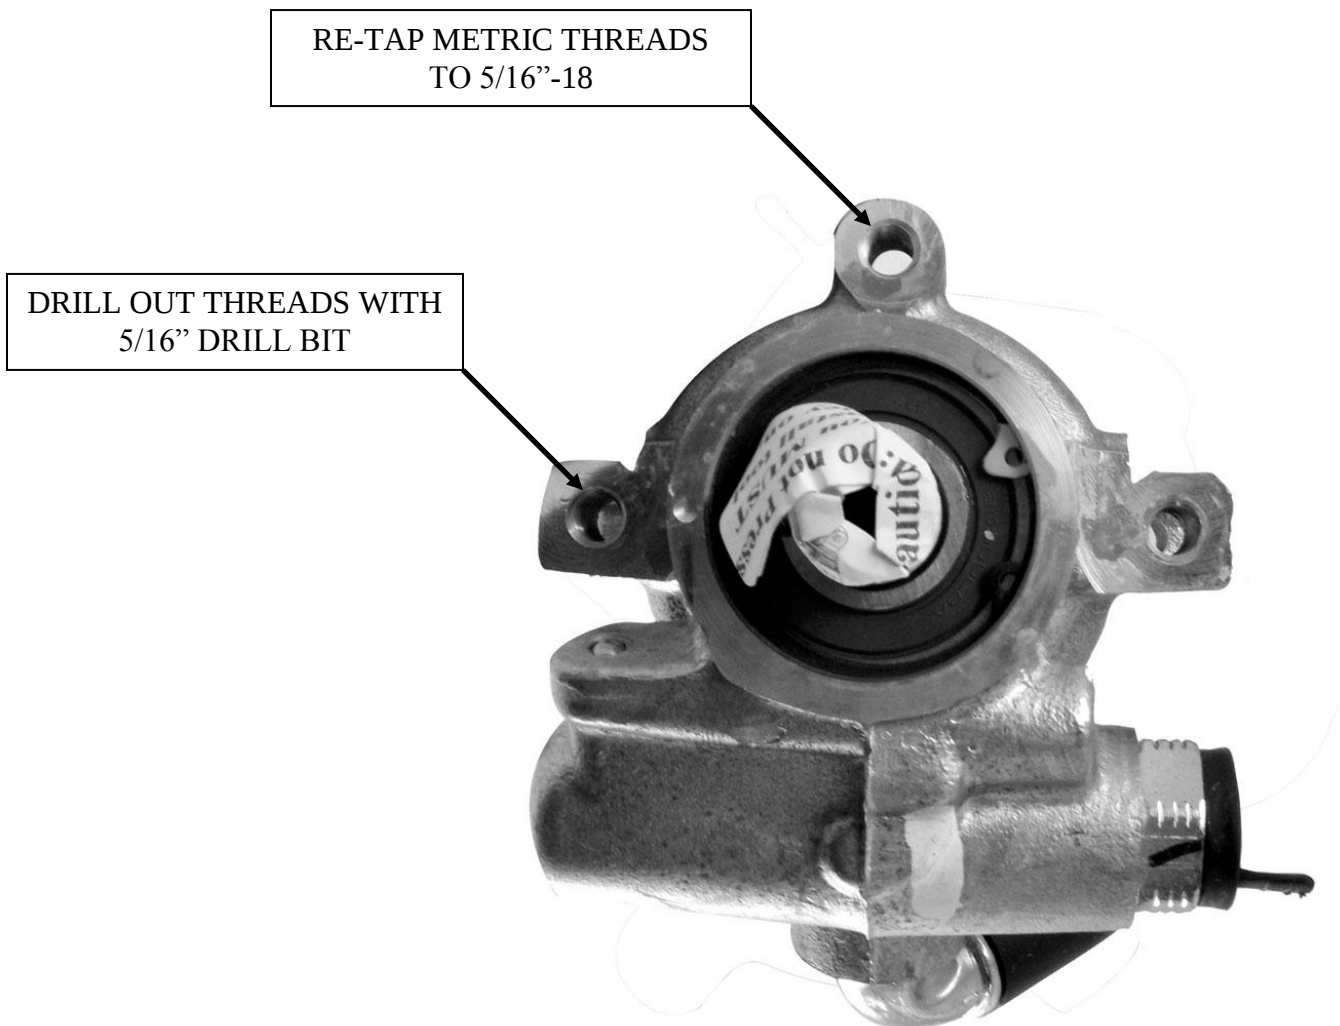

Borgeson Universal Company, Inc.
91 Technology Park Dr. Torrington, CT 06790
(860) 482-8283 www.borgeson.com

08/25/2009