

## Dual Exhaust System Installation For 2005-2008 Dodge Magnum/Charger SXT/SE



Precision manufactured using aircraft quality T-304 stainless steel; this system is designed to endure years of heavy use. Installing a Borla Performance Exhaust System on your vehicle will eliminate the restrictive design of the stock exhaust, allowing your engine to discharge exhaust gas easier. The result is more horsepower and torque, longer engine life, and a distinctive throaty growl- all this, with easy bolt-on installation. These installation instructions have been written to help you in the installation of your Borla Performance Exhaust System. Please read it completely before installing your system.

**Thank you for purchasing a Borla Performance Cat-Back™ Exhaust System.**

**This Borla Performance Cat-Back™ Exhaust System (Part number 140197) has been designed for 2005-2008 Dodge Magnum/Charger SXT/SE equipped with a 3.5L V-6 engine, rear-wheel or all-wheel drive and an automatic transmission.**

**The installation of this dual exhaust system onto the 2005-2008 Dodge Magnum SXT requires cutting the rear fascia and the installation of the Mopar dual exhaust inserts part number 82210055. These can be purchased through your authorized local Mopar Parts distributor.**

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

*Please take time to read and understand the following...*

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.


Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

**Minimum Required Tool List:****TOOLS:**

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Socket
- 5 Pry Bar

**SHOP SUPPLIES:**

- 1 Spray Lubricant

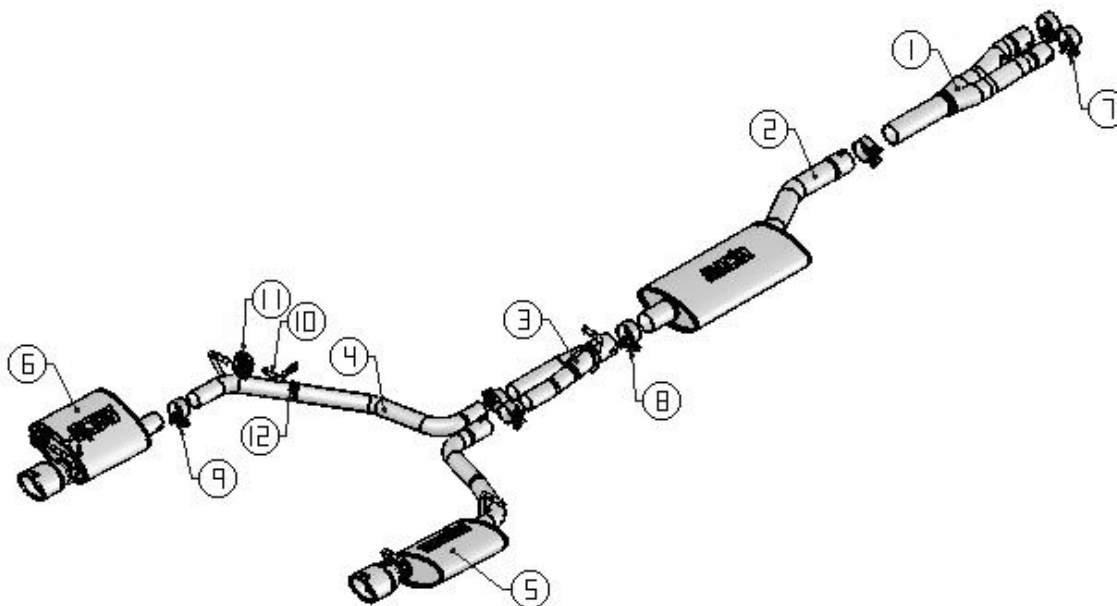**Borla Performance Cat-back™ Bill of Materials**

- 1. Y-pipe assembly
- 2. Center muffler assembly
- 3. Collector assembly
- 4. Intermediate pipe assembly
- 5. Right rear muffler assembly
- 6. Left rear muffler assembly
- 7. 2.25" Clamp (qty 2)
- 8. 2.50" Clamp (qty 2)
- 9. 2.00" clamp (qty 3)
- 10. Hanger/bracket (qty 2)
- 11. Rubber isolator (qty 2)
- 12. Hex head screw (qty 2)

**Caution!!!** *Never work on a hot exhaust system. Serious injury in the form of burns can result* If the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.

*Note: It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Rear Section Exhaust System.*

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.

*Note: Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Rear Section Exhaust System.*

## Original Exhaust System Removal

*Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.*

1. Unbolt the clamps shown in figure 1 located just behind the catalytic converters.
2. Unbolt and remove the center support bar shown in figure 2 located just behind the y-pipe.
3. Remove the ground strap shown in figure 3 located on the rear muffler assembly.
4. Lubricate all hangers and rubber isolators.
5. Using a muffler stand or an additional person to hold the exhaust system up in place, remove the hangers from the rubber isolators and remove the exhaust system shown in figure 4 from the vehicle.

**Warning:** Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. **DO NOT** use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.

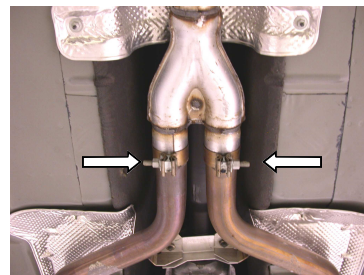


Figure 1

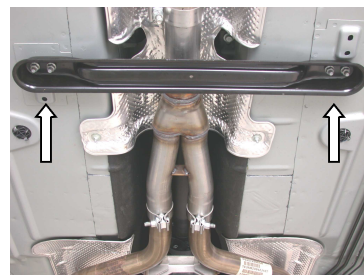


Figure 2

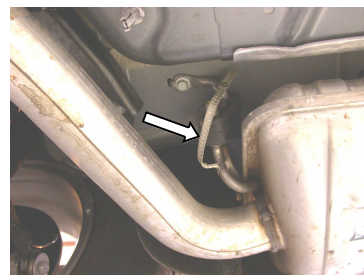


Figure 3

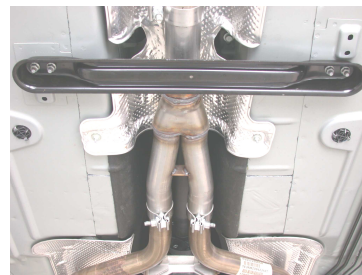


Figure 4

## Borla Performance Cat-Back™ Exhaust System Installation

1. Place a clamp over each expanded end of the Y-pipe assembly and set it into position as shown in figure 4. Do Not tighten the clamps.
2. Using the original hardware, install the center support also shown in figure 1.
3. Place a clamp over the expanded end of the center muffler assembly and set it into position as shown in figure 5. Do Not tighten the clamp.
4. Place a clamp over the expanded end of the collector assembly and set it into position as shown in figure 6. Do Not tighten the clamp.
5. Place a clamp over the expanded end of the intermediate pipe assembly and set it into position as shown in figure 7. Do Not tighten the clamp.
6. On the driver side of vehicle, using the hardware supplied, install the hanger/bracket assemblies and rubber isolators in the existing mounting locations as shown in figure 8.


*Note: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.*



**Figure 4**



**Figure 5**

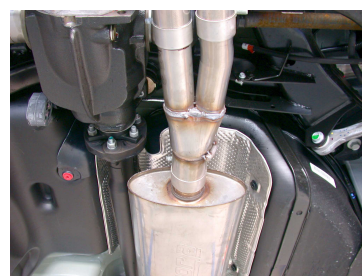

**Figure 6**



**Figure 7**



**Figure 8**



## Borla Performance Cat-Back™ Exhaust System Installation continued

7. Place a clamp over the expanded end of the left rear muffler assembly and set it into position as shown in figure 9. Do Not tighten the clamps.
8. Place a clamp over the expanded end of the right rear muffler assembly and set it into position as shown in figure 10. Do Not tighten the clamp.
9. Clip the ground strap onto the hanger located just in front of the right rear muffler as shown in figure 11.
10. Check your exhaust system for proper clearance under the vehicle and also for tip alignment.
11. Once position has been determined to be correct, tighten the Accuseal clamps to 32-35 ft. lbs.
12. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
13. Start vehicle and check for any leaks. If any leaks are found, determine cause (such as loose or incorrectly positioned clamp) and repair as necessary.

*Note: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.*



**Figure 9**



**Figure 10**



**Figure 11**