



# **BULLY DOG**

## **#1 IN PERFORMANCE**

### **INSTALLATION MANUAL**



| Outlook Pillar Pod              | Part # |
|---------------------------------|--------|
| Ford 7.3L '99.5-'03             | 31300  |
| Ford 6.0L '03-'07               | 31301  |
| Dodge 5.9L '98.5-'02            | 32302  |
| Dodge 5.9L '98.5-'02 w/ speaker | 32301  |
| Dodge 5.9L '03-'07              | 32300  |
| GM 6.6L '01-'07                 | 33301  |
| GM 6.6L '01-'07 w/ speaker      | 33300  |





## TROUBLESHOOTING:

If you have questions during the installation of this product, please visit [www.bullydog.com/Product\\_Updates.php](http://www.bullydog.com/Product_Updates.php).

The latest version of these instructions can be found at the same location. Please review the Troubleshooting section on page 9 before calling technical support to cover most common issues. Technical support is available by calling 866-bullydog (866-285-5936).

## Introduction

These products allow for the cleanest fit and finish installation of the Bully Dog Outlook Monitor. They were designed to offer the most seamless option for mounting the Outlook Monitor while still maintaining a convenient user location. These installation instructions illustrate how to properly install the Custom Outlook A-pillar cover for the trucks listed below. These comprehensive instructions cover the following installation steps: removal of stock A-pillar (when applicable), disconnection of speaker (when applicable), routing of Outlook wires and speaker wires, and the installation of the Outlook Pillar Pod.

## TABLE OF CONTENTS

|                                              |              |
|----------------------------------------------|--------------|
| <b>FORD 7.3L '99.5-'03 .....</b>             | <b>PG 2</b>  |
| <b>FORD 6.0L '03-'07 .....</b>               | <b>PG 3</b>  |
| <b>DODGE 5.9L '98.5-'02.....</b>             | <b>PG 4</b>  |
| <b>DODGE 5.9L '98.5-'02 W/ SPEAKER .....</b> | <b>PG 5</b>  |
| <b>DODGE 5.9L '03-'07 .....</b>              | <b>PG 6</b>  |
| <b>GM 6.6L '03-'07 .....</b>                 | <b>PG 7</b>  |
| <b>GM 6.6L '03-'07 W/ SPEAKER .....</b>      | <b>PG 8</b>  |
| <b>FAQ .....</b>                             | <b>PG 9</b>  |
| <b>WARRANTY/DISCLAIMER .....</b>             | <b>PG 10</b> |

## OUTLOOK PILLAR POD FOR '99.5-'03 FORD POWER STROKE 7.3L

**Note:** The pillar comes in black, but it can be painted to match any color by purchasing OEM paint color at any auto paint store.

1. Remove the vent panel cover on the inside of the dash to aid in the routing of the OutLook wire; this will also aid in the installation of the Pillar Pod. Removal of the weather stripping between where the pod will fit and the side panel is recommended.

2. Run the OutLook wiring through the Outlook Pod then peel the adhesive strip off the front of the Outlook Pod and snap the Outlook in place.



3. Once the wiring has been ran & the Outlook has been inserted into the pod, push the remaining wiring through the dash and then down toward the brake pedal and replace the vent cover.

4. Remove adhesive strip on the backside of the Outlook Pillar Pod and set the Pod securely in place.



5. With the pillar pod in place, make sure the pod fits well and drill four holes; two on each side, with a 13/64" drill bit. These holes will accommodate the plastic rivets that will hold the pod securely in place. Finally, reinstall the weather stripping and the vent cover and the job is complete.

**TOOLS NEEDED:** Drill, 13/64" drill bit

**BILL OF MATERIALS:** Outlook Pillar Pod, Plastic

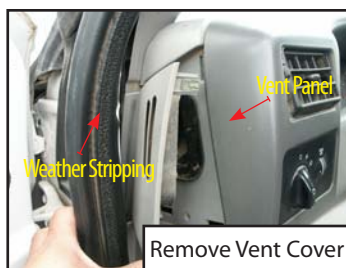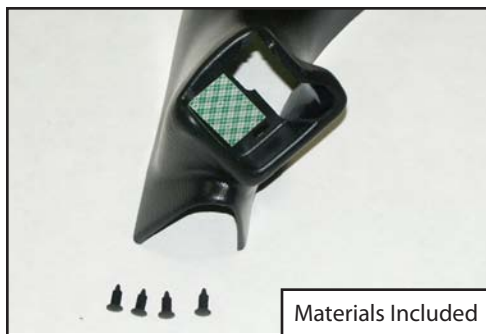

## OUTLOOK PILLAR POD FOR '03-'07 FORD POWER STROKE 6.0L

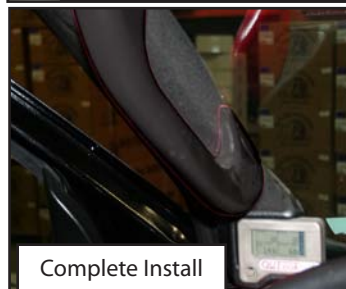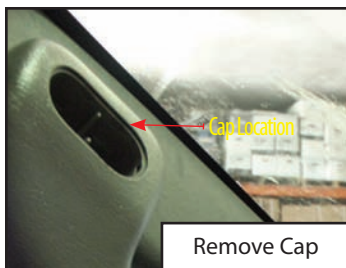

**Note:** The pillar comes in black, but it can be painted to match any color by purchasing OEM paint color at any auto paint store.

1. Remove the two caps on the grab handle on the drivers side of the cab . Under the caps are four bolts which must be removed using an 8mm socket.
2. Once removed, the pillar needs to be pulled down from its position to gain access to two screws that hold the grab handle on the pillar. Use a flat head screw driver to undo the clips holding the pillar and grab handle in place.
3. Pull the handle and pillar down, use a Phillips head screw driver to remove the grab handle by unscrewing the bottom screw holding it onto the pillar.
4. Peel the glue cover off the front of the mount and put the Outlook in place.
5. Remove Adhesive Strip from back of the Outlook Pillar Pod and snap into place. This will hold the Pod in place.
6. Replace the grab handle and securely tighten the four 8mm bolts .
7. Finally, run the Outlook wires down to the floor and replace the side panel and weather stripping and the job is complete.

**TOOLS NEEDED:** 8mm socket, Screwdrivers (Phillips and Flat Blade)

**BILL OF MATERIALS:** Outlook Pillar Pod Rivets



## OUTLOOK PILLAR POD FOR '98.5-'02 DODGE CUMMINS 5.9L

**Note:** The pillar comes in black, but it can be painted to match any color by purchasing OEM paint color at any auto paint store.


**Note:** With this install the stock plastic A-pillar will remain and the Outlook Pillar Pod will slide over the top.

1. Peel back the weather stripping on the driver's side door frame.
2. Remove the side dash panel.
3. Run the cables from the Outlook Monitor into the hole where the Outlook Monitor will sit and snap in place.
4. Remove the long piece of adhesive tape that is on the back side of the Pod.
5. Push the cabling through the dash panel and behind the dash out of sight.
6. Slide the Outlook Pod down along the A-Pillar until the Outlook Pillar Pod is flush with the stock molding.
7. Drill 1 hole with a 13/64" drill bit on the top part of the Outlook Pillar Pod underneath the weather stripping facing the outside of the driver's side window. Place a plastic rivet in the hole to ensure a good fit and finish. Additional holes may be drilled if needed.
8. Reinstall the weather stripping and replace the dash panel and the job is complete.

Peel Back Weather Stripping and Remove Sidepanel



Peel Back Adhesive

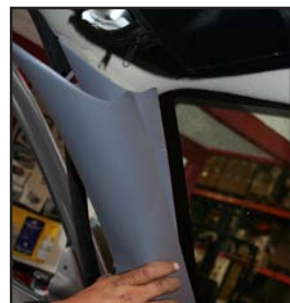

Slide Pod Down A Pillar



Installation Complete

**TOOLS NEEDED:** Drill, 13/64" drill bit

**BILL OF MATERIALS:** Outlook Pillar Pod, Plastic Rivets




Materials Included

## OUTLOOK PILLAR POD FOR '98.5-'02 DODGE CUMMINS 5.9L WITH SPEAKER

Peel Back Weather Stripping and Remove Side Panel



Pry Out Connectors

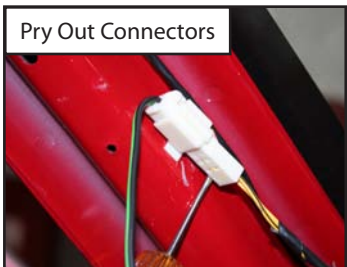

Run Cable through stock A-Pillar



Complete System Installed

**Note:** The pillar comes in black, but it can be painted to match any color by purchasing OEM paint color at any auto paint store.

1. Peel back the weather stripping on the driver's side door and remove the side dash panel.

2. The plastic A-pillar is connected to the metal door frame by two clips. Pull outward on the A-pillar and use a flat head screw driver to disconnect the clips which are between the plastic A-pillar and metal A-pillar.

3. Once the A-pillar is out a few inches, the tweeter speaker needs to be disconnected at the white plug.

4. Remove the tweeter speaker by unclipping the white fasteners and then popping the speaker out by pressing on the back side. The tweeter wires also need to be completely removed.

5. Run the cables from the Outlook Monitor into the hole where the Outlook Monitor will sit and snap in place. Both the Outlook Wires and the speaker wires need to be run through the stock pillar pod as well.

6. Snap the tweeter speaker into the Outlook Pillar Pod.

7. Remove the adhesive tape on the back side of the Pod.

8. Push the cabling through the dash panel and behind the dash.

9. Slide the Outlook Pod down along the A-Pillar until the stock pillar clips line up and the Outlook Pod together so that the clips snap back together and the pillars again are back in stock position.

10. Drill 1 hole with a 13/64" drill bit on the top part of the Outlook Pillar Pod underneath the weather stripping facing the outside of the driver's side window. Place a plastic rivet in the hole to ensure a good fit and finish. Additional holes may be drilled if needed.

11. Replace weather stripping and side dash panel.

**TOOLS NEEDED:** Drill, 13/64" drill bit, Flathead Screw Driver.

**BILL OF MATERIALS:** Outlook Pillar Pod, Plastic Rivets




Materials Included

## OUTLOOK PILLAR POD FOR '03-'07 DODGE CUMMINS 5.9L

**Note: The pillar comes in tan, and shouldn't require painting to match the interior color.**

1. Remove the stock 10mm bolt that holds the stock pillar in place. It is located about half way down the stock A-Pillar behind a small oval cover piece .
2. Run the OutLook Main Harness wires through the front end of the A-Pillar Mount and snap the OutLook into place.
3. Run the OutLook Main Harness wires through the side panel opening and through the firewall. Reconnect all of the OutLook connections.
4. Before putting the pillar in place, remove the cover to the sticky tape on the inside of the Bully Dog Pillar Mount.
5. Ready the Pillar Mount with the OutLook in place, make sure the OutLook wire is running to the left of the dash before completely sliding the pillar into its final location.
6. Slide the Bully Dog Pillar Mount down along the stock pillar until the pillar system screw hole matches up to the stock screw hole. Use the Bully Dog 10mm screw to secure the system. Also press on the sticky tape to ensure a firm connection.
7. Replace the side panel and the weather stripping and the job is complete.

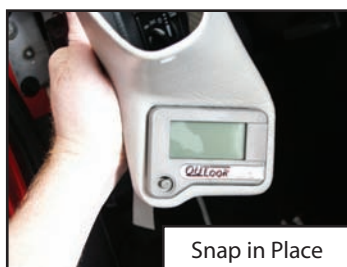

**TOOLS NEEDED:** Phillips Screwdriver, 10mm socket

**BILL OF MATERIALS:** Outlook Pillar Pod, Phillips head screw



## OUTLOOK PILLAR POD FOR GM '01-'07 6.6L

**Note: The pillar comes in black, but it can be painted to match any color by purchasing OEM paint color at any auto paint store.**



Pull Back Weather-stripping



Remove Dash Panel



Wire Outlook Through Pod




Complete System Installed

1. Pull back the weather stripping on the driver's side of the vehicle to prepare the install.
2. Remove the dash panel on the driver's side.
3. Remove the short piece of adhesive tape that will secure the Outlook in place.
4. Run the cables from the Outlook into the hole where the Outlook Monitor will sit and snap into place.
5. Remove the long piece of adhesive tape that is on the back side of the Outlook Pod.
6. Push the cabling through the dash panel and behind the dash out of sight.
7. Slide the Outlook Pod down along the A-Pillar until the top is line up to where the stock pillar pod was. Put pressure against the tape areas to ensure a good connection between the metal A-Pillar and the Outlook Pillar Pod.
8. Drill 1 hole with a 13/64" drill bit on the top part of the Outlook Pillar Pod underneath the weather stripping facing the outside of the driver's side window. Place a plastic rivet in the hole to ensure a good fit and finish. Additional holes may be drilled if needed.
9. Replace the weather stripping and the dash panel and the job is complete.

**TOOLS NEEDED: Drill, 13/64" drill bit**

**BILL OF MATERIALS: Outlook Pillar Pod, Plastic Rivets**

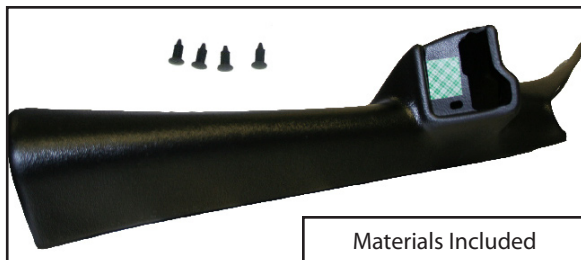

Materials Included

## OUTLOOK PILLAR POD FOR GM '01-'07 6.6L WITH SPEAKER

**Note: The pillar comes in black, but it can be painted to match any color by purchasing OEM paint color at any auto paint store.**

1. Pull Back the weather stripping on the driver's side of the vehicle to prepare the install.
2. Remove the dash panel on the driver's side.
3. Remove the short piece of adhesive tape that will secure the Outlook in place.
4. Run the cables from the Outlook into the hole where the Outlook Monitor will sit and snap into place.
5. Remove the long piece of adhesive tape that is on the back side of the Outlook Pod.
6. Push the cabling through the dash panel and behind the dash out of sight.
7. Slide the Outlook Pod down along the A-Pillar until the hole for the speaker is lined up. Put pressure against the tape areas to ensure a good connection between the metal A-Pillar and the Outlook Pillar Pod.
8. Drill 1 hole with a 13/16" drill bit on the top part of the Outlook Pillar Pod underneath the weather stripping facing the outside of the driver's side window. Place a plastic rivet in the hole to ensure a good fit and finish. Additional holes may be drilled if needed.
9. Replace the weather stripping and the dash panel and the job complete.

**TOOLS NEEDED: Drill, 13/64" drill bit**

**BILL OF MATERIALS: Outlook Pillar Pod, Plastic Rivets**



Materials Included



Pull Back Weather-Stripping



Remove Dash Panel



Run wires behind dashboard



Complete System installed

| CONDITION                                                                   | POSSIBLE SOURCES | ACTION                                                                                                 |
|-----------------------------------------------------------------------------|------------------|--------------------------------------------------------------------------------------------------------|
| How long is needed for the paint to dry when painting the Pillar Pod.       | Installation     | 10-15 minutes of drying is generally the the time re-quired for the paint to dry.                      |
| Does the stock grab handle get replaced on the A-Pillar by the OutLook Pod? | Installaion      | No, it there is a grab handle on the vehicle the OutLook Pod is designed to fit below the grab handle. |

## WARRANTY & DISCLAIMER

### REMEMBER, THIS IS A PERFORMANCE PRODUCT, USE AT YOUR OWN RISK.

*This product is not intended to be used to break the law.*

Do not use this product until you have carefully read the following agreement. This agreement sets forth the terms and conditions for the use of this product. The installation of this product indicates that the buyer has read and understands this agreement and accepts the terms and conditions. Never exceed recommended vehicle or tire top speed ratings.

### DISCLAIMER OF LIABILITY

Bully Dog Technologies, LLC. Its distributors, jobbers, and dealers (hereafter Seller) shall be in no way responsible for the product's proper use and service. THE BUYER HERBY WAIVES ALL LIABILITY CLAIMS.

The Buyer acknowledges that he is not relying on the Sellers skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description on the face hereof, and the Buyers hereby waivers all remedies or liabilities expressed or implied, arising by law or otherwise, (including without any obligation of the Seller with respect fitness, merchantability and consequential damages) or whether or not occasioned by the Seller's negligence.

The Seller disclaims any warranty and expressly disclaims any liability for personal injury or damages. The Buyer acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the Buyer agrees to indemnify the Seller and to hold the Seller harmless from any claim related to the item of the equipment purchased. Under no circumstances will the Seller be liable for any damages or expenses by reason of use or sale of any such equipment.

The Seller assumes no liability regarding the improper installation or misapplication of its products. It is the installer's responsibility to check for proper installation and if in doubt contact the manufacturer.

The Buyer is solely responsible for all warranty issues from the manufacturer.

### LIMITATION OF WARRANTY

BULLY DOG TECHNOLOGIES, LLC. (Hereafter "Seller") gives Limited Warranty as to description, quality, merchantability, and fitness for any particular purpose, productiveness, or any other matter of Seller's product sold herewith. The Seller shall be in no way responsible for the products proper use and service and the Buyer hereby waives all rights other than those expressly written herein. This warranty shall not be extended, altered or varied except be a written instrument signed by Seller and Buyer.

The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the products kit. All products that are in question of Warranty must be returned prepaid to the Seller and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by BULLY DOG TECHNOLOGIES, LLC.

Under no circumstances will the Seller be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product or any other contingent expenses.

Under no circumstances will the Seller be liable for any damage or expenses incurred by reason of the use or sale of any such equipment.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

Bully Dog Technologies, LLC is a team built on integrity that is dedicated to leading the vehicle performance industry with an uncompromising code of ethics demonstrated in the soundness of its employees, excellent customer service and superior products.

## ***UNLEASH THE POWER*** **WITH BULLY DOG PERFORMANCE PRODUCTS**

**Downloaders**



**Intake Systems**



**OutLook Monitor**



**Exhaust Systems**



***See More at: [bullydog.com](http://bullydog.com)***

***Doc.# BD30009 v1.0.5***

For a full listing of Diagnostic Trouble Codes go to: [www.bullydog.com/DTC.php](http://www.bullydog.com/DTC.php)



**For Free Technical Support**

**Call: 866-bullydog (866-285-5936)**