



C8 Corvette Rear Window Louver Installation

Part Numbers: CV-C8R190006-PACM

Parts List

Description	Qty.
Louver	1
Louver Brackets	4
Aluminum Billet Nuts	4
Installation Instructions	1

Required Tools


- 50% Isopropyl Alcohol
- Microfiber Towel
- T25 Torx Bit
- Ratchet
- Blue Loctite®
- Painter's Tape

Please verify that all parts are present.

CAUTION: If any part of this installation seems beyond your level of installation experience, please seek the help of a certified professional.

Installation Procedure

1. Open the rear hatch.
2. Place a blanket over the engine bay to catch any dropped fasteners.

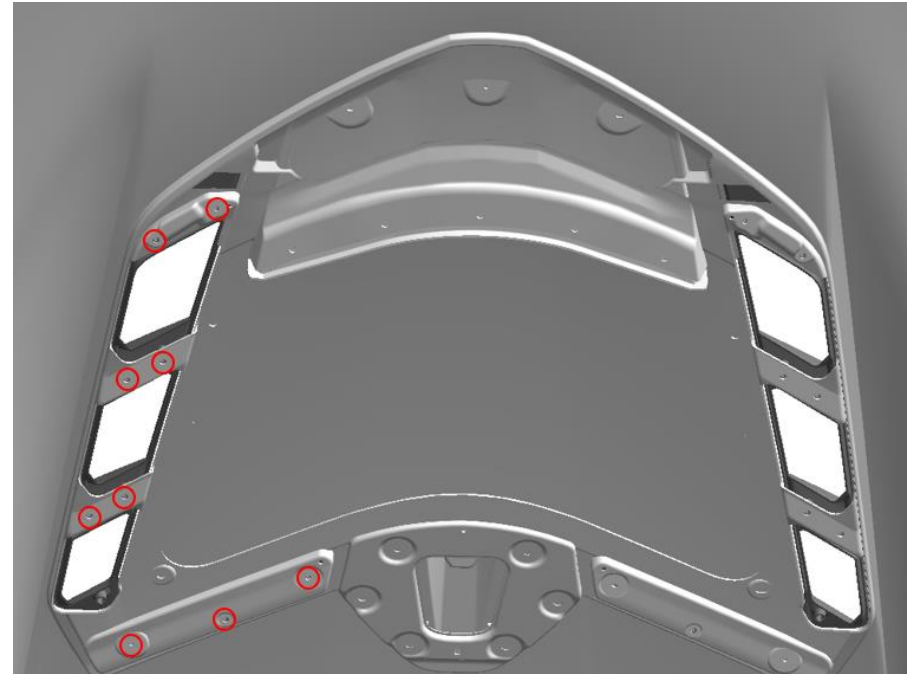

3. Remove the nine Torx fasteners shown above using a T25 Torx bit, and repeat on the other side.
4. Remove the hatch vents and set them aside face up, so the paint is not scratched.



5. Place the (x4) brackets onto the hatch as shown above, making sure the holes are aligned. Use painter's tape to keep them in place. Gently place the hatch vents back into position, ensuring the brackets don't move.

6. Partially open the hatch just enough to gain access to the bolt holes under the brackets. Loosely thread the OEM hatch vent bolts into the bolt holes under the brackets.

7. Close the hatch and install the louver onto the four bracket studs. Loosely thread the large billet aluminum nuts onto the studs by hand, ensuring the alignment is even.

8. Open the hatch and fully reinstall all (x18) hatch vent bolts.

9. Remove the billet nuts and louver. Note the position of the hook & loop fastener strip (Velcro®).

10. Using isopropyl alcohol and a microfiber cloth, clean the area of the window where the hook & loop strip will make contact.

11. Separate the bottom half of the hook & loop strip from the louver, and peel off the release film.

12. Attach the separated hook & loop strip onto the cleaned area of the window and position it so that it will match the strip on the louver.

13. Reinstall the louver onto the studs. Ensure the hook & loop strip on the louver is pressed into the strip on the window. Apply a small amount of blue Loctite® to the (x4) studs, then firmly hand tighten the aluminum nuts onto the studs.

14. After installation is complete, check the rearview camera visibility (if rearview camera is equipped). If the louver is visible, change the zoom and camera position until the louver is just out of frame.

Completed Result



Holley® Performance Products, Inc.
1801 Russellville Road
Bowling Green, KY 42101

Technical Support: 1-866-464-6553
 Phone: 1-270-781-9741
www.holley.com

© 2023 Holley Performance Products, Inc. All rights reserved. Tous Droits Réservés.

199R12500
Date: 4-26-23