



13134 INSTALLATION INSTRUCTIONS



Safety glasses should be worn at all times while installing this product.

YEARS: 2013

MAKE: HYUNDAI

MODEL: SANTA FE SPORT

STYLE: SUV

WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY

WEIGHT CARRYING:

TRAILER WEIGHT: 3500 LBS.
TONGUE WEIGHT: 525 LBS.

WARNING:

WE RECOMMEND THE USE OF 18050 STABILIZING STRAPS FOR ALL NON-TRAILER (WHEEL-LESS) LOADS. PLEASE SEE THE CURT CATALOG OR VISIT US ONLINE AT WWW.CURTMFG.COM FOR FURTHER INFORMATION.

INSTALLATION TIME: 30/60 MIN.

THE INSTALL TIME LISTED IS FOR PROFESSIONAL INSTALLERS. IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

INSTALLATION TIPS:

1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
4. NEED HELP OR HAVE SOME QUESTIONS? CALL TECHNICAL SUPPORT AT 800.798.0813

LEVEL OF DIFFICULTY: EASY


EASY

MODERATE


CHALLENGING




NO DRILLING REQUIRED

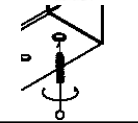

CLEAN EXISTING WELDNUTS



LOWER TIRE FOR EASE OF INSTALLATION



LOWER EXHAUST FOR EASE OF INSTALLATION

VEHICLE PHOTO:




REPRESENTATIVE PHOTO

INSTALLATION REQUIRES:

 RATCHET	 TORQUE WRENCH	 6" SOCKET EXTENSION
 7/16" 3/4" 17mm SOCKET	 WIRE PIPE BRUSH	 SCREW DRIVER
 SAFETY GLASSES		

HITCH ILLUSTRATION:

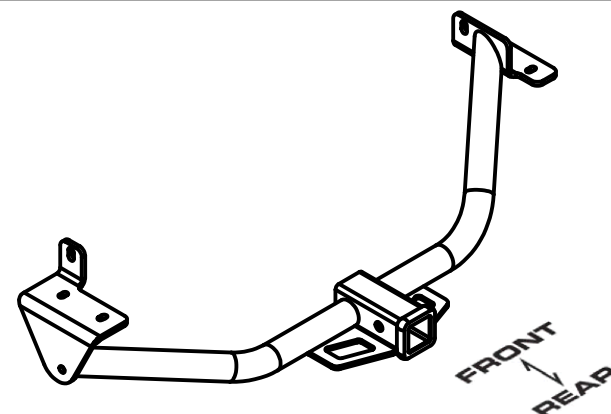

MAKE SURE YOUR HITCH MATCHES

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND


CURT Manufacturing LLC. warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC. may repair or replace the product at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

For more information log onto www.curtmfg.com, & for helpful towing tips log onto www.hitchinfo.com


9/14/2012

INSTALLATION WALKTHROUGH:

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1_2 - 13 x 4 1_2 HEX	HEX BOLT
2	2	1/2"	LOCK WASHER
3	2	HFN 1213	HEX FLANGE NUT
4	4	M10 - 1.5 x 25mm	HEX BOLT
5	4	3/8"	WASHER

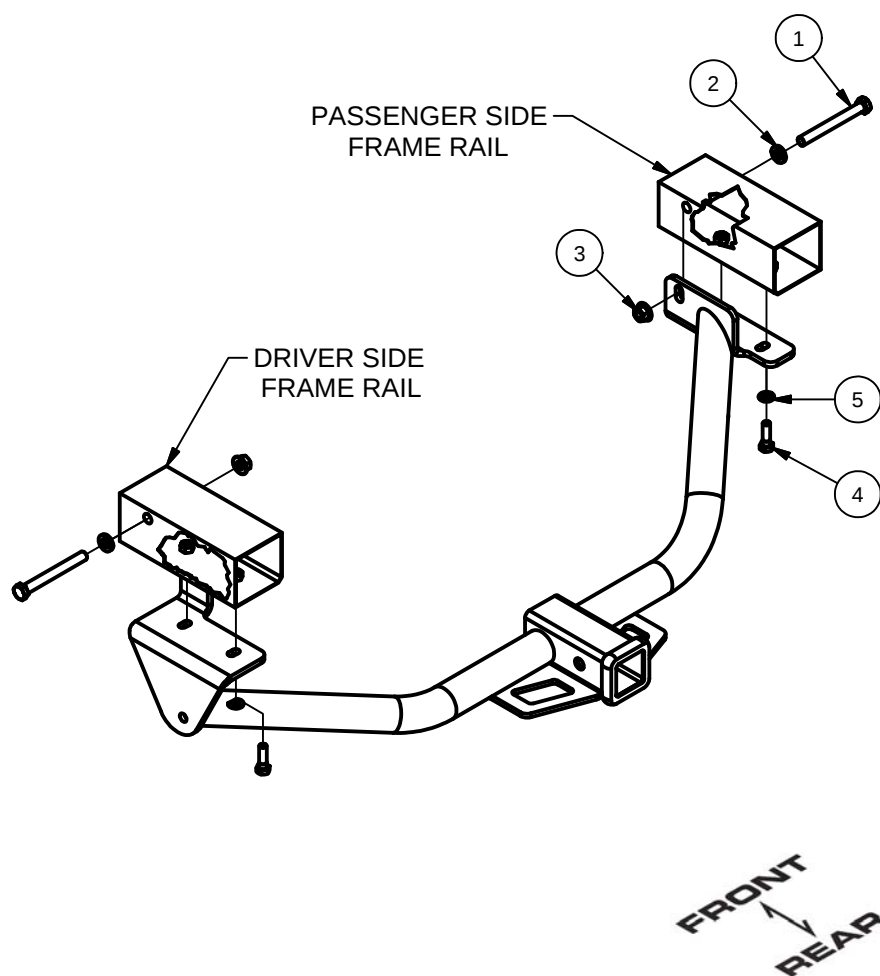

1. Lower exhaust by removing (3) rubber isolators. To ease installation, lower spare tire temporarily.

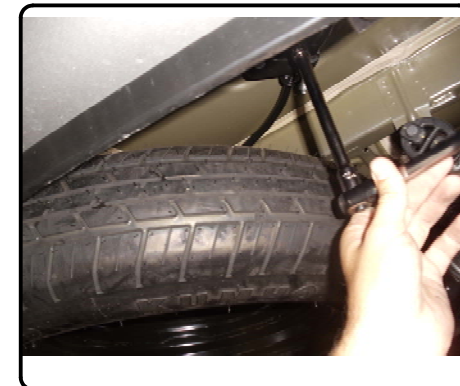

2. Remove the plastic fascia from the passenger side and the driver side of the vehicle by removing (3) fascia screws from the passenger side and (4) from the driver side. Carefully pull down and set aside.



INSTALLATION WALKTHROUGH:


3. Raise hitch into position by lifting passenger side of hitch over exhaust and secure into position with supplied M10 bolts and 3/8" washers, as shown.




4. Install 1/2" bolt through frame rails and the side plates and secure with 1/2" flange nut . Torque 1/2" hardware to 75 lb-ft and M10 hardware to 36 lb-ft.



5. Raise exhaust and spare tire back into position. Reinstall side fascia that was removed in step 2.

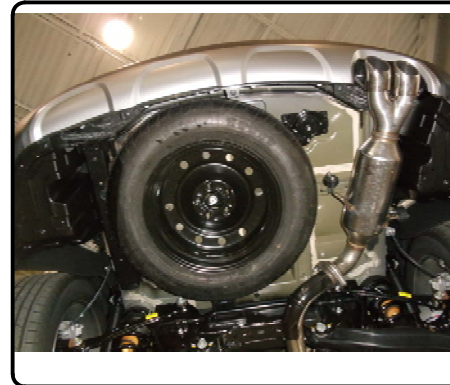

6. Installation complete

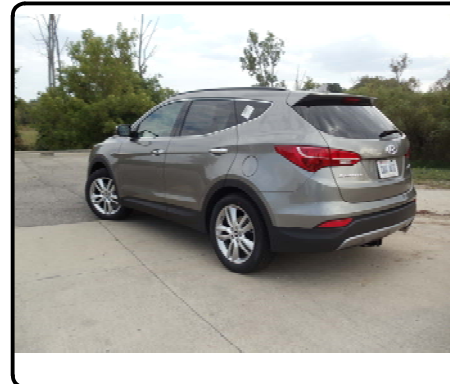

13134**2013 HYUNDAI SANTA FE SPORT****9/18/2012****GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3500 LBS. TRAILER WEIGHT & 525 LBS. TONGUE WEIGHT.*******DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*******WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.****** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY******HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813**

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1_2 - 13 x 4 1_2 HEX	HEX BOLT
2	2	1/2"	LOCK WASHER
3	2	HFN 1213	HEX FLANGE NUT
4	4	M10 - 1.5 x 25mm	HEX BOLT
5	4	3/8"	WASHER



TOOLS REQUIRED	
7/16", 3/4", 17mm SOCKETS	
RATCHET	
TORQUE WRENCH	
6" SOCKET EXTENSION	
WIRE PIPE BRUSH	
SCREW DRIVER	

**RUBBER ISOLATOR
REMOVAL DIAGRAM**

This technique can be used if an Exhaust Hanger Removal Pliers is not available.

Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.

Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.

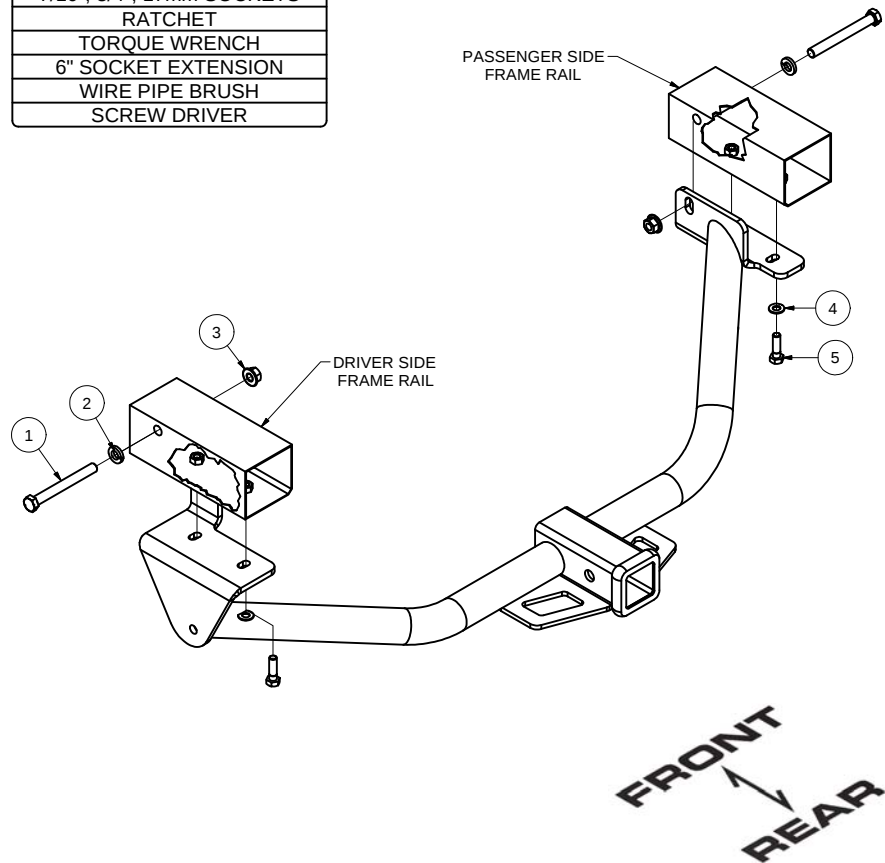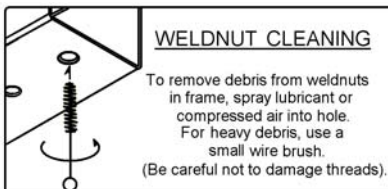**HITCH WEIGHT:** 26 LBS.**INSTALL TIME**

PROFESSIONAL: 30 MINUTES

NOVICE (DIY): 60 MINUTES

INSTALL NOTES:

- LOWER EXHAUST
- LOWER TIRE
- CLEAN EXISTING WELDNUTS
- NO DRILL

INSTALLATION STEPS

1. Lower exhaust by removing (3) rubber isolators. To ease installation, lower spare tire temporarily.
2. Remove the plastic fascia from the passenger side and the driver side frame rails vehicle by removing (3) fascia screws from the passenger side and (4) from the driver side. Carefully pull down and set aside.
3. Raise hitch into position by lifting passenger side of hitch over exhaust and secure into position with supplied M10 bolts and 3/8" washers, as shown.
4. Install 1/2" hardware through the frame rails and the side plates. Torque 1/2" hardware to 75 lb-ft and M10 hardware to 36 lb-ft.
5. Raise exhaust and spare tire back into position. Reinstall side fascia that was removed in step 2.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.