

15605

2001-2007 CHEVROLET SILVERADO 3500 CAB & CHASSIS (CLASSIC w/34" WIDE FRAMES)
2001-2007 GMC SIERRA 3500 CAB & CHASSIS (CLASSIC w/34" WIDE FRAMES)
2007-CURRENT CHEVY SILVERADO 3500 HD CAB & CHASSIS (NEW BODY STYLE w/34" WIDE FRAMES)
2007-CURRENT GMC SIERRA 3500 HD CAB & CHASSIS (NEW BODY STYLE w/34" WIDE FRAMES)
2007-CURRENT DODGE RAM 3500 HD CHASSIS CAB w/34" FRAMES
2008-CURRENT DODGE RAM 4500/5500 HD CHASSIS CAB w/34" FRAMES

9/01/2009


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 18,000 LBS. TRAILER WEIGHT & 1,800 LBS. TONGUE WEIGHT.
GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 18,000 LBS. TRAILER WEIGHT & 1,800 LBS. TONGUE WEIGHT

*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	6	HFN 1213	HEX FLANGE NUT
2	6	CM-SP6	.250 x 1.00 x 3.00" SQUARE HOLE SPACER
3	6	1/2-13 x 1 3/4	CARRIAGE BOLT

TOOLS REQUIRED
RATCHET
TORQUE WRENCH
3/4" SOCKET
DRILL
17/32" DRILL BIT
CHISEL
GRINDER
CLAMPS
CENTER PUNCH

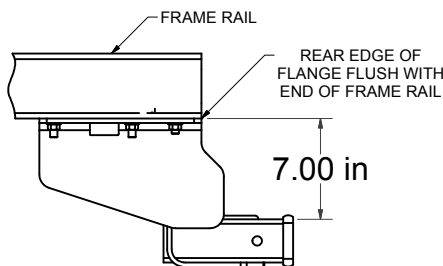

HITCH SHOWN IN PROPER POSITION

HITCH WEIGHT: 52 LBS.

INSTALL TIME


PROFESSIONAL: 30 MINUTES

NOVICE (DIY): 65 MINUTES

INSTALL NOTES:

- DRILLING REQUIRED

FRONT
↓
REAR

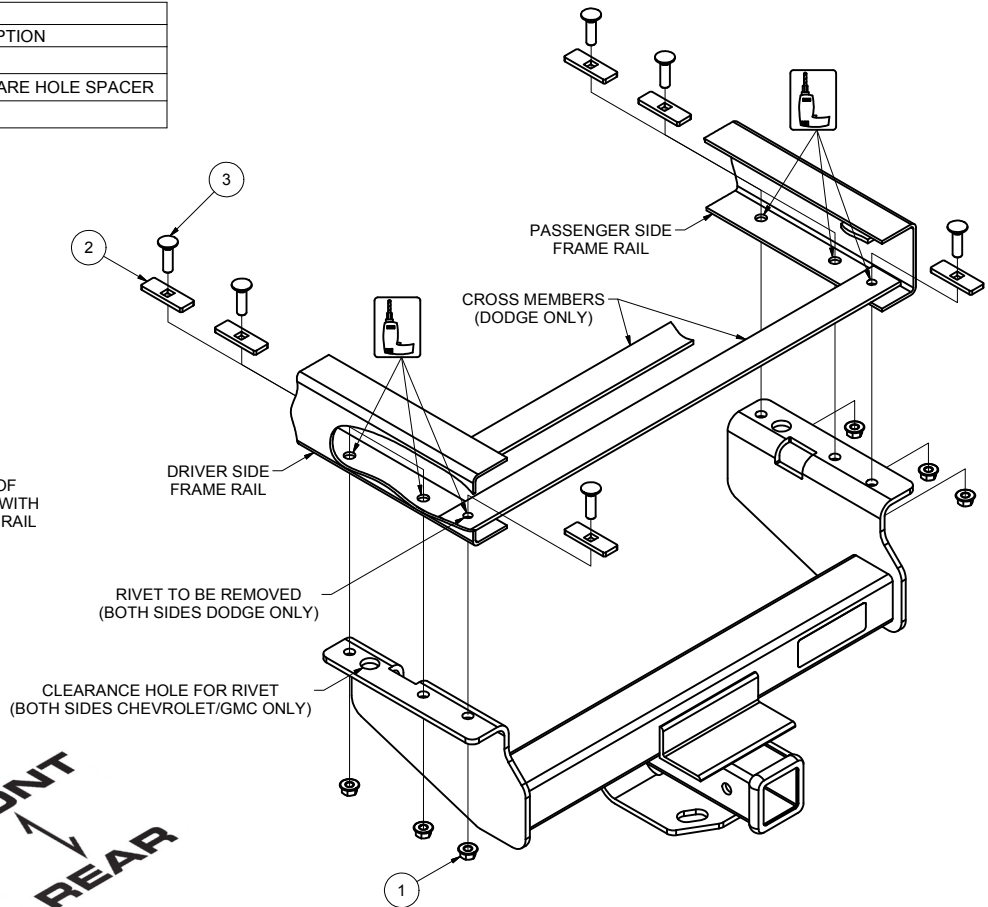

INSTALLATION STEPS

DODGE CHASSIS CAB

1. Remove rearmost rivet on bottom of frame rail, each side. (Rivet location will be enlarged in Step 3.)
2. Raise hitch into position, place rear edges of horizontal flanges flush with end of frame rails and clamp to frame rail.
3. Using hitch as a template, drill 3 holes on each side as shown.
4. Install 1/2" carriage bolts and SP6 spacers through holes drilled in frame rails and out hitch side plates. Secure with 1/2" flange nuts.
5. Torque all 1/2" hardware to 75 ft-lbs.

CHEVROLET/GMC CAB & CHASSIS

1. Raise hitch into position by aligning 1" diameter hole with the rivet on the bottom of the frame rail, on each side and clamp in place.
2. Using hitch as a template, drill (3) holes on each side as shown.
3. Install 1/2" carriage bolts and SP6 spacers through holes drilled in frame rails and out hitch side plates. Secure with 1/2" flange nuts.
4. Torque all 1/2" hardware to 75 ft-lbs.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.