

55503

KIA SEDONA
HYUNDAI ENTOURAGE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.




¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

5/12/09

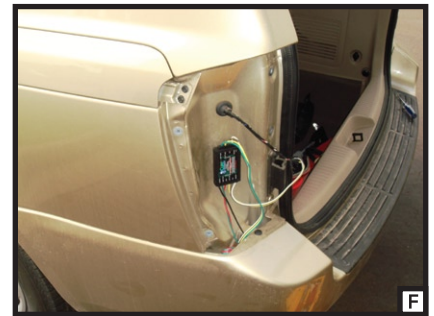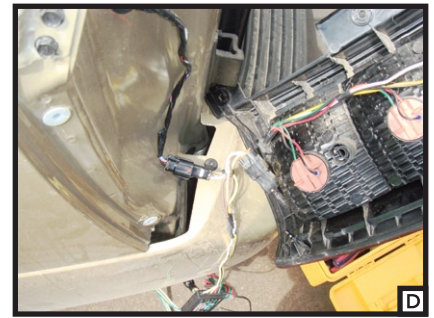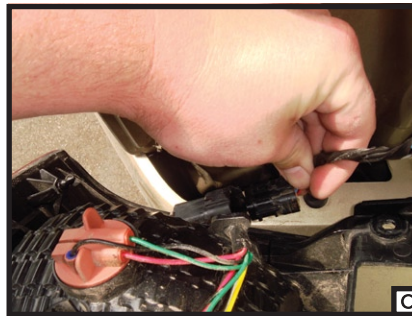

English

1. Open the rear hatch remove both taillight assemblies by removing three phillips head screws holding each in place. **[A]** Pull out on the taillight assembly being sure not to damage the alignment tabs. **[B]** Behind the taillight assemblies locate the vehicles taillight wiring harness. The harness will have connectors similar to those on the T-connector harness. Separate the connectors being sure not to damage the locking tabs. **[C]**
2. On the drivers side insert the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place. **[D]**
3. Route the T-connector end with the green wire and the 4-flat wire down through opening under the taillight assembly. **[E]** Under the vehicle route the green wire along the backside of the bumper and up through the opening under the passenger side taillight. Repeat step 2 on the passenger side using the green wire.
4. Adhere the black converter box to the frame of the car using the double-sided tape provided. **[F]** Secure any loose parts of the T-connector with the cable ties provided.
5. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.
7. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55503