

# 56075

FORD ESCAPE  
MAZDA TRIBUTE

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

3/6/09

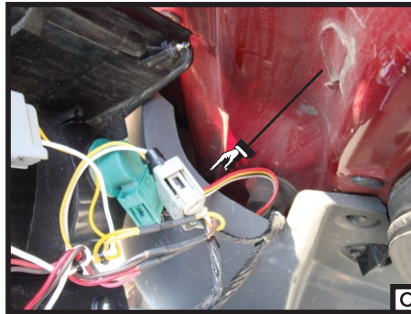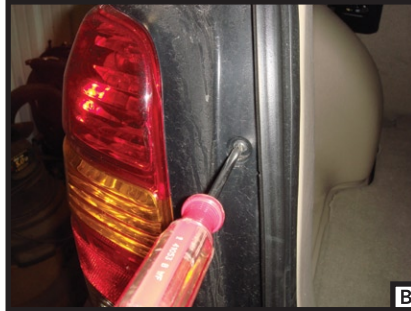

## English

1. Open the vehicles tailgate and remove each of the taillight housing assemblies by removing the screws on each housing. **[A] [B]**

2. Starting on the drivers side of the vehicle, route the T-connectors black box and the connectors with the yellow and red wires up through access hole at the rear corner of the vehicle and out through the taillight opening. **[C]**

3. Locate the wiring harness connectors attached to the rear of the taillight housings. They will be similar in design to those on the T-connector harness. Disconnect the top black connector from the taillight housing by pressing on the locking tabs and carefully pulling the connector away from the housing. Insert the the T-connector ends containing the red wires between these seperated ends, ensuring that the locking tabs engage. **[D]**

4. Disconnect the center grey connector from the taillight assembly and insert the T-connector end containing the yellow wire between these seperated ends ensuring the locking tabs engage.

5. Locate a clean accessible mounting location on the vehicle near the wiring harness ends within reach of the white wire and grounding eyelet and drill a 3/32" hole.

6. Mount the white wire using the ground screw and eyelet provided.

## ***English***

7. Route the remainder of the T-connector assembly to the passenger side of the vehicle and up through the right side taillight opening.

8. Disconnect the center grey connector from the taillight assembly and insert the T-connector end containing the green wire between these separated ends ensuring that the locking tabs engage. 

9. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.

10. Secure all wires using the cable ties provided. The T-connectors black box should be secured under the vehicle along the driver's side frame rail.

11. Re-install both taillight assemblies using the fasteners removed in step 2.

### **WARNING!**

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.