

56097

HONDA PILOT

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

6/15/2010

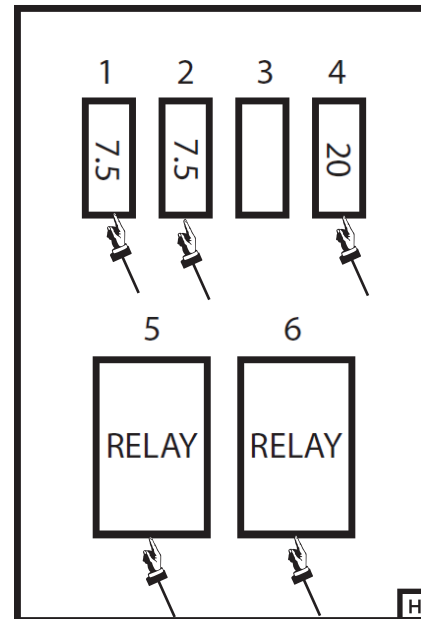

English

1. Open the rear hatch and fold the rear seats down. On the driver side open the rear storage compartment. [A] Inside the rear storage compartment remove the access panel. [A] Behind the panel locate the vehicles OEM tow harness connector. [B] The connector will mate with the one on the converter. Insert the connector into the vehicles connector. Make sure the connectors are fully inserted with locking tabs in place.

WARNING!
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage.

2. Locate a clean metal surface and drill a 3/32" hole and secure white wire using eyelet and screw provided.

3. Adhere the black converter box to the frame of the car using the double-sided tape provided. [C] Secure any loose parts of the T-connector with the cable ties provided.

4. Remove the cover labeled AUX FUSE forward of the storage compartment. [D] Remove the black cover from the fuse panel. [E] Insert 7.5 amp fuse into position 1 & 2. Insert 20 amp fuse into position 4 and insert relay into positions 5 & 6 as shown. [H]



5. Behind the rear bumper on the drivers side locate the vehicles trailer wiring harness connector. The connector will mate with the one on the wiring harness. Remove the connector from the crossmember using a pry tool. Remove dark blue fastener from housing by sliding out. Remove the protective cover being sure not to damage the locking tabs. [G] Insert the connector into the vehicle's connector. Make sure the connectors are fully inserted with locking tabs in place.

6. Mount the 7-way connector and bracket using the mounting bracket install sheet.



7. Route the 7-way connector to the center of the vehicle and insert harness connector into 7-way making sure the connectors are fully inserted with locking tabs in place. Secure any loose wires with the cable ties provided.

8. On the driver side under the hood locate the fuse box and remove black plastic cover. [I] Insert 20 amp SLO-BLO fuse and (2) 20 amp fuses into position as shown. [J]

9. Re-assemble anything removed during install.

BRACKET AND 7-WAY INSTALLATION

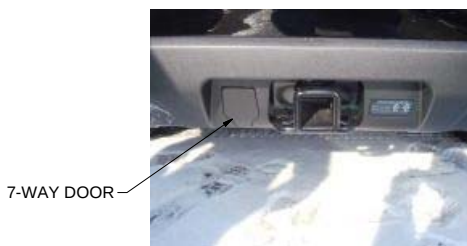
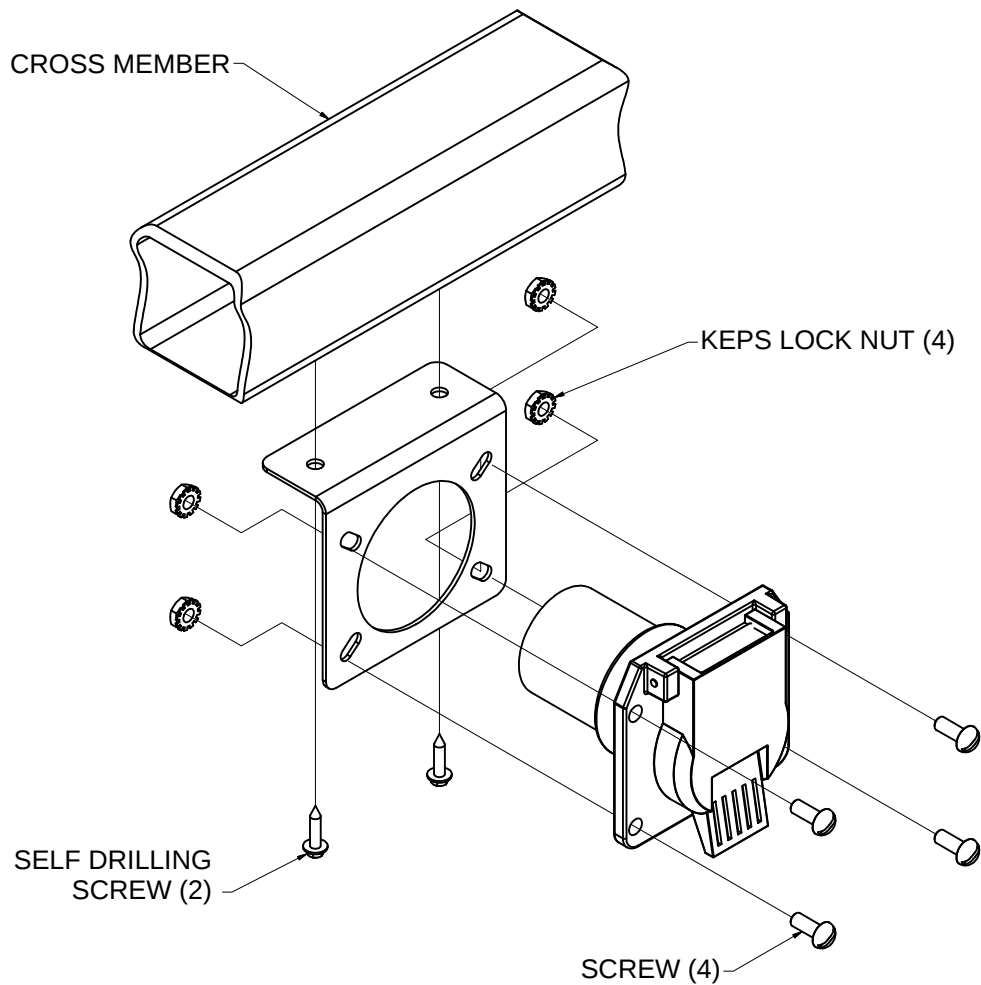


FIG. 1



FIG. 2

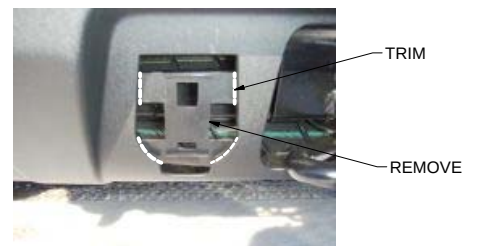


FIG. 3

Installation Instructions:

1. Locate the 7-Way door left of the receiver tube in the rear bumper cover and remove as shown in Fig. 1 and 2. Return 7-Way door to vehicle owner.
2. Trim the door support as shown in Fig. 3.
2. Remove the (2) push fasteners securing the lower fascia to the body.
3. Position the mount bracket in the 7-Way door opening and secure the mount bracket using the (2) self drilling screws provided as shown.
4. Install the 7-Way housing using the hardware as shown above.
5. Reinstall the push fasteners at the bottom of the fascia.