




Instruction sheet part # 120-IS


UniversalStep™ (part# 120B, 120C, & 120PS) installation instructions

Packing List			
Qty	Description	Qty	Description
4	5/16"x1" sheet metal bolts	4	3/8"x1 1/4" button head bolts
2	5/16" hex nuts	1	120R step bracket
2	5/16"x1" hex bolts	1	120L step bracket
2	5/16" lock washers	1	10" universal step pad
6	5/16" flat washers	1	12" tube


The Go Rhino! UniversalStep™

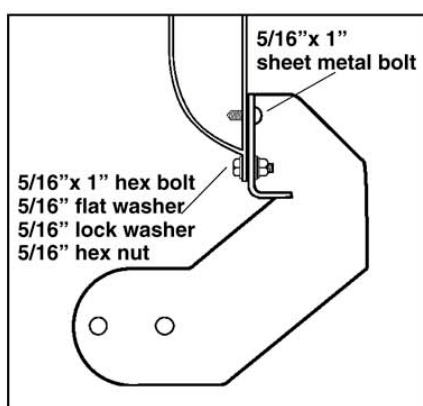

Late model Dodge/early model Chevy
installation diagram

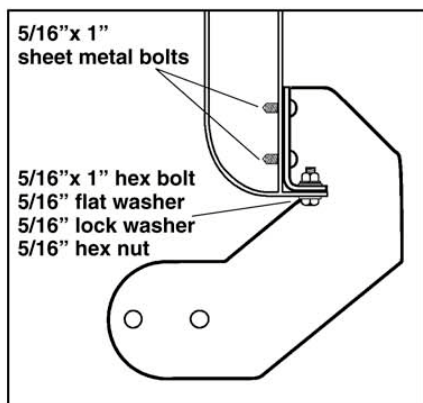

Late model Chevy and Ford
installation diagram

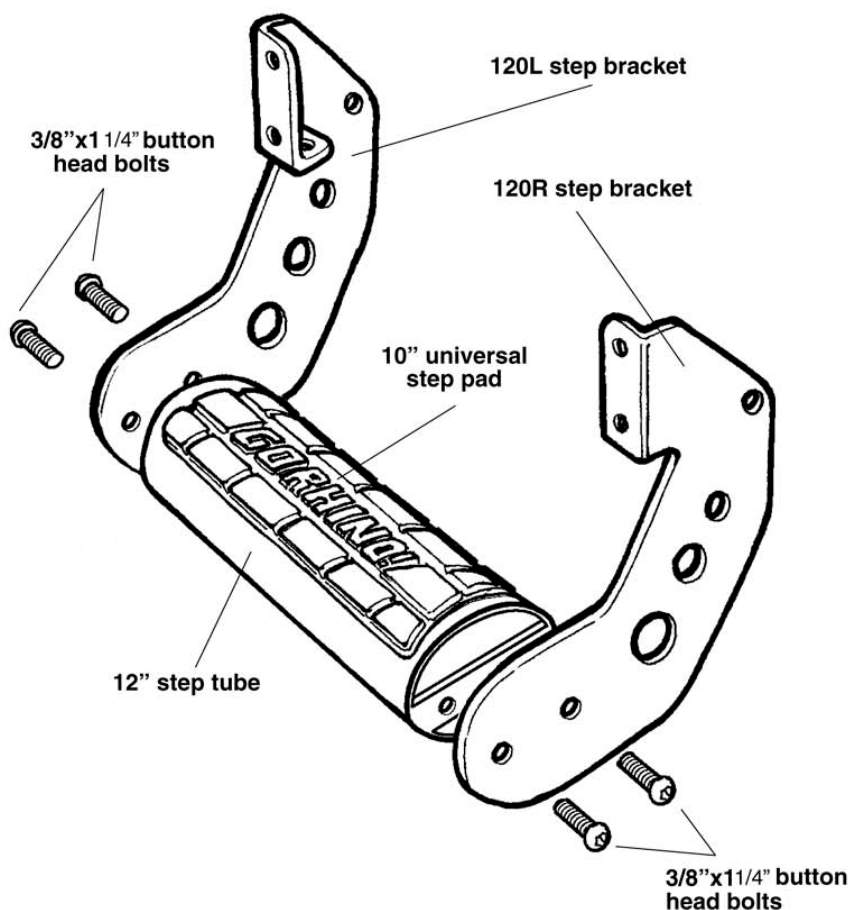

Go Rhino! Products
2097 Batavia Street, Orange, CA 92865, USA
888-427-4466 • Fax 714-279-8305
www.gorhino.com