




Instruction sheet part # 220-IS


## SpringStep™ (part# 220B, 220C, & 220PS) installation instructions

| Packing List |                              |
|--------------|------------------------------|
| Qty          | Description                  |
| 6            | 1/4"x3/4" hex bolts          |
| 6            | 1/4" flat washers            |
| 6            | 1/4" lock washers            |
| 6            | 1/4" hex nuts                |
| 4            | 5/16"x1" sheet metal bolts   |
| 2            | 5/16" hex nuts               |
| 2            | 5/16"x1" hex bolts           |
| 4            | 5/16" flat washers           |
| 2            | 5/16" lock washers           |
| 4            | 3/8"x11/4" button head bolts |
| 2            | 220 step brackets            |
| 1            | 2201 bracket                 |
| 1            | 2202 bracket                 |
| 1            | 12" step tube                |
| 1            | 10" step pad                 |


### The Go Rhino! SpringStep™

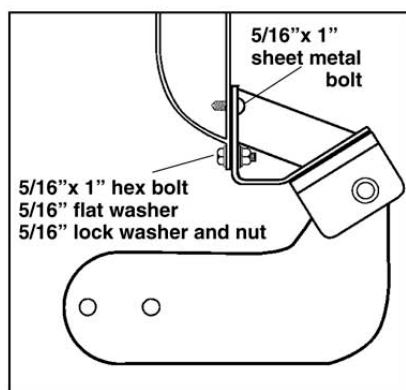

Late model Dodge/early model Chevy  
installation diagram

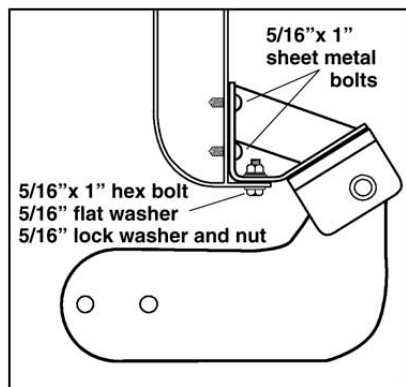

Late model Chevy and Ford  
installation diagram

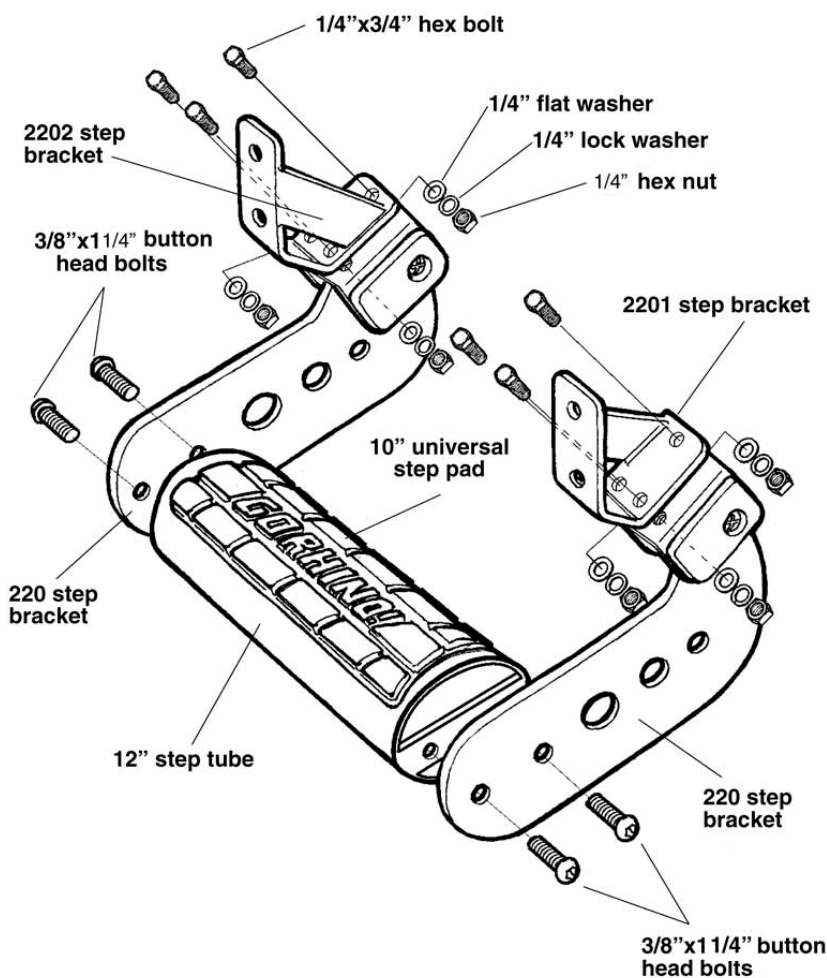

Go Rhino! Products  
2097 Batavia Street, Orange, CA 92865, USA  
888-427-4466 • Fax 714-279-8305  
[www.gorhino.com](http://www.gorhino.com)