



Parts List				
Item	Qty.	Code	Description	Max. Torque
1	1 Pza.	532890EA	Center Guard	
2	1 Jgo.	502890BA	Brush Guard (Not included B/PS)	
3		BRK-53289	Brackets	
4	1 Jgo.	532890DB	Lower bracket	
5	1 Jgo.	532894EA	Upper bracket	
6	2 Pza.	532891BA	Auxiliary bracket	
7	2 Pza.	532892BA	License plate holder	
8		KTE-53289	Hardware kit	55lb/ft
9	10 Pza.		1/2x1 1/4" black Hex head bolt	
10	12 Pza.		1/2" black flat washer	
11	10 Pza.		1/2" black lock nut	32lb/ft
12	2 Pza.		1/2x1 1/2" cinc plate hex head bolt	32lb/ft
13	4 Pza.		1/2x4 1/2" cinc plate hex head bolt	
14	12 Pza.		1/2" cinc plate flat washer	
15	6 Pza.		1/2" cinc plate lock washer	
16	6 Pza.		1/2" cinc plate nut	
17	4 Pza.		1/4x1" cinc plate hex head bolt	
18	8 Pza.		1/4" cinc plate flat washer	18lb/ft
19	4 Pza.		1/4" cinc plate lock washer	
20	4 Pza.		1/4" cinc plate nut	

Required Tools (Not included)	
Qty.	Description
1	Ratchet
1	3/4" Socket
1	9/16" Socket
1	3/4" Wrench
1	9/16" Wrench
1	1/2" Socket

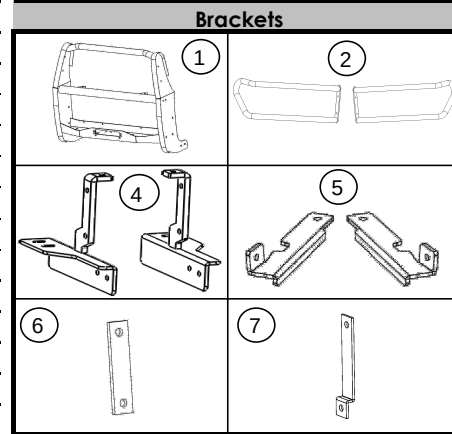

Instructions

1. Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
2. To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. We recommend to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
3. The approximate installation time is 35 min.
4. Identify the mounting brackets at image.

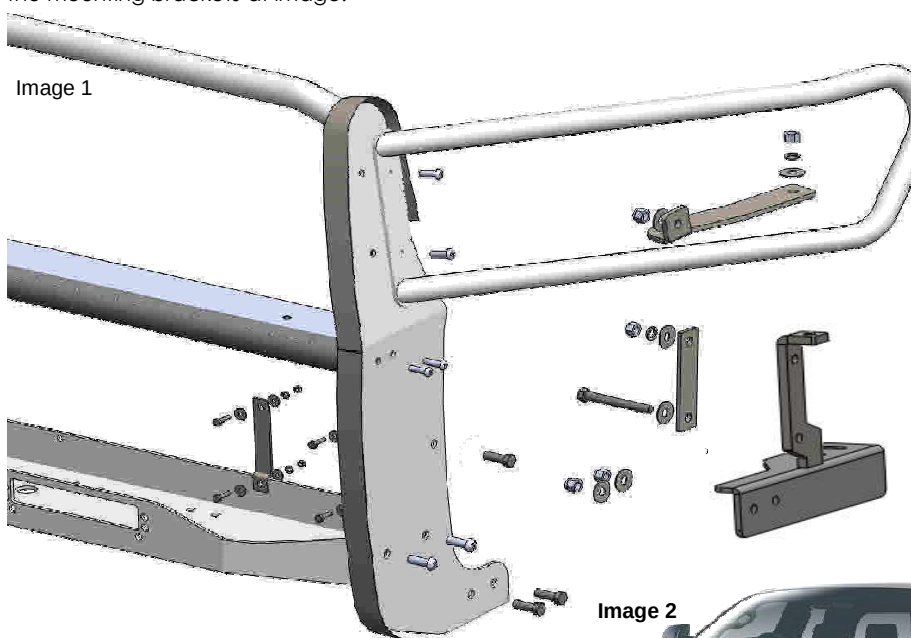


5. To install the Pull Pro, follow the indications and see the images.
6. Identify the fixation areas in the vehicle at image 2.

Toyota Tundra 07-13


7. Remove the tow hooks, keep the components to reuse later.

Image 3

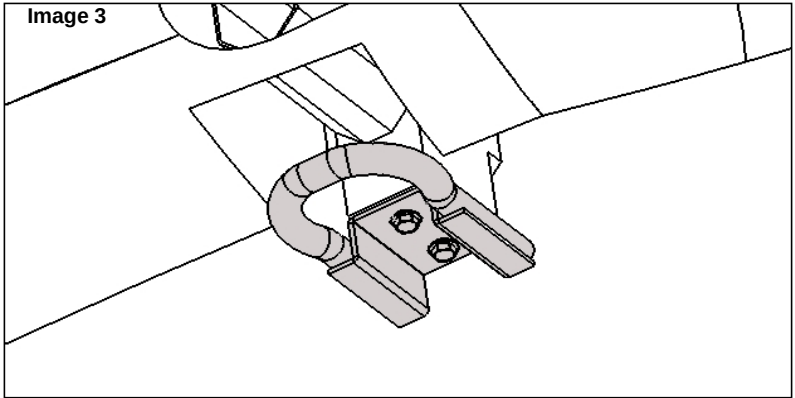


8- Beginning with the driver side, place lower bracket where tow hooks was removed. Use the tow hooks bolts to secure it. Repeat for the opposite side.

Image 4

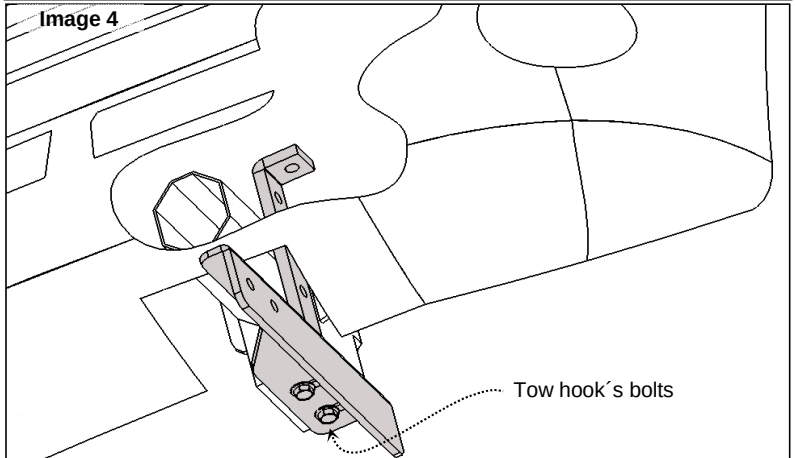

9- Auxiliary bracket complement lower bracket, see image 5 to install. Use (2) 1/2 x 4 1/2" hex head bolt, (4) 1/2" flat washers, (2) 1/2" lock washers and (2) 1/2" hex nuts. Repeat for the opposite side.

Image 5

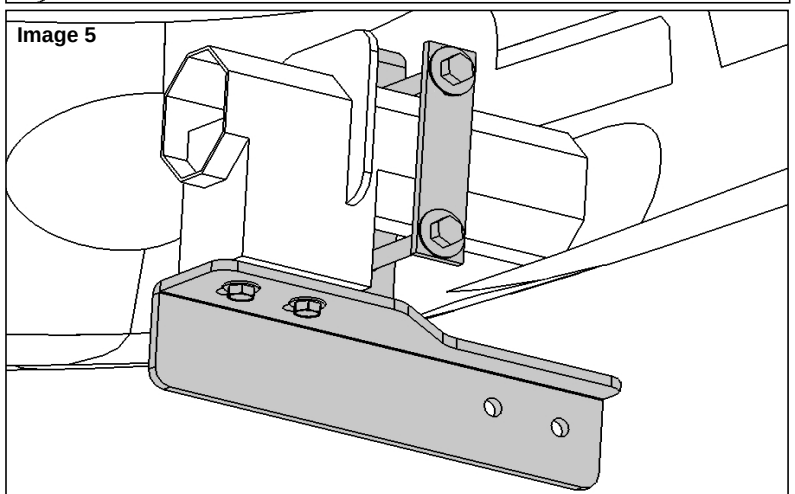

10- **ATTENTION!!** Installation of top brackets varies according model. For models 2007 to 2009 see image 6 and for models 2010 see image 6.1. Use (1) 1/2 x 1 1/2" hex head bolts, (2) 1/2" flat washers, (1) 1/2" lock washers and (1) 1/2" hex nut.

Image 6



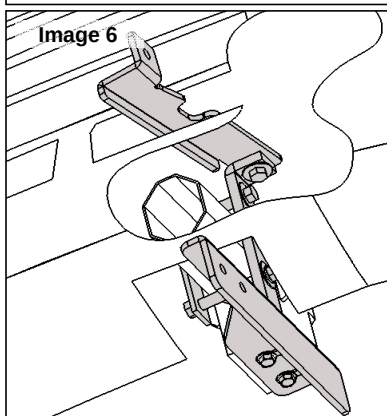


Image 6.1

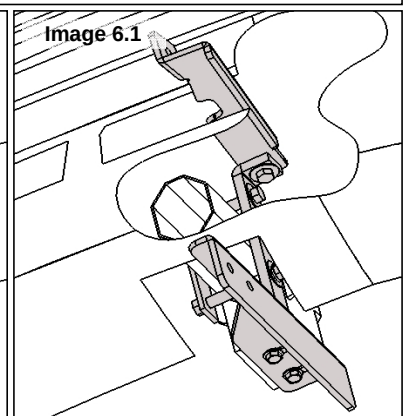


11. ATTENTION!! Image 7 for models 2007 to 2009 and image 7.1 for models 2010. Secure lower brackets to Grille Guard with (2) 1/2 x 1 1/4" hex head bolts, (2) 1/2" flat washers and (2) 1/2" lock nuts. Attach top bracket with (1) 1/2 x 1 1/4" hex head bolts, (2) 1/2" flat washers, (1) 1/2" lock nut. All hardware is black plated.

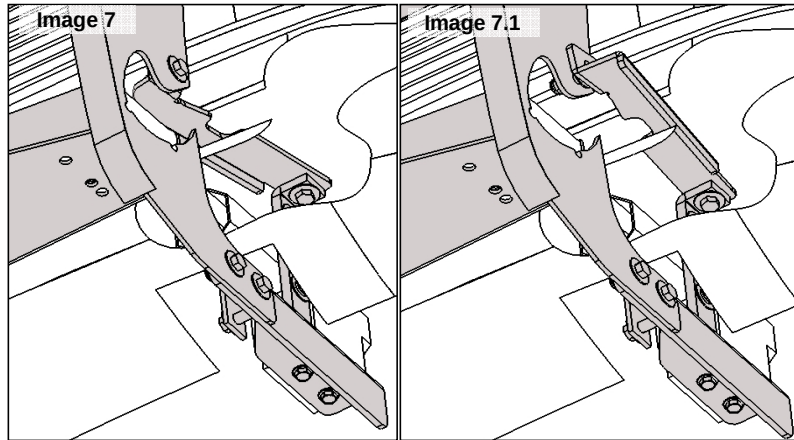


12- Refers image 8 to install brushguards.
All brushguard's bolts come factory preinstalled.

Image 8

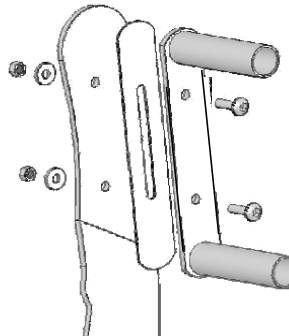

12- To install license plate, place the license plate holders at rear edge of the winch tray, use (1) 1/4x1" hex head bolt, (2) 1/4" flat washers, (1) 1/4" lock washers and (1) 1/4" hex nut, for each bracket. Once holders are installed secure license plate with (2) 1/4 x 1" hex head bolt, (4) 1/4" flat washers, (2) 1/4" lock washers and (2) 1/2" hex nuts. Image 9.

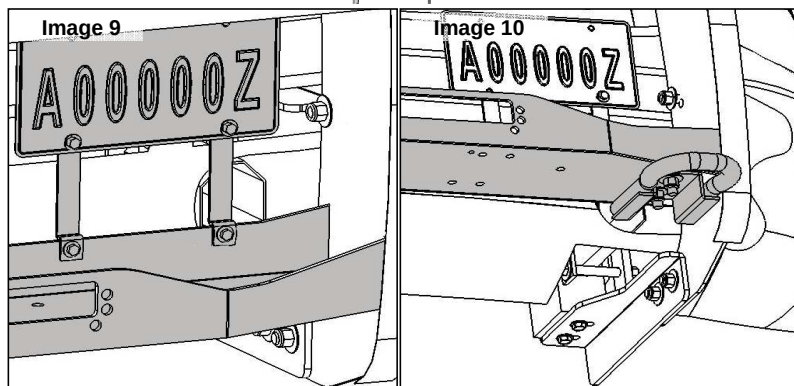

13- To reinstall tow hooks place them underneath the winch tray, using (2) 1/2 x 1 1/4" hex head bolts, (2) 1/2" flat washers and (2) 1/2" lock nuts, for each tow hook. Use black plated hardware. Image 10.



16- Fill out the warranty card and place it inside your vehicle's glove box.