

GO RHINO! PRODUCTS 3000 SERIES INSTALLATION INSTRUCTIONS

03-07 (classic) CHEVROLET SILVERADO 1500 P/U 2/4WD PART NO. 3152MB, 3152MC, 7152MPS **REV.A 12/07**

<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
2	1/4" X 3/4" BUTTON HEAD BOLTS	1	1100AD DRIVER UPPER BRACKET
6	3/8" X 1" HEX BOLTS	1	1100AP PASSENGER UPPER BRACKET
2	1" X 1 1/4" 11GA TUBE SPACERS	1	ST3003 STEP TUBE
2	12MM – 1.75 X 70MM HEX BOLTS	1	CP3157 CENTER PLATE
4	5/16" X 1" BUTTON HEAD BOLTS	1	1024CD DRIVER LOWER BRACKET
4	5/16" LOCK NUTS	1	1024CP PASSENGER LOWER BRACKET
14	3/8" X 1" BUTTON HEAD BOLTS	1	3152P PASSENGER SIDE PLATE
2	3/8" X 1 1/4" HEX BOLTS	1	3152D DRIVER SIDE PLATE
18	3/8" LOCK WASHERS	1	3158WP PASSENGER BRUSH GUARD
16	3/8" HEX NUTS	1	3158WD DRIVER BRUSH GUARD
6	1/2" LOCK WASHERS	1	C8P PASSENGER HEAD LIGHT PROTECTOR
4	1/2" HEX NUTS	1	C8D DRIVER HEAD LIGHT PROTECTOR
4	1/2" X 1 1/2" HEX BOLTS	1	TT3157 TOP TUBE
6	1/2" FLAT WASHERS		
2	3/8" FLAT WASHERS		

NOTE: READ THE ASSEMBLY AND INSTALLATION INSTRUCTIONS COMPLETELY. MODELS W/O TOW HOOKS MAY REQUIRE NOTCHING THE LOWER BUMPER FASCIA.

ASSEMBLY INSTRUCTIONS

STEP 1 BEGIN THE ASSEMBLY BY LAYING THE COMPONENTS OUT ON A PROTECTIVE SURFACE.

STEP 2 POSITION THE STEP TUBE, CENTER PLATE AND TOP TUBE BETWEEN THE GRILLE GUARD SIDE PLATES.

STEP 3 LOOSELY ATTACH THE STEP TUBE TO THE SIDE PLATES USING THE 3/8" X 1" BUTTON HEAD BOLTS. THE CENTER PLATE USING THE 3/8" X 1" BUTTON HEAD BOLTS, WASHERS, AND NUTS, AND THE TOP TUBE USING THE 3/8" X 1 1/4" HEX BOLTS, AND LOCK WASHERS.


STEP 4 ALIGN THE GRILLE GUARD ASSEMBLY, AND TIGHTEN ALL NUTS AND BOLTS.

STEP 5 ATTACH THE BRUSH GUARDS TO THE GRILLE GUARD SIDE PLATES USING THE 3/8" X 1" BUTTON HEAD BOLTS, LOCK WASHERS, AND NUTS.


STEP 6 ATTACH THE HEAD LIGHT PROTECTORS TO THE BRUSH GUARDS USING THE 1/4" X 3/4" BUTTON HEAD BOLTS, AND TO THE SIDE PLATES USING THE 5/16" X 1" BUTTON HEAD BOLTS, AND LOCK NUTS.

STEP 7 ALIGN THE GRILLE AND BRUSH GUARD ASSEMBLY,


INSTALLATION INSTRUCTIONS

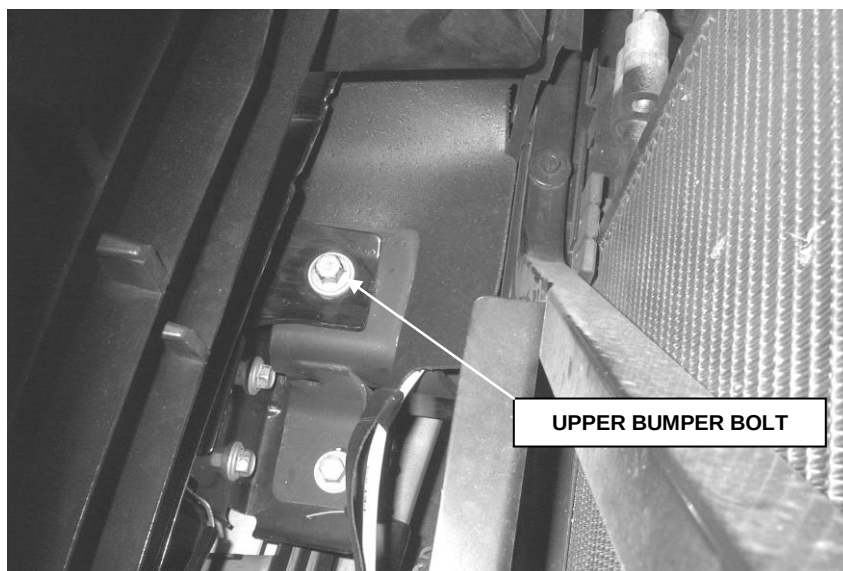


STEP 1 BEGINNING WITH THE PASSENGER SIDE, LOCATE AND REMOVE THE UPPER BUMPER BOLT. THE BOLT IS LOCATED BEHIND THE GRILLE ON THE TOP OF THE BUMPER. THE BOLT IS ACCESSIBLE BY REMOVING THE RIVETS AND PLASTIC TRIM PANEL ON TOP OF THE GRILLE, AND REACHING DOWN THROUGH THE OPENING.

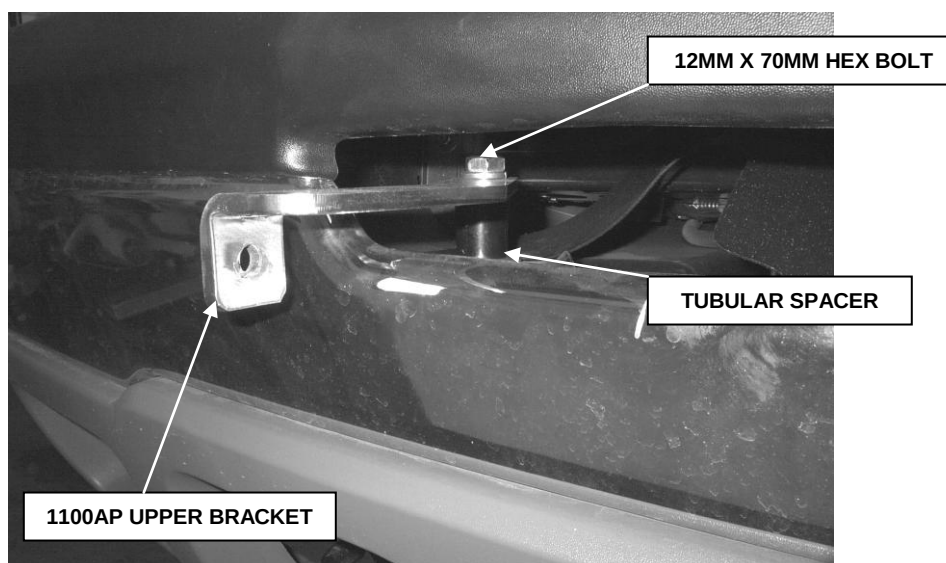

STEP 2 POSITION 1100AP UPPER BRACKET THROUGH THE OPENING IN THE BUMPER. LOOSELY ATTACH THE BRACKET TO THE BUMPER USING THE 12MM X 70MM BOLT AND SPACER AND WASHERS.

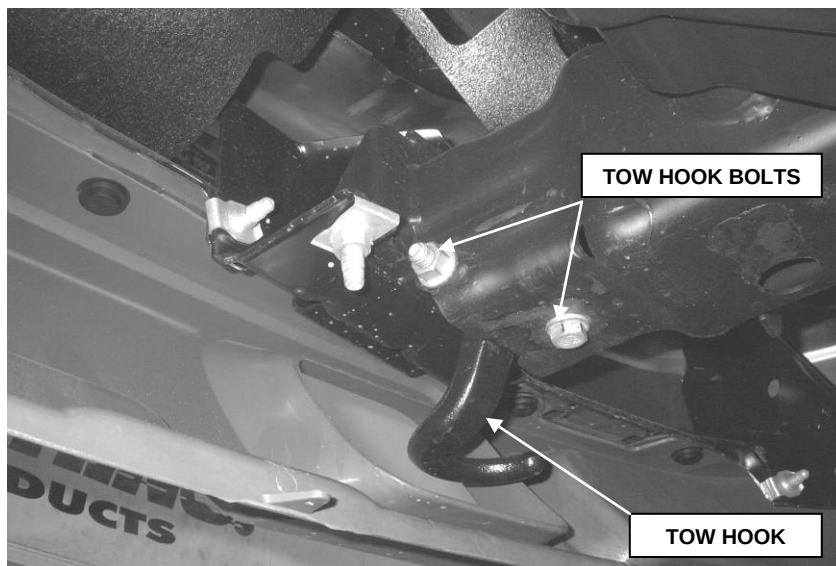


STEP 3 LOCATE THE PASSENGER SIDE TOW HOOK MOUNTING BOLTS. REMOVE THE BOLT FROM THE BOTTOM AND THE HEX NUT FROM THE UPPER BOLT THAT PASSES THROUGH THE SIDES OF THE FRAME.

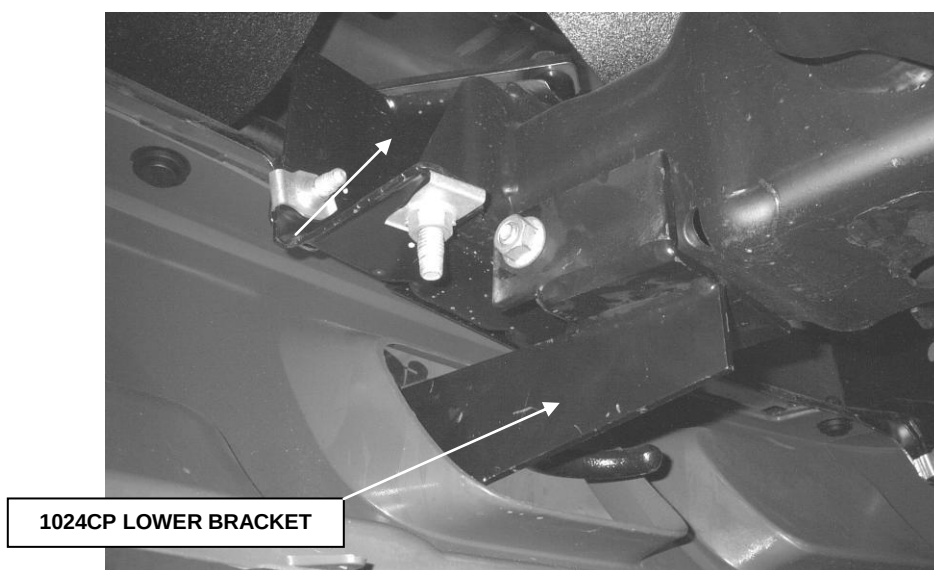


STEP 4 POSITION 1024CP LOWER BRACKET OVER THE SHANK OF THE UPPER BOLT, AND ATTACH IT TO THE BOTTOM AND SIDE OF THE FRAME USING THE FACTORY LOWER BOLT AND NUT.

STEP 5 REPEAT THE ABOVE STEPS FOR THE DRIVER SIDE BRACKETS.

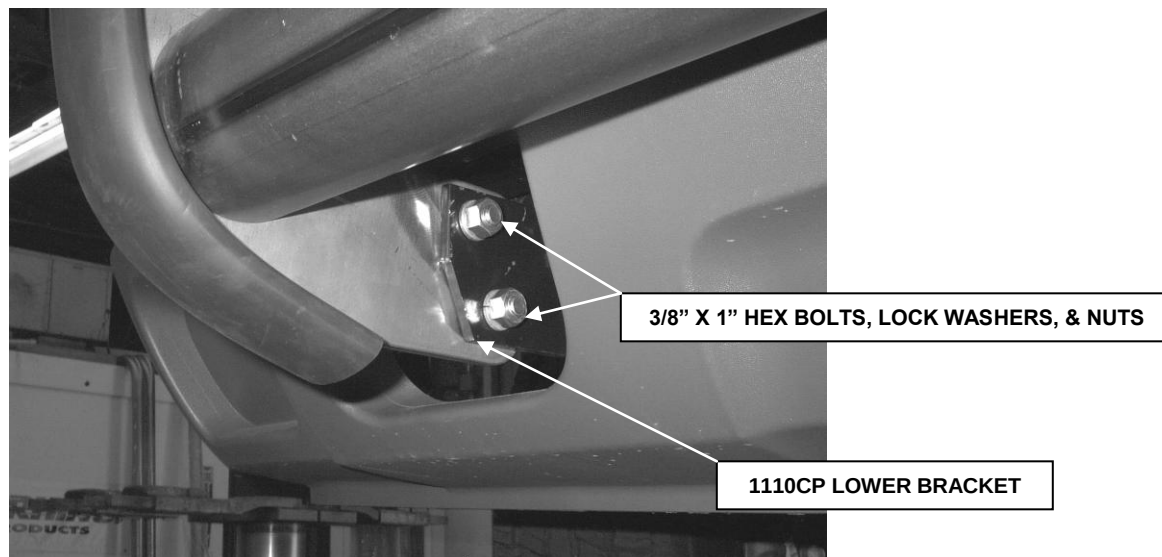

STEP 6 ATTACH THE GRILLE GUARD ASSEMBLY TO THE FRAME BRACKETS, AND UPPER BRACKETS USING THE 3/8" X 1" BOLTS, LOCK WASHERS, AND NUTS. ALIGN THE GRILLE GUARD ASSEMBLY WITH THE FRONT OF THE VEHICLE AND TIGHTEN ALL NUTS AND BOLTS.

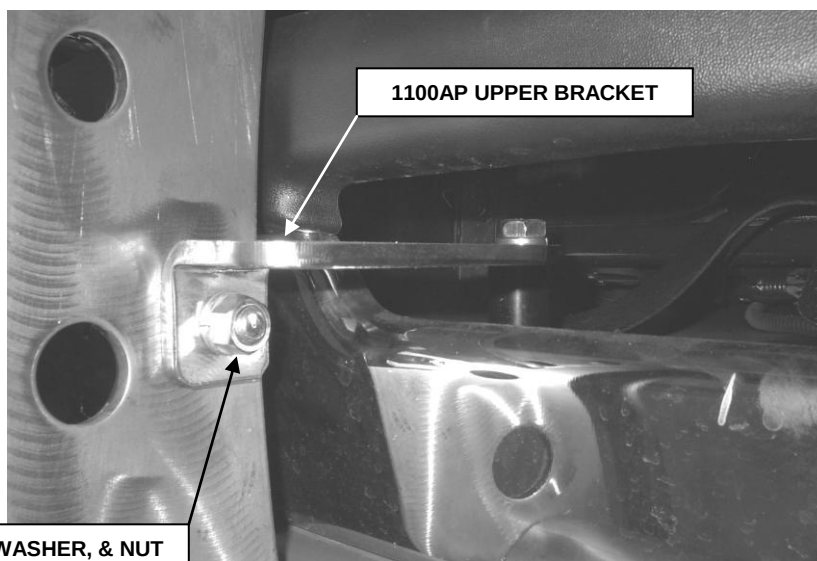

STEP 7 RE-ATTACH THE PLASTIC TRIM PANEL. IF YOUR STATE REQUIRES A FRONT LICENSE PLATE, ATTACH THE LICENSE PLATE TO THE BUMPER USING THE LOWER SET OF HOLES IN THE LICENSE PLATE.