

GO RHINO! PRODUCTS 3000 SERIES INSTALLATION INSTRUCTIONS **03-07 (classic) CHEVROLET SILVERADO 2500HD, 3500 P/U 2/4WD PART NO. 3154B - 3154C** **REV.A 07/09**


<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
1	P200 PLUG KIT	2	12MM HEX NUTS
2	1/4" X 3/4" HEX BOLTS	2	12MM –1.75 X 70MM HEX BOLTS
2	1/4" FLAT WASHERS	1	1100LP LICENSE PLATE BRACKET
2	1/4" HEX NUTS	2	1" X 1 1/4" 11GA TUBULAR SPACERS
6	3/8" X 1" HEX BOLTS	1	1100AD DRIVER SIDE UPPER BRACKET
4	3/8" X 1 1/4" HEX BOLTS	1	1100AP PASSENGER SIDE UPPER BRACKET
10	3/8" LOCK WASHERS	1	1110CD DRIVER SIDE FRAME BRACKET
10	3/8" HEX NUTS	1	1110CP PASSENGER SIDE FRAME BRACKET
4	1/2" FLAT WASHERS	2	1/2" LOCK WASHERS
4	3/8" X 1" BUTTON HEAD BOLTS	2	1/2" HOLE - 1/4" THICK X 1 1/2" OD WASHERS
2	12MM – 1.75 X 40MM HEX BOLTS		

ASSEMBLY INSTRUCTIONS

- STEP 1.** BEGIN THE ASSEMBLY BY LOOSELY ATTACHING THE BOTTOM STEP TUBE TO THE GRILLE GUARD SIDE PLATES USING THE 3/8" X 1" BUTTON HEAD BOLTS.
- STEP 2.** INSTALL THE TUBE CONNECTORS FROM THE P200 PLUG KIT INTO THE TOP TUBE.
- STEP 3.** POSITION THE CENTER PLATE BETWEEN THE SIDE PLATES, AND ATTACH THE CENTER PLATE TO THE SIDE PLATES USING THE 3/8" X 1 1/4" HEX BOLTS, LOCK WASHERS, AND HEX NUTS.
- STEP 4.** ALIGN THE GRILLE ASSEMBLY AND TIGHTEN ALL NUTS AND BOLTS.

INSTALLATION INSTRUCTIONS

NOTE: SOME MODELS MAY REQUIRE NOTCHING THE LOWER BUMPER FASCIA.

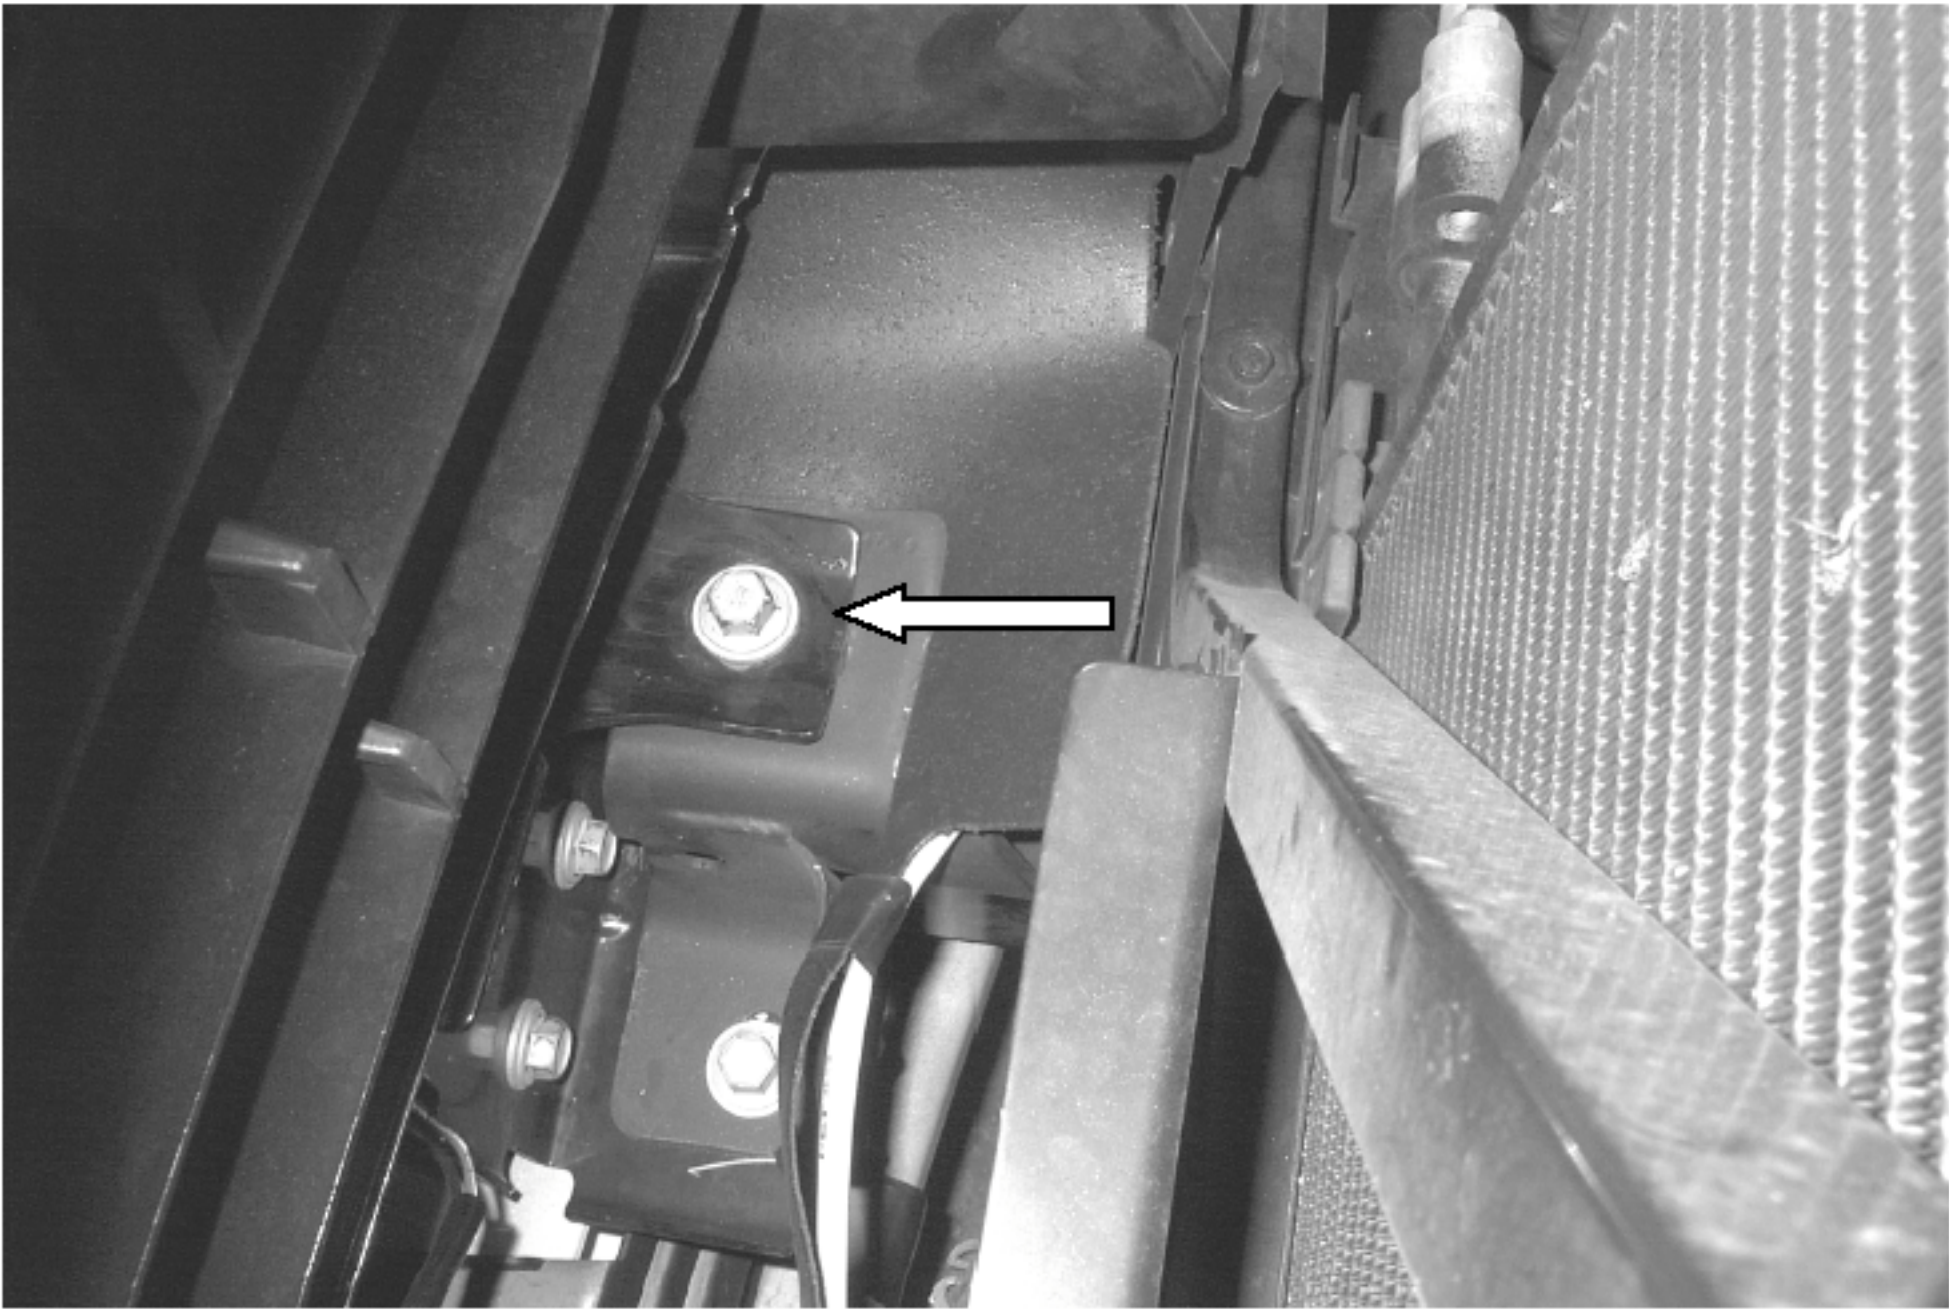

STEP 1. BEGINNING WITH THE PASSENGER SIDE, LOCATE AND REMOVE THE UPPER BUMPER BOLT. THE BOLT IS LOCATED BEHIND THE GRILLE ON THE TOP OF THE BUMPER. THE BOLT IS ACCESSIBLE BY REMOVING THE RIVETS AND PLASTIC TRIM PANEL ON TOP OF THE GRILLE, AND REACHING DOWN THROUGH THE OPENING.

GO RHINO! PRODUCTS 3000 SERIES INSTALLATION INSTRUCTIONS

03-07 (classic) CHEVROLET SILVERADO 2500HD, 3500 P/U 2/4WD PART NO. 3154B - 3154C

REV.A 07/09


QTY	PARTS DESCRIPTION	QTY	PARTS DESCRIPTION
1	P200 PLUG KIT	2	12MM HEX NUTS
2	1/4" X 3/4" HEX BOLTS	2	12MM –1.75 X 70MM HEX BOLTS
2	1/4" FLAT WASHERS	1	1100LP LICENSE PLATE BRACKET
2	1/4" HEX NUTS	2	1" X 1 1/4" 11GA TUBULAR SPACERS
6	3/8" X 1" HEX BOLTS	1	1100AD DRIVER SIDE UPPER BRACKET
4	3/8" X 1 1/4" HEX BOLTS	1	1100AP PASSENGER SIDE UPPER BRACKET
10	3/8" LOCK WASHERS	1	1110CD DRIVER SIDE FRAME BRACKET
10	3/8" HEX NUTS	1	1110CP PASSENGER SIDE FRAME BRACKET
4	1/2" FLAT WASHERS	2	1/2" LOCK WASHERS
4	3/8" X 1" BUTTON HEAD BOLTS	2	1/2" HOLE - 1/4" THICK X 1 1/2" OD WASHERS
2	12MM – 1.75 X 40MM HEX BOLTS		

ASSEMBLY INSTRUCTIONS

- STEP 1.** BEGIN THE ASSEMBLY BY LOOSELY ATTACHING THE BOTTOM STEP TUBE TO THE GRILLE GUARD SIDE PLATES USING THE 3/8" X 1" BUTTON HEAD BOLTS.
- STEP 2.** INSTALL THE TUBE CONNECTORS FROM THE P200 PLUG KIT INTO THE TOP TUBE.
- STEP 3.** POSITION THE CENTER PLATE BETWEEN THE SIDE PLATES, AND ATTACH THE CENTER PLATE TO THE SIDE PLATES USING THE 3/8" X 1 1/4" HEX BOLTS, LOCK WASHERS, AND HEX NUTS.
- STEP 4.** ALIGN THE GRILLE ASSEMBLY AND TIGHTEN ALL NUTS AND BOLTS.

INSTALLATION INSTRUCTIONS

NOTE: SOME MODELS MAY REQUIRE NOTCHING THE LOWER BUMPER FASCIA.

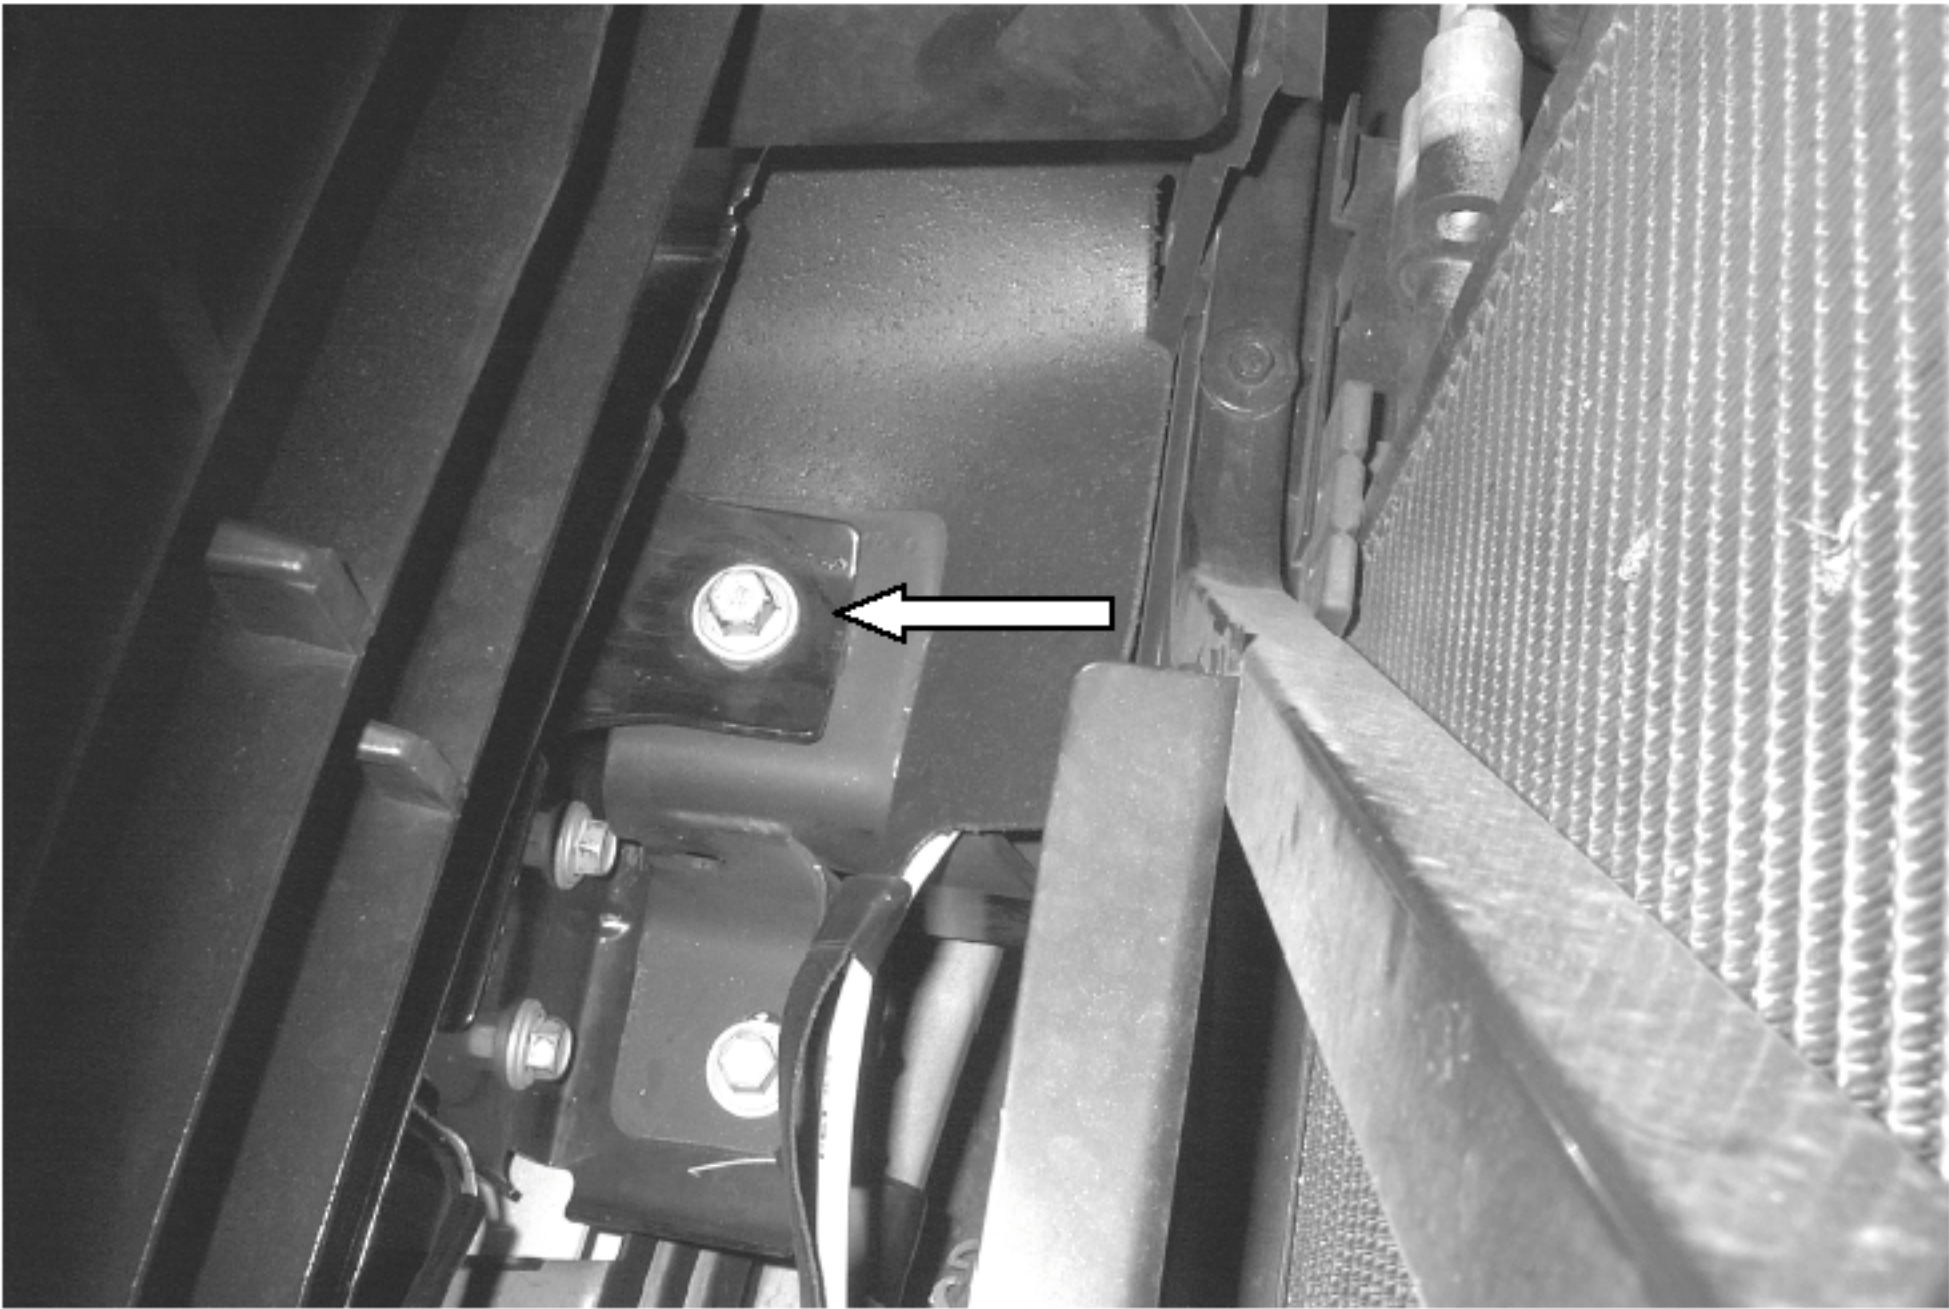

- STEP 1.** BEGINNING WITH THE PASSENGER SIDE, LOCATE AND REMOVE THE UPPER BUMPER BOLT. THE BOLT IS LOCATED BEHIND THE GRILLE ON THE TOP OF THE BUMPER. THE BOLT IS ACCESSIBLE BY REMOVING THE RIVETS AND PLASTIC TRIM PANEL ON TOP OF THE GRILLE, AND REACHING DOWN THROUGH THE OPENING.


STEP 5. REPEAT THE ABOVE STEPS FOR THE DRIVER SIDE BRACKETS.



STEP 6. REMOVE THE LICENSE PLATE AND MOUNTING BRACKET FROM THE FRONT BUMPER. ATTACH 1100LP LICENSE PLATE BRACKET TO THE BUMPER USING THE FACTORY SCREWS, AND THE LICENSE PLATE TO THE BRACKET USING THE 1/4" FASTENERS SUPPLIED.



STEP 7. ATTACH THE GRILLE GUARD ASSEMBLY TO THE FRAME BRACKETS, AND UPPER BRACKETS USING THE 3/8" X 1" BOLTS, LOCK WASHERS, AND NUTS. ALIGN THE GRILLE GUARD ASSEMBLY WITH THE FRONT OF THE VEHICLE AND TIGHTEN ALL NUTS AND BOLTS.

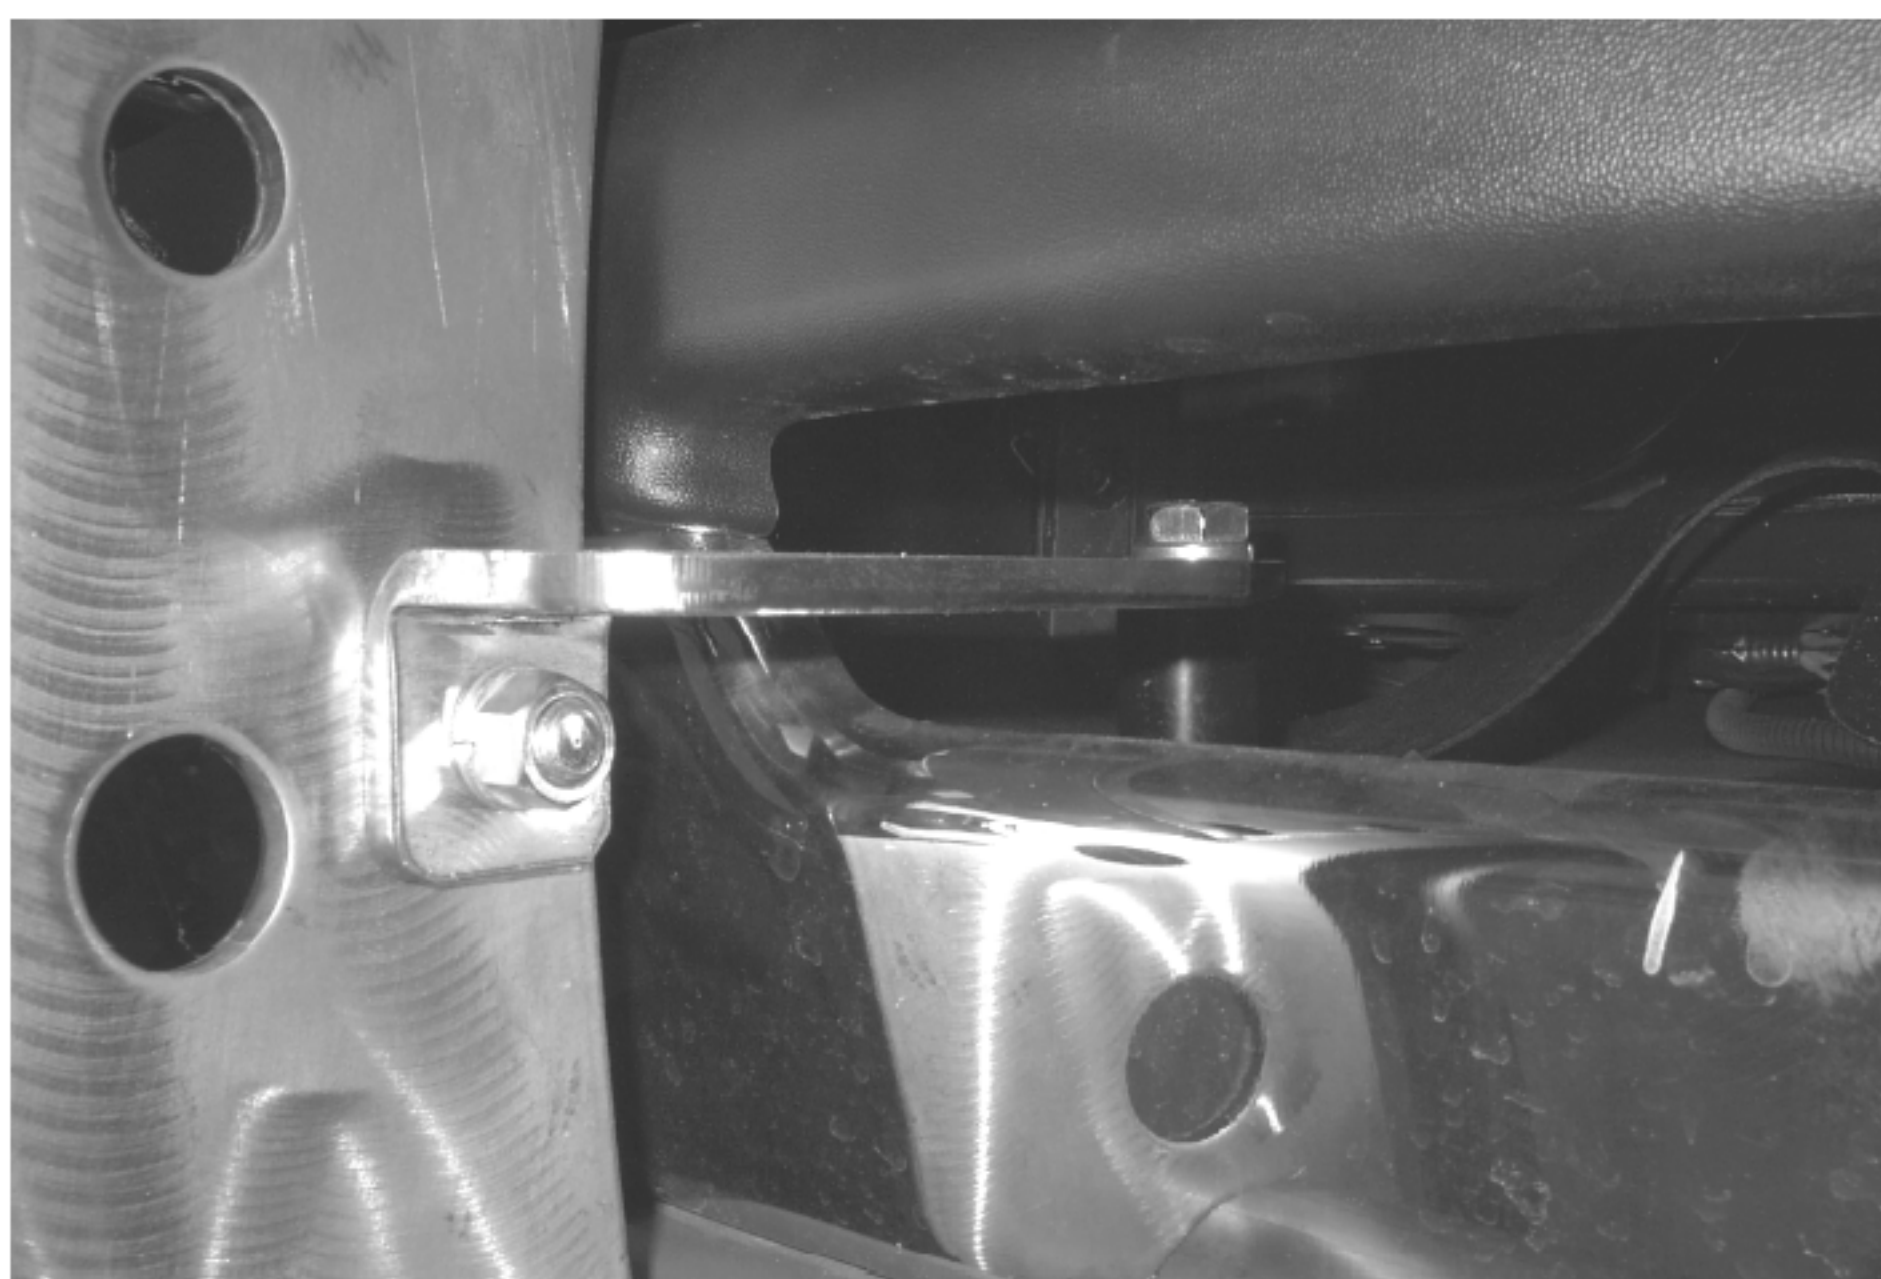

STEP 8. RE-ATTACH THE PLASTIC TRIM PANEL.