

INSTALLATION INSTRUCTIONS

4207

HUMMER H3 05-10

Parts List:

QTY

- (1) Set step bar (passenger & driver)
- (2) Set Mount bracket
- (1) Spacer tube

Hardware kit including:

- (8) 3/8" x 1" Button head bolt
- (8) 3/8" lock washers
- (1) M6-1.0 x 65 mm. Hex head bolt
- (1) 5/16" flat washers
- (1) 5/16" lock washers
- (1) 5/16 hex nut
- (8) M10-1.50 x 35 mm. hex head bolt
- (8) 7/16" flat washers
- (8) 7/16" lock washers
- (6) 1/2" Flat Washer

Tools required:

- 10 mm. Socket 7/32" hex wrench
- 17 mm. Socket Ratchet


Instructions:

Aproximated installation time: 30 min.

1. Before beginning installation, read the instructions thoroughly and completely. If any of the items listed above are missing, please do not proceed with the installation. Call your distributor immediately to obtain the necessary items.
2. Locate the emergency brake cable and install spacer as shown use the M6 hex head bolts, 5/16" flat and lock washer. Using image 1.
3. Locate the driver side mounting locations and attach the mounting brackets as shown. Use the M10 hex head bolts with the 7/16 flat and washer. Install the 1/2" flat washers between the frame and the rear bracket. See image 2.
4. Attach driver side step bar to cradles with the pad logo facing outward. Assembly with the 3/8" bolts and 3/8 lock washers. Leave loose.
5. Repeat installation for opposite side.
6. Make any final adjustments to the alignment of the stepbar and tighten all bolts.
7. Periodically check and re-tighten bolts as necessary over the term of use.
8. Fill out included warranty card and place in the vehicle.

Assembly Diagram:

IMAGE 1

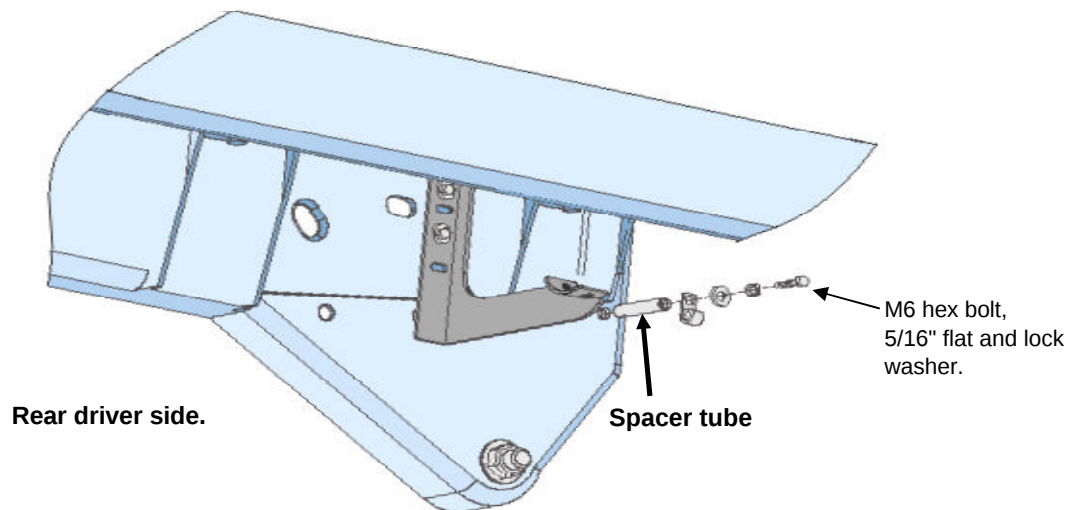

Cleaning and care instructions:

Diseño:

Calidad:


Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 03-05-06

INSTALLATION INSTRUCTIONS 4207

IMAGE 2

← FRONT

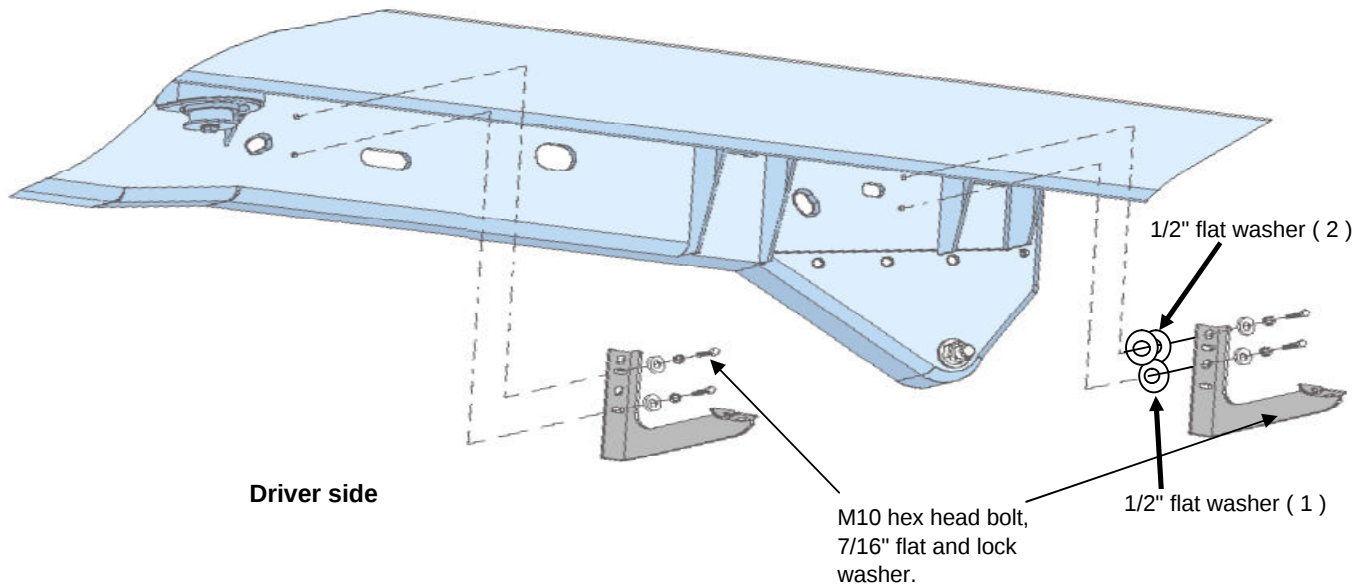

Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 03-05-06