

INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D361291 (B)

06-09 DODGE RAM 1500, 2500, 3500 MEGA CAB P/U 4DR 2/4WD


Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
10	3/8" X 1 1/4" T-BOLTS	1	498502 DRIVER REAR BRACKET
20	3/8" X 1 1/4" HEX BOLTS	1	498562 DRIVER REAR SUPPORT BRACKET
30	3/8" HEX NUTS	1	498304 PASSENGER FRONT BRACKET
30	3/8" LOCK WASHERS	1	498364 PASSENGER FRONT SUPPORT BRACKET
42	3/8" FLAT WASHERS	1	498504 PASSENGER REAR BRACKET
1	D361291D DRIVER SIDE STEP	1	498564 PASSENGER REAR SUPPORT BRACKET
1	D361291P PASSENGER SIDE STEP	2	498124 DRIVER & PASSENGER CENTER BRACKETS
1	498302 DRIVER FRONT BRACKET		
1	498362 DRIVER FRONT SUPPORT BRACKET		


PASSENGER SIDE FRONT MOUNTING AND SUPPORT BRACKET

STEP-1 LOCATE AND REMOVE THE TAPE COVERING THE OBOUND HOLE IN THE BODY ROCKER PANEL.

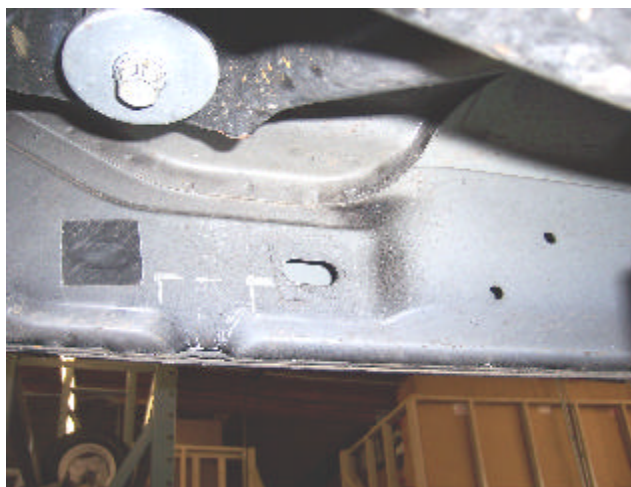

STEP-2 ATTACH 498304 PASSENGER FRONT MOUNTING BRACKET TO THE BODY ROCKER PANEL USING THE 3/8" T-BOLT, WASHERS AND HEX NUT AS SHOWN.

STEP-3 LOCATE THE SQUARE HOLE IN THE UNDERSIDE OF THE BODY AT THE FRONT OF THE CAB.

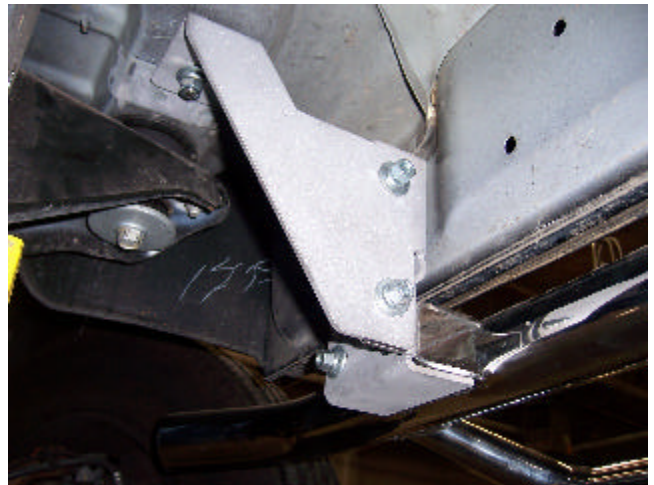

STEP-4 ATTACH 498364 PASSENGER SIDE FRONT SUPPORT BRACKET TO THE UNDER SIDE OF THE BODY AND TO THE FLANGE OF THE MOUNTING BRACKET USING THE 3/8" T-BOLT, 3/8" X 1 1/4" HEX BOLTS, WASHERS AND NUTS AS SHOWN.

PASSENGER SIDE CENTER MOUNTING BRACKET


STEP-5 LOCATE AND REMOVE THE TAPE COVERING THE OBOURD HOLE IN THE BODY ROCKER PANEL.



STEP-6 ATTACH ONE OF THE 498124 CENTER MOUNTING BRACKETS TO THE BODY ROCKER PANEL USING THE 3/8" T-BOLT, WASHERS AND NUTS AS SHOWN.


PASSENGER SIDE REAR MOUNTING BRACKET AND SUPPORT BRACKET

STEP-7 LOCATE AND REMOVE THE TAPE COVERING THE OBOUND HOLE IN THE BODY ROCKER PANEL.

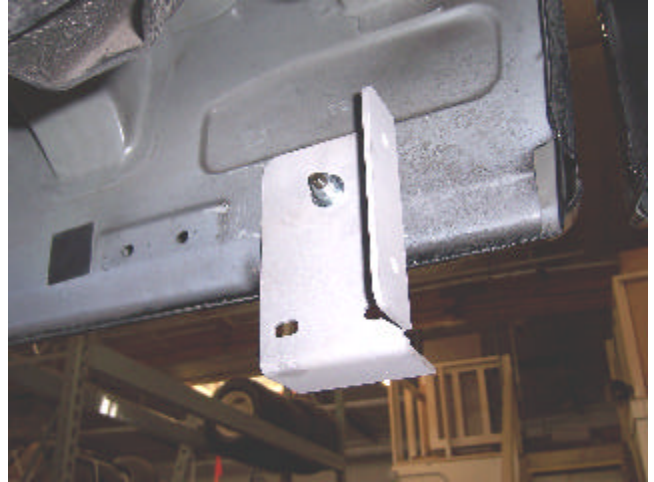


STEP-8 ATTACH 498504 PASSENGER SIDE REAR MOUNTING BRACKET TO THE BODY ROCKER PANEL USING THE 3/8" T-BOLT, WASHERS AND NUTS AS SHOWN.

STEP-9 LOCATE THE SQUARE HOLE IN THE UNDERSIDE OF THE BODY AT THE REAR OF THE CAB

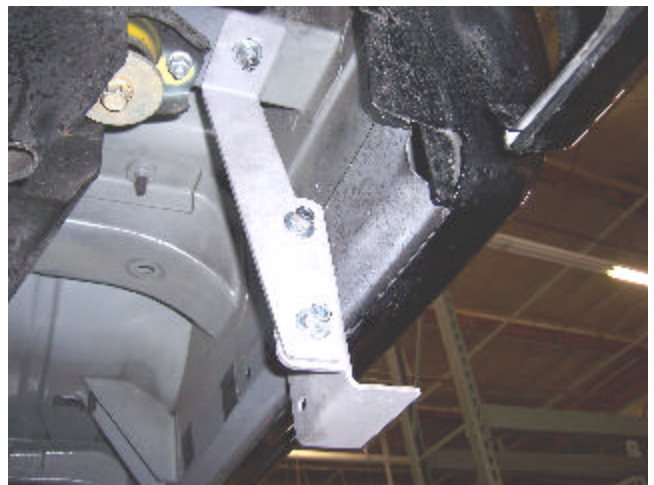

STEP-10 ATTACH 498564 PASSENGER SIDE REAR SUPPORT BRACKET TO THE UNDER SIDE OF THE BODY AND TO THE FLANGE OF THE MOUNTING BRACKET USING THE 3/8" T-BOLT, 3/8" X 1 1/4" HEX BOLTS, WASHERS AND NUTS AS SHOWN.

STEP-11 ATTACH THE PASSENGER SIDESTEP TO THE MOUNTING BRACKETS USING THE 3/8" X 1 1/4" HEX BOLTS, WASHERS AND NUTS.

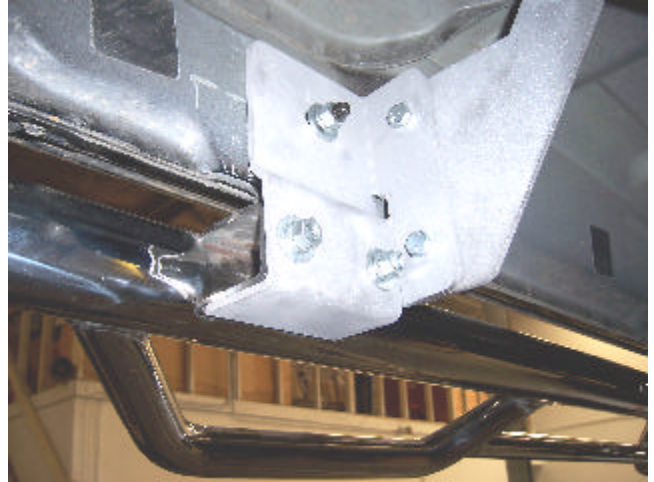

STEP-12 ALIGN THE SIDESTEP WITH THE BODY AND THEN TIGHTEN ALL MOUNTING NUTS AND BOLTS.

STEP-13 REPEAT THE ABOVE STEPS FOR THE DRIVER SIDE BRACKETS AND SIDESTEP.

FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821