



Innovative Truck Racks!

Two Companies ! One Vision !



DOMINATOR SideSteps **WHEEL - TO - WHEEL**

INSTALLATION INSTRUCTIONS

PART NO. D36129 DODGE RAM MEGA CAB P/U 2/4WD SHORT BED REV.A 2/08

PARTS LIST

QTY	PARTS DESCRIPTION	QTY	PARTS DESCRIPTION
10	3/8" X 1 1/4" T-BOLTS	1	498362 DRIVER FRONT SUPPORT BRACKET
20	3/8" X 1 1/4" HEX BOLTS	1	498502 DRIVER REAR BRACKET
30	3/8" HEX NUTS	1	498562 DRIVER REAR SUPPORT BRACKET
30	3/8" LOCK WASHERS	1	498304 PASSENGER FRONT BRACKET
42	3/8" FLAT WASHERS	1	498364 PASSENGER FRONT SUPPORT BRACKET
1	329FP FRONT PASSENGER SIDESTEP SECTION	1	498504 PASSENGER REAR BRACKET
1	329RP REAR PASSENGER SIDESTEP SECTION	1	498564 PASSENGER REAR SUPPORT BRACKET
1	329FD FRONT DRIVER SIDESTEP SECTION	2	498124 DRIVER & PASSENGER CENTER BRACKETS
1	329RD REAR DRIVER SIDESTEP SECTION		
1	498302 DRIVER FRONT BRACKET		


PASSENGER SIDE FRONT MOUNTING AND SUPPORT BRACKET

STEP 1. LOCATE AND REMOVE THE TAPE COVERING THE OBOUND HOLE IN THE BODY ROCKER PANEL.



STEP 2. ATTACH 498304 PASSENGER FRONT MOUNTING BRACKET TO THE BODY ROCKER PANEL USING THE 3/8" T-BOLT, WASHERS AND HEX NUT AS SHOWN.

STEP 3. LOCATE THE SQUARE HOLE IN THE UNDERSIDE OF THE BODY AT THE FRONT OF THE CAB.

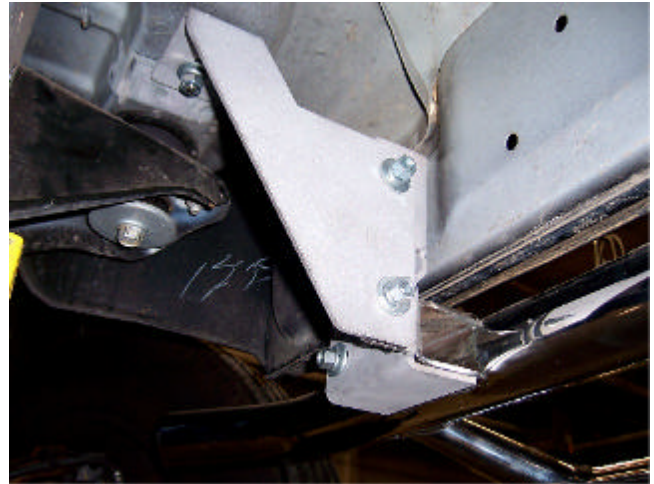

STEP 4. ATTACH 498364 PASSENGER SIDE FRONT SUPPORT BRACKET TO THE UNDER SIDE OF THE BODY AND TO THE FLANGE OF THE MOUNTING BRACKET USING THE 3/8" T-BOLT, 3/8" X 1 1/4" HEX BOLTS, WASHERS AND NUTS AS SHOWN.

PASSENGER SIDE CENTER MOUNTING BRACKET


STEP 5. LOCATE AND REMOVE THE TAPE COVERING THE OBOURD HOLE IN THE BODY ROCKER PANEL.



STEP 6. ATTACH ONE OF THE 498124 CENTER MOUNTING BRACKETS TO THE BODY ROCKER PANEL USING THE 3/8" T-BOLT, WASHERS AND NUTS AS SHOWN.


PASSENGER SIDE REAR MOUNTING BRACKET AND SUPPORT BRACKET

STEP 7. LOCATE AND REMOVE THE TAPE COVERING THE OBOUND HOLE IN THE BODY ROCKER PANEL.

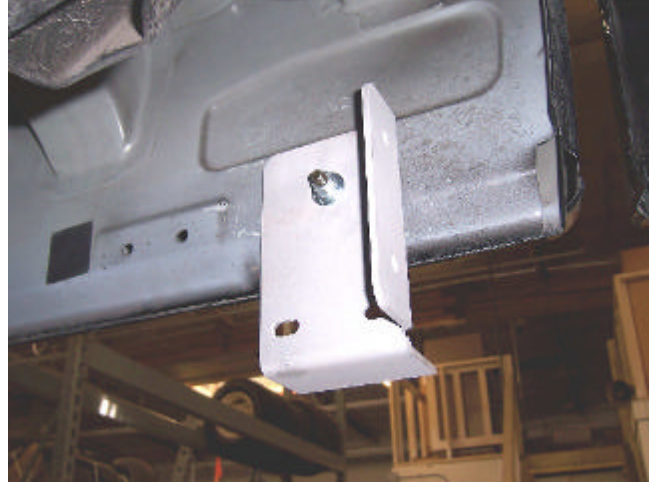


STEP 8. ATTACH 498504 PASSENGER SIDE REAR MOUNTING BRACKET TO THE BODY ROCKER PANEL USING THE 3/8" T-BOLT, WASHERS AND NUTS AS SHOWN.

STEP 9. LOCATE THE SQUARE HOLE IN THE UNDERSIDE OF THE BODY AT THE REAR OF THE CAB

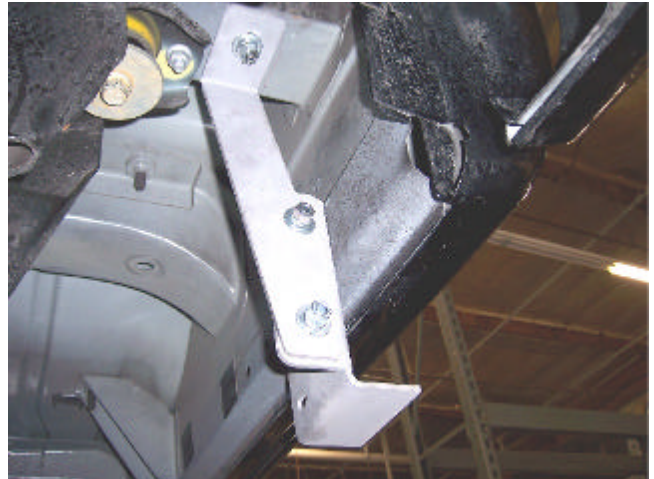

STEP 10. ATTACH 498564 PASSENGER SIDE REAR SUPPORT BRACKET TO THE UNDER SIDE OF THE BODY AND TO THE FLANGE OF THE MOUNTING BRACKET USING THE 3/8" T-BOLT, 3/8" X 1 1/4" HEX BOLTS, WASHERS AND NUTS AS SHOWN.

STEP 11. ATTACH THE PASSENGER SIDESTEP TO THE MOUNTING BRACKETS USING THE 3/8" X 1 1/4" HEX BOLTS, WASHERS AND NUTS.

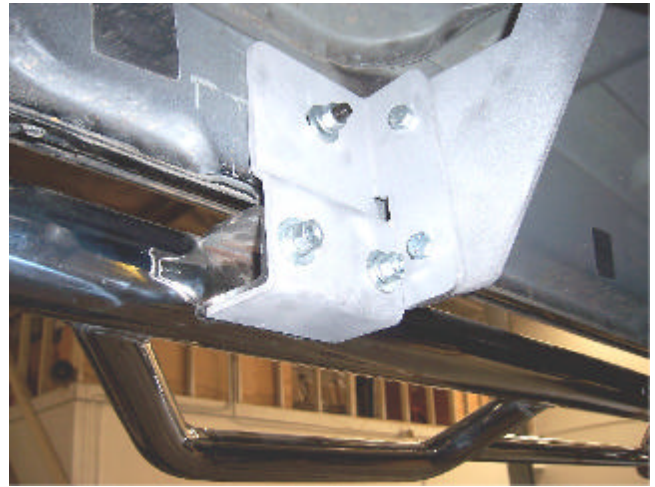

STEP 12. ALIGN THE SIDESTEP WITH THE BODY AND THEN TIGHTEN ALL MOUNTING NUTS AND BOLTS.

STEP 13. REPEAT THE ABOVE STEPS FOR THE DRIVER SIDE BRACKETS AND SIDESTEP.