

INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D361301 (B)

2010 DODGE RAM 2500HD, 3500HD MEGA CAB P/U 4DR 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

<u>QTY</u>	<u>PART DESCRIPTION</u>	<u>QTY</u>	<u>PART DESCRIPTION</u>
22	3/8" X 1 1/4" HEX BOLT	1	DRIVER SIDE STEP
42	3/8" FLAT WASHER	2	DRIVER FRONT & CENTER BRACKET
30	3/8" LOCK WASHER	1	DRIVER REAR BRACKET
22	3/8" HEX NUT	1	DRIVER REAR AUXILIARY BRACKET
8	VINYL GASKET	1	PASSENGER SIDE STEP
4	3/8" T-BOLT	2	PASSENGER FRONT & CENTER BRACKET
4	3/8" T-PLATE	1	PASSENGER REAR BRACKET
		1	PASSENGER REAR AUXILIARY BRACKET



INSTALLATION INSTRUCTIONS

READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

STEP-1 BEGIN THE INSTALLATION BY INSTALLING THE DRIVER SIDE BRACKETS.

LOCATE THE (2) HEXAGON SHAPED HOLES IN THE BODY PANEL AT THE FRONT OF THE CAB AND REMOVE THE TAPE COVERING THE OBLONG HOLE. INSTALL (1) 3/8" T-PLATE IN THE OBLONG HOLE AND INSTALL A VINYL GASKET OVER THE THREADS TO PREVENT THE T-PLATE FROM FALLING INTO THE BODY. **PHOTO #1**

STEP-2 ATTACH ONE OF THE D07D BRACKETS TO THE BODY PANEL USING THE T-PLATE (2) 3/8" X 1 1/4" HEX BOLTS, (3) 3/8" FLAT WASHERS, (3) 3/8" LOCK WASHERS AND (1) 3/8" HEX NUT. HAND TIGHTEN. **PHOTO #2**

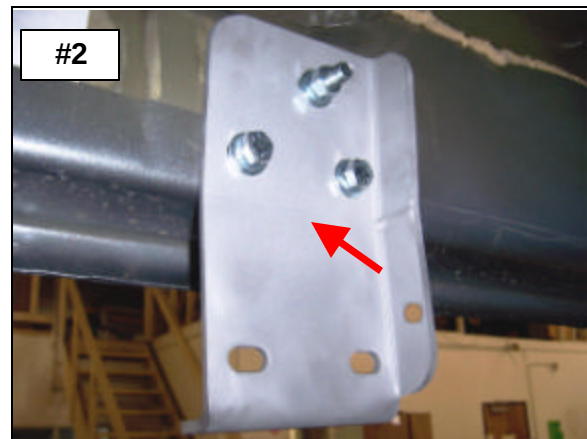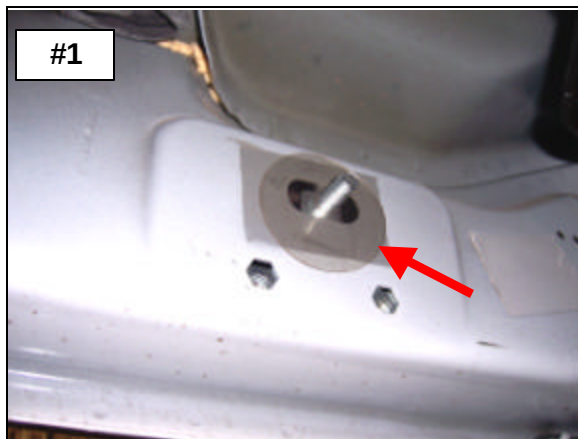

STEP-3 LOCATE THE HEXAGON SHAPED HOLES IN THE BODY PANEL AT THE CENTER OF THE CAB AND REPEAT THE ABOVE STEPS TO INSTALL THE REMAINING D07D BRACKET.



STEP-4 LOCATE THE SQUARE HOLE IN THE UNDERSIDE OF THE BODY AND THE OBLONG HOLE IN THE BODY PANEL AT THE REAR OF THE CAB.

REMOVE THE TAPE COVERING THE OBLONG HOLE AND INSTALL (1) 3/8" T-BOLT IN THE OBLONG HOLE AND (1) 3/8" T-BOLT IN THE SQUARE HOLE. INSTALL VINYL GASKETS OVER THE THREADS. **PHOTO #3**

STEP-5 ATTACH THE D08D REAR BRACKET TO THE BODY PANEL USING THE T-BOLT (1) 3/8" FLAT WASHER, (1) 3/8" LOCK WASHER AND (1) 3/8" HEX NUT. HAND TIGHTEN.

ATTACH THE REAR AUXILIARY BRACKET TO THE UNDERSIDE OF THE BODY USING THE T-BOLT, (1) 3/8" FLAT WASHER, (1) 3/8" LOCK WASHER, (1) 3/8" HEX NUT AND TO THE REAR BRACKET USING (1) 3/8" X 1 1/4" HEX BOLTS, (1) 3/8" FLAT WASHERS, (1) 3/8" LOCK WASHER AND (1) 3/8" HEX NUTS. HAND TIGHTEN.

ATTACH THE DRIVER SIDE STEP TO EACH BRACKET USING (2) 3/8" X 1 1/4" HEX BOLTS, (4) 3/8" FLAT WASHER, (2) 3/8" LOCK WASHERS AND (2) 3/8" HEX NUTS. **PHOTO #4**

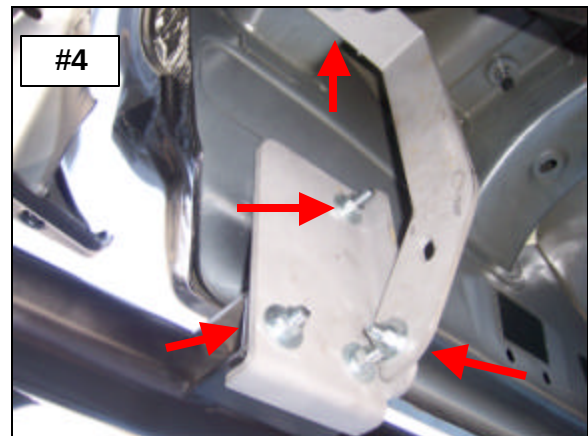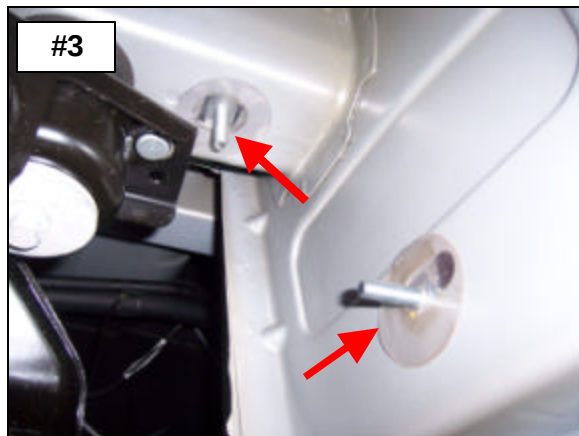

STEP-6 ALIGN THE SIDE STEP WITH THE VEHICLE AND TIGHTEN ALL BRACKETS AND SIDE STEP NUTS AND BOLTS.

REPEAT THE ABOVE STEPS TO INSTALL THE PASSENGER SIDE BRACKETS AND SIDE STEP.



FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888) 427-4466 FAX (714) 672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821