



Innovative Truck Racks!

Two Companies ! One Vision !



DOMINATOR SideSteps ~~WHEEL - TO - WHEEL~~

INSTALLATION INSTRUCTIONS

PART NO. D36146 DODGE RAM QUAD CAB P/U 2/4WD LONG BED REV.A 2/08

PARTS LIST

QTY	PARTS DESCRIPTION	QTY	PARTS DESCRIPTION
12	1/4" x 3/4" SELF TAPPING HEX BOLTS	2	D03 CENTER MOUNTING BRACKETS
24	3/8" HEX NUTS	4	D02 FRONT AND REAR MOUNTING BRACKETS
24	3/8" LOCK WASHERS	1	346FP FRONT PASSENGER SIDESTEP SECTION
48	3/8" FLAT WASHERS	1	346RP REAR PASSENGER SIDESTEP SECTION
12	3/8" X 1 1/4" HEX BOLTS	1	346FD FRONT DRIVER SIDESTEP SECTION
12	3/8" X 2" HEX BOLTS	1	346RD REAR DRIVER SIDESTEP SECTION

Read the instructions completely before you begin the installation.


If your vehicle is equipped with factory side steps, remove the side steps and fasteners.

This installation uses (3) mounting brackets per side, and requires drilling (2) holes in the lower body pinch mold for each bracket.

It is the installer's responsibility to confirm all measurements and that there are no obstructions such as brake, fuel or electrical lines before drilling.

Step 1. Beginning with the passenger side measure reward from the front fender bolt (refer to diagram for dimensions) and scribe (6) vertical lines on the body pinch mold.



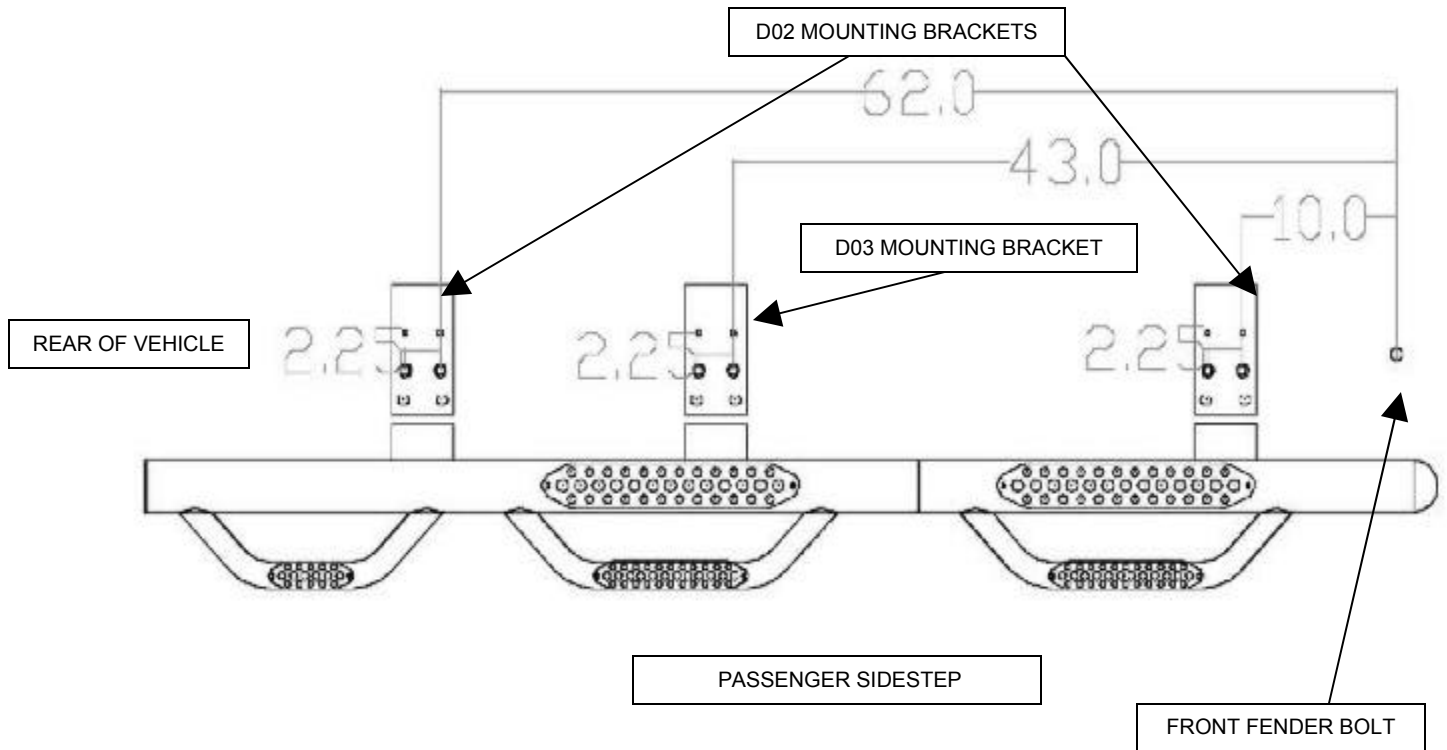

Step 2. Measure up from the bottom edge of the pinch mold 7/16" and scribe intersecting lines.




Step 3. Confirm the measurements, center punch and drill 3/8" holes through the body pinch mold. Repeat the above steps for the driver side.




Step 4. Loosely attach the mounting brackets to the body pinch mold using the 3/8" x 2" hex bolts, flat washers, lock washers and hex nuts as shown.



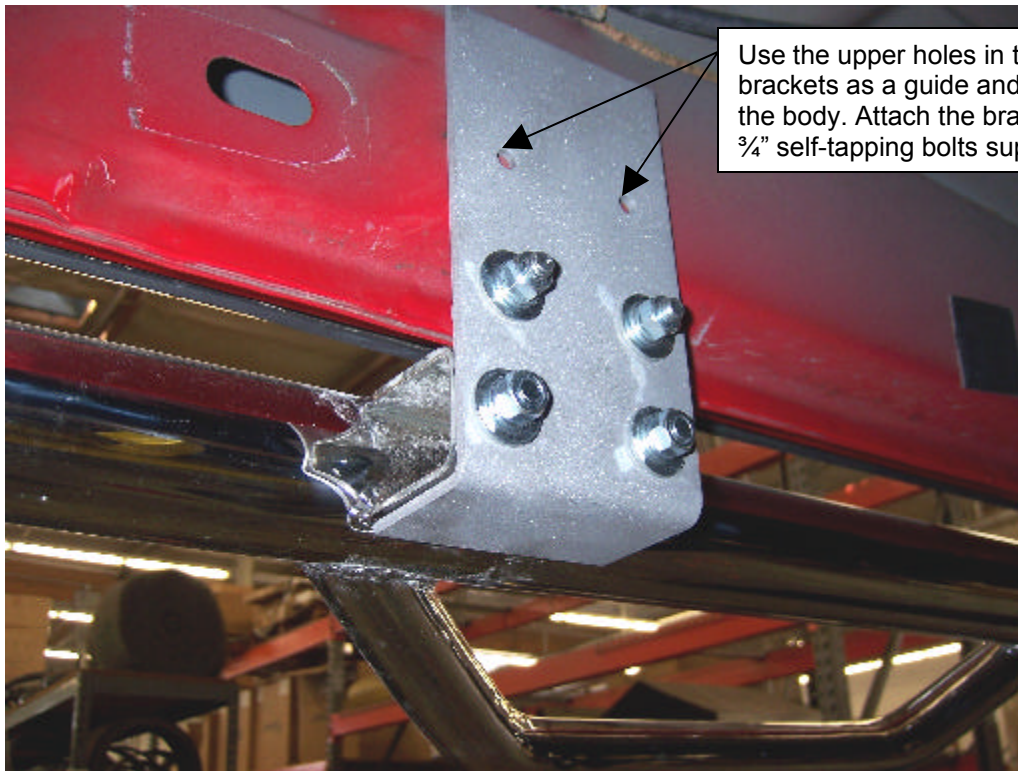

Use the upper holes in the mounting brackets as a guide and drill 3/16" holes in the body. Attach the bracket using the 1/4" x 3/4" self-tapping bolts supplied.

Step 5. Position the passenger sidestep up to the mounting brackets and loosely attach it to the brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and hex nuts.

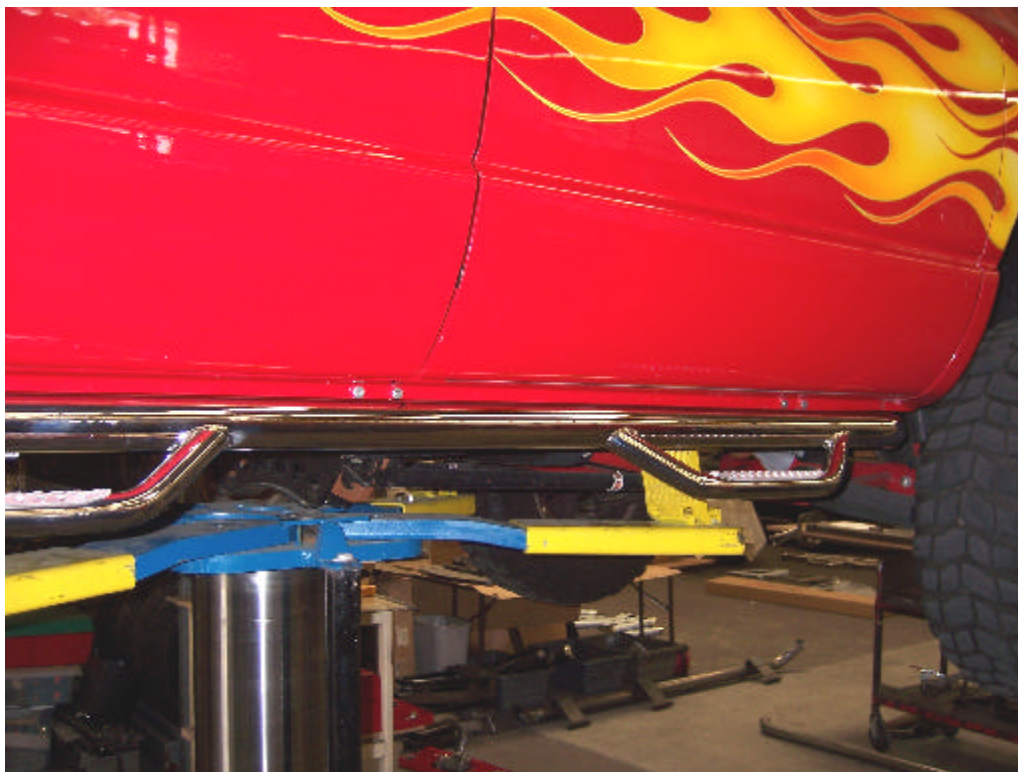

Step 6. Align sidestep with the body and then tighten all mounting bracket and sidestep nuts and bolts.

Step 7. Repeat the above steps to install the driver side mounting brackets and sidestep.