

INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D362501 (B)

99-10 FORD F-250, F-350 SUPER DUTY SUPER CAB P/U 4DR 2/4WD LONG BED

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!


PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>
12	5/16" X 1" HEX BOLTS
12	5/16" FLAT WASHERS
12	5/16" LOCK WASHERS
12	5/16" U-NUTS
24	3/8" LOCK WASHERS
24	3/8" x 1 1/4" HEX BOLTS

<u>QTY</u>	<u>PARTS DESCRIPTION</u>
48	3/8" FLAT WASHERS
24	3/8" HEX NUTS
6	F99 MOUNTING BRACKETS
1	D362501D DRIVER SIDE STEP
1	D362501P PASSENGER SIDE STEP

STEP-1 Read the installation instructions completely before you begin.

If the vehicle is equipped with factory side steps, remove the fasteners and steps.


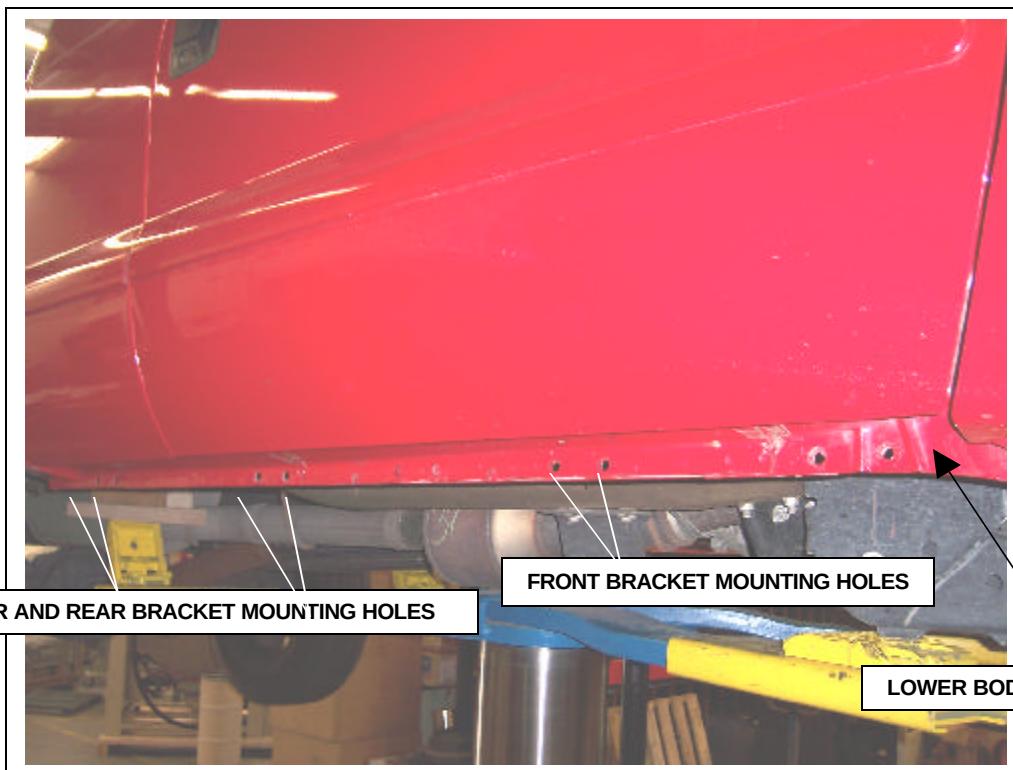


CENTER AND REAR BRACKET MOUNTING HOLES


FRONT BRACKET MOUNTING HOLES


LOWER BODY PINCH MOLD

STEP-2 This installation uses three mounting brackets per side. Beginning with the passenger side, locate the holes in the rocker panel and lower body pinch mold.

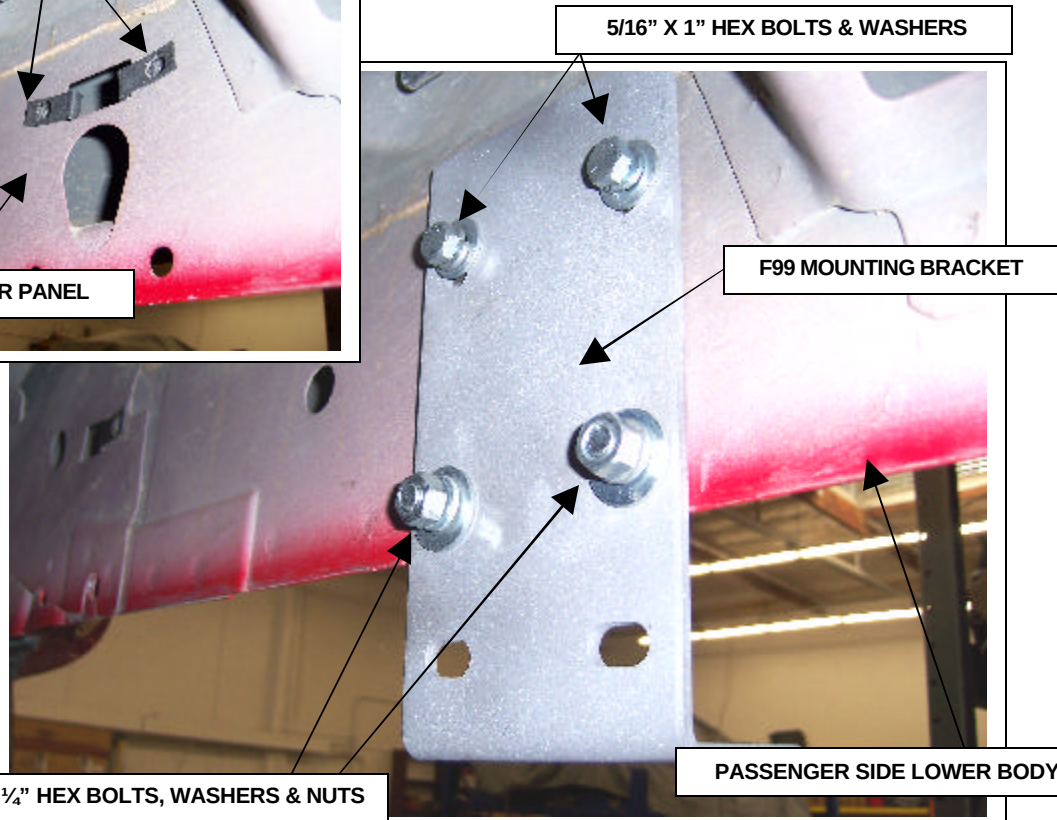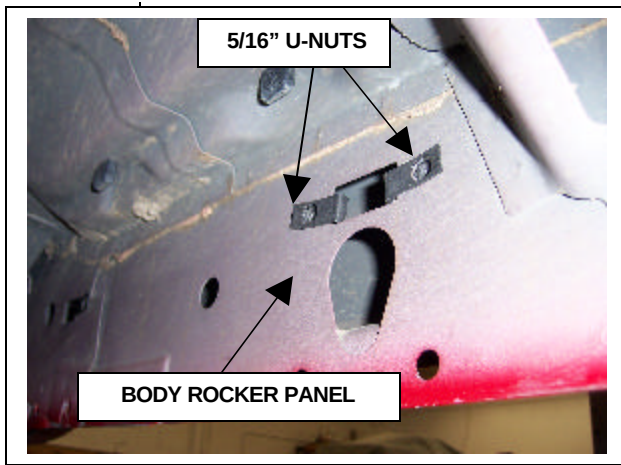

STEP-3 Install the 5/16" u-nuts in the rocker panel. Loosely attach the mounting brackets to the rocker panel and pinch mold using the 5/16" hex bolts, 3/8" hex bolts, flat and lock washers, and nuts as shown.

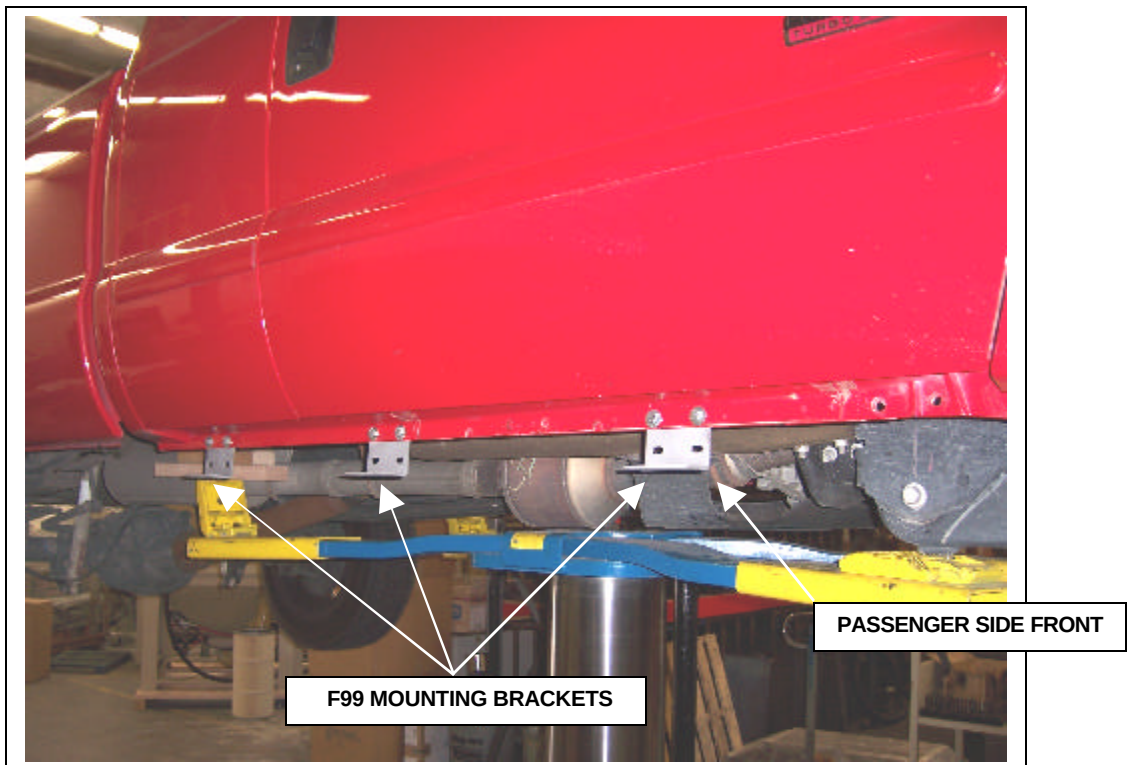

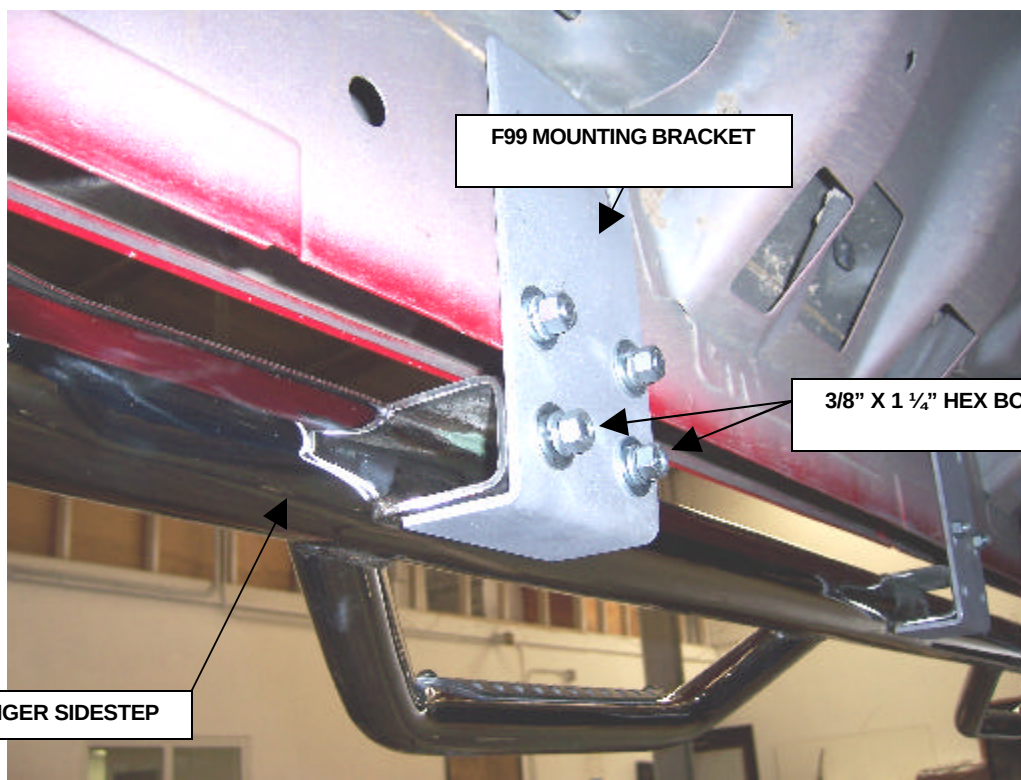

PASSENGER SIDESTEP

STEP-4 Position the passenger sidestep up to the mounting brackets and loosely attach it to the brackets using the (2) 3/8" x 1 1/4" hex bolts, (4) flat & (2) lock washers and (2) nuts as shown.



STEP-5 Align sidestep with the body, and then tighten all mounting bracket and sidestep nuts and bolts. Repeat the above steps to install the driver side mounting brackets and sidestep.

FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821