

DOMINATOR SideSteps **WHEEL - TO - WHEEL**


INSTALLATION INSTRUCTIONS

PART NO. D36268 FORD F-250, 350 CREW CAB P/U 2/4WD LONG BED REV.A 2/08


PARTS LIST

QTY	PARTS DESCRIPTION	QTY	PARTS DESCRIPTION
12	5/16" X 1" HEX BOLTS	48	3/8" FLAT WASHERS
12	5/16" FLAT WASHERS	24	3/8" HEX NUTS
12	5/16" LOCK WASHERS	6	F99 MOUNTING BRACKETS
12	5/16" U-NUTS	1	368FP FRONT PASSENGER SIDESTEP SECTION
24	3/8" LOCK WASHERS	1	368RP REAR PASSENGER SIDESTEP SECTION
24	3/8" x 1 1/4 " HEX BOLTS	1	368FD FRONT DRIVER SIDESTEP SECTION
		1	368RD REAR DRIVER SIDESTEP SECTION

Step 1. Read the installation instructions completely before you begin.
If the vehicle is equipped with factory side steps, remove the fasteners and steps.

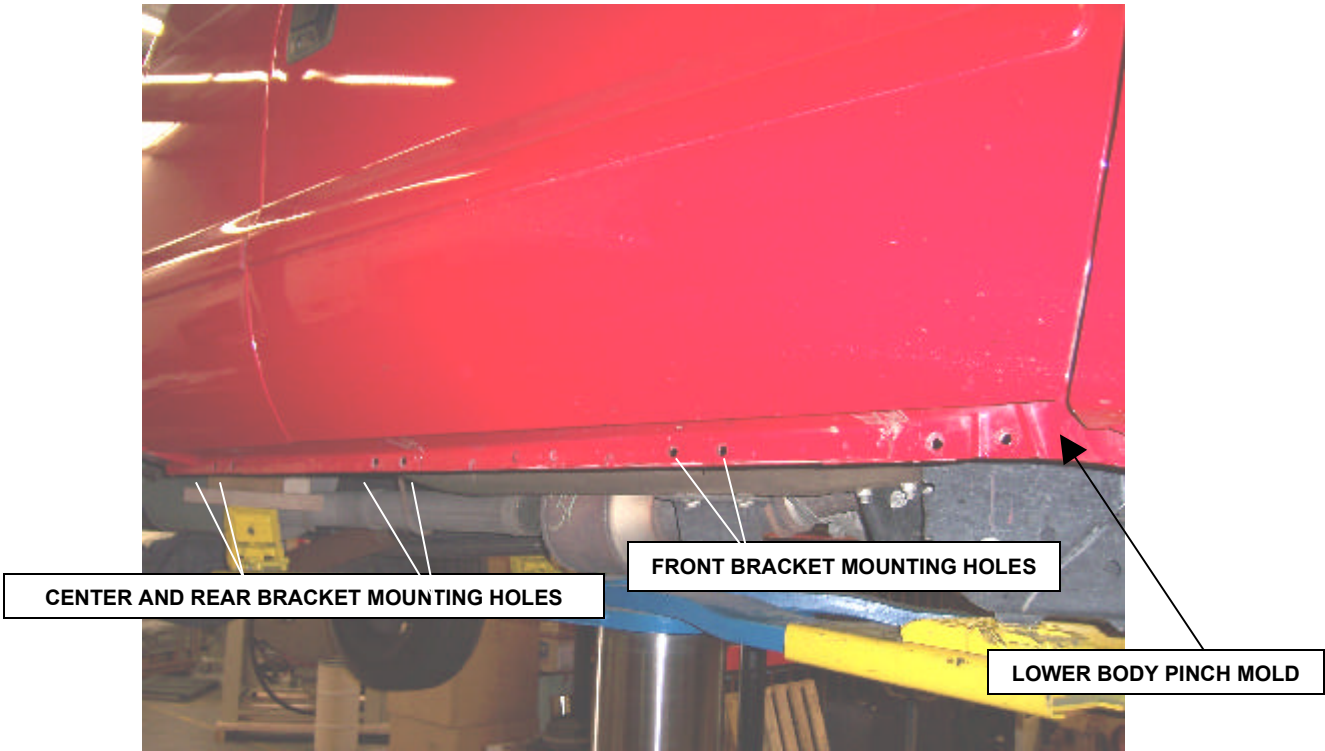


Step 2. This installation uses three mounting brackets per side. Beginning with the passenger side, locate the holes in the rocker panel and lower body pinch mold.

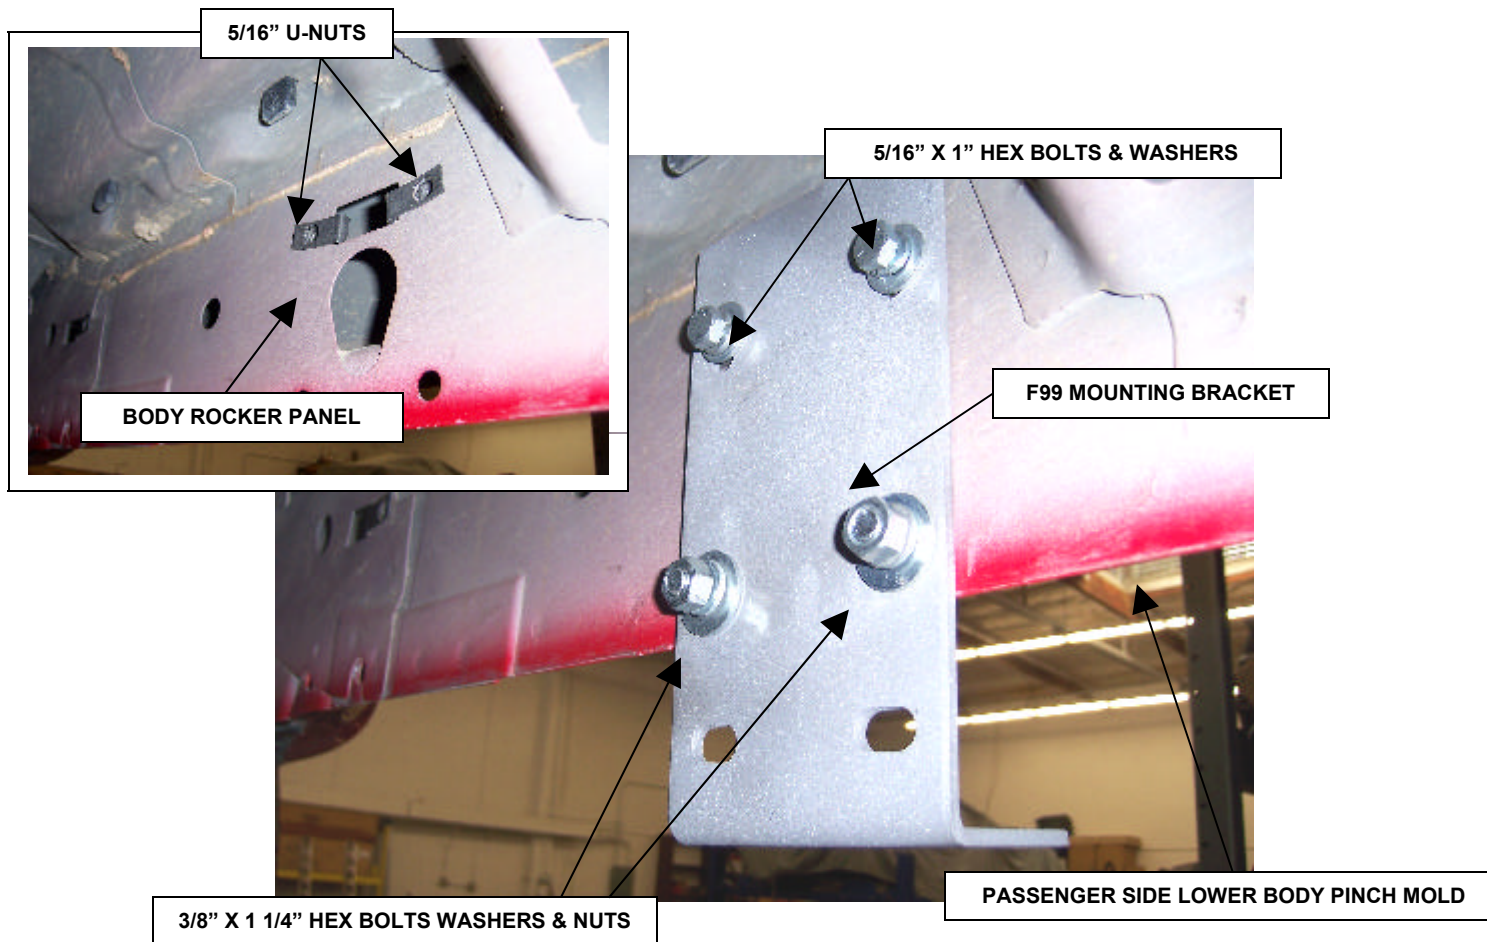

Step 3. Install the 5/16" u-nuts in the rocker panel. Loosely attach the mounting brackets to the rocker panel and pinch mold using the 5/16" hex bolts, 3/8" hex bolts, washers, and nuts as shown.



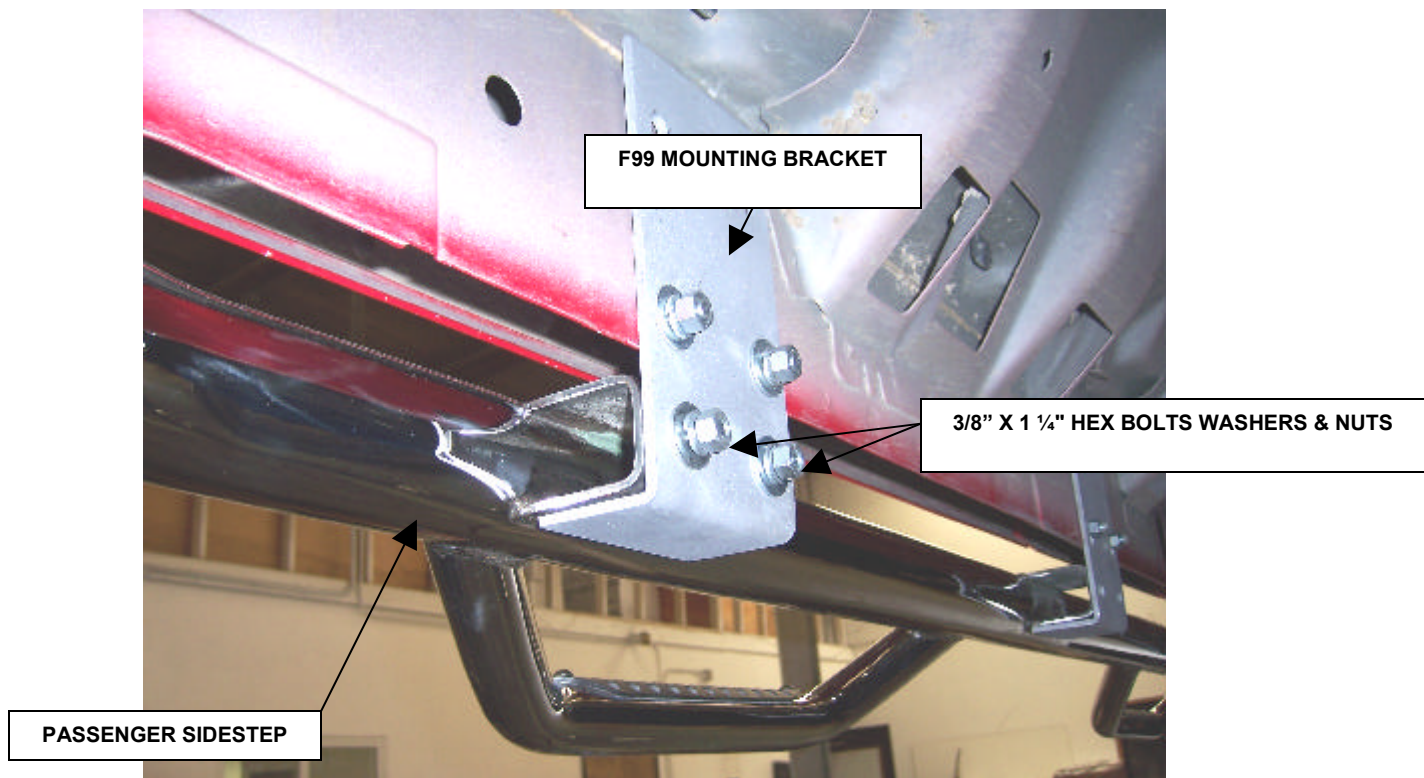

Step 4. Position the passenger sidestep up to the mounting brackets and loosely attach it to the brackets using the 3/8" x 1 1/4" hex bolts, washers and nuts as shown.



Step 5. Align sidestep with the body, and then tighten all mounting bracket and sidestep nuts and bolts.

Step 6. Repeat the above steps to install the driver side mounting brackets and sidestep.

VISIT OUR WEBSITE FOR OUR COMPLETE PRODUCT LINE!

WWW.GORHINO.COM . PH: (888) 427- 4466 . BREA, CALIFORNIA