

Part # 532 1955 - 1957




Hardtop Body Mount Kit


INSTRUCTIONS

Top Of Frame

No Body Mount Used

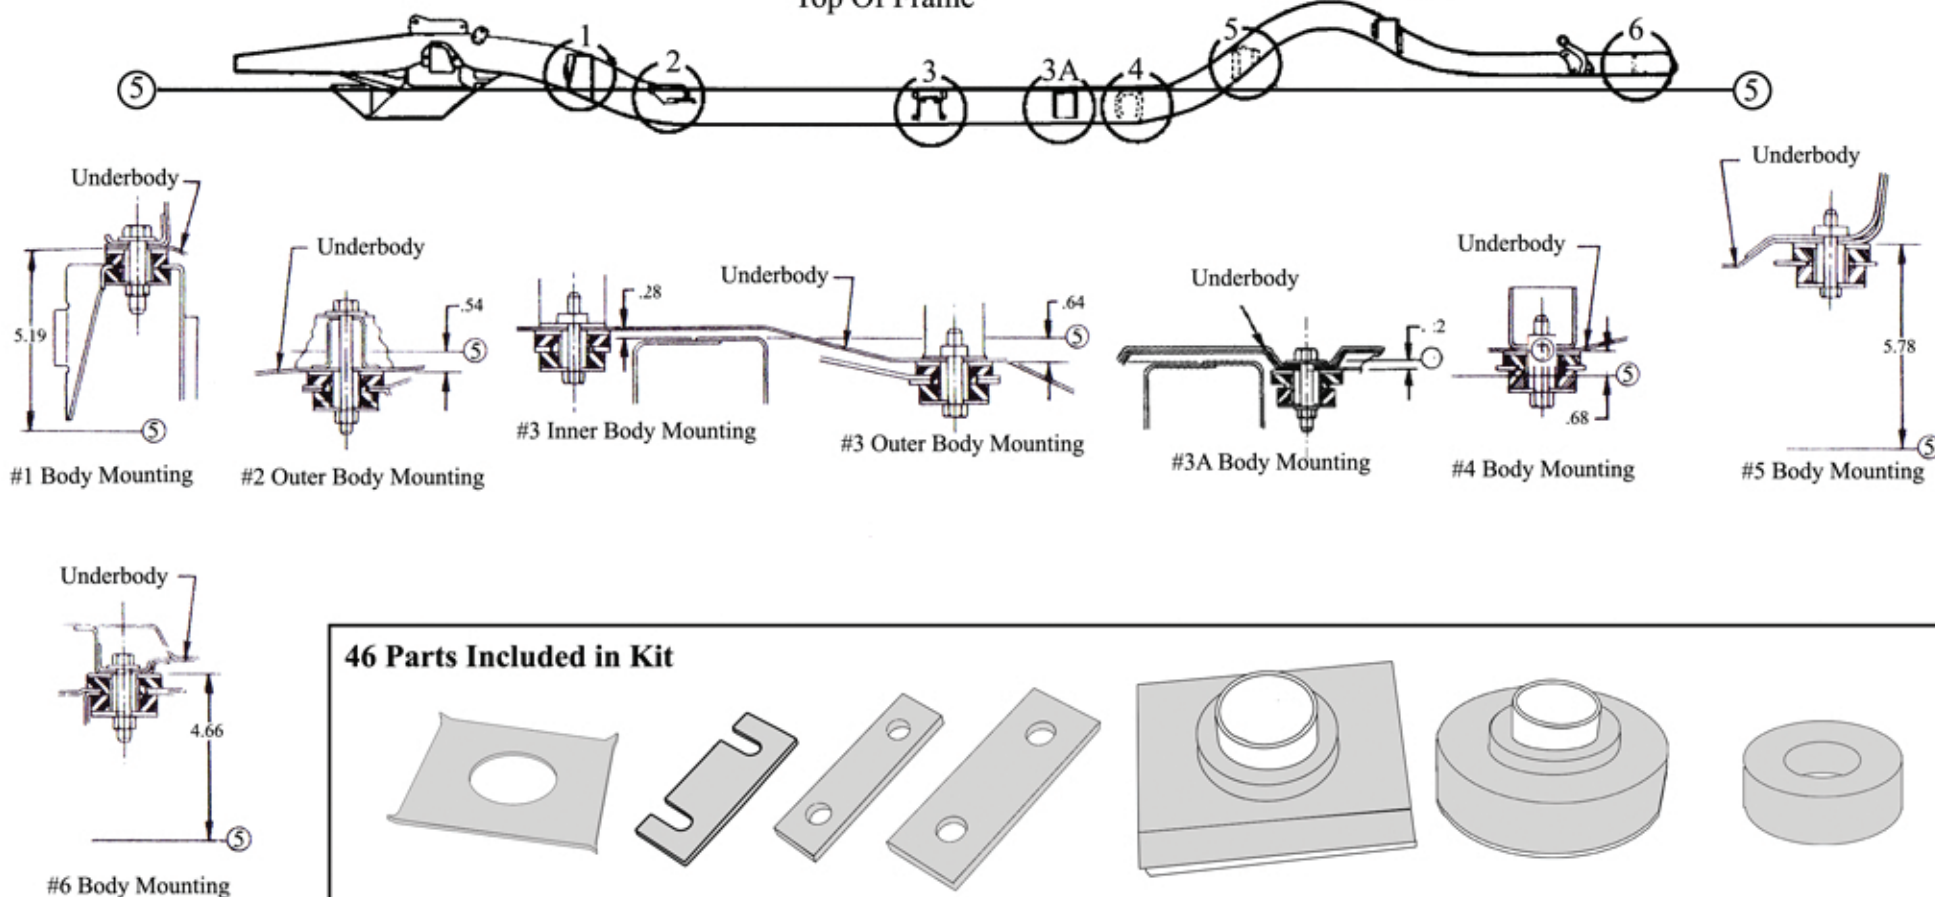

46 Parts Included in Kit

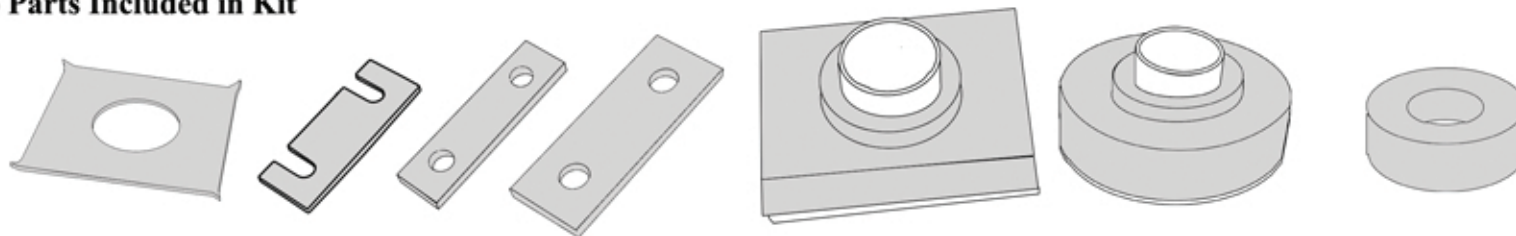

Quantity	10	2	1	1	2	14	16
----------	----	---	---	---	---	----	----

1955 - See Passenger Factory Assembly Instruction Manual # 506. For detailed installation illustrations starting **Section 1 Sheet 16.00 through 27.01.**

1956 - See Passenger Factory Assembly Instruction Manual # 507. For detailed installation illustrations starting **Section 1 Sheet 18.00 through 29.01.**

1957 - See Passenger Factory Assembly Instruction Manual # 508. For detailed installation illustrations starting **Section 1 Sheet 17.00 through 29.00.**