



WINDOW NET MOUNTING KIT PART# C4903

PARTS LIST

- | | |
|------------------------------|----------------------------------|
| (1) Upper Latch & Tube Assy. | (1) Lower Window Net Tube |
| (1) Window Net Latch | (1) Window Net Cable |
| (2) 3/8" Bolts | (1) Cable Ferrule |
| (2) Button Head Screw | (2) Nyloc Nut |
| (1) Roll Pin | (1) Cage Mounted. Latch Bracket. |
| (1) Rear Mounting Bracket. | (2) Lower Tube Mounting Bracket |

INSTALLATION INSTRUCTIONS

1. Determine the location for the Large Rear Mounting Bracket.
2. It may be mounted against the upper inside corner of the roll cage main hoop or to the rear most portion of the horizontal hoop. See Fig (1) A & B Locations
3. Assemble the Upper Latch Tube Assy. by Attaching the Window Net Latch to the Upper Latch Tube utilizing the Button Head Screws and corresponding Loc Nuts.
4. Hold the Upper latch assembly up to the Roll Cage to determine which of these two mounting points you prefer.

NOTE: The window net should be forward enough to prevent your arms from being out side the vehicle in any incident.

5. Slide the Cage Mounted Latch Bracket into the Upper Tube Assy. Use the Window Net Latch to hold it in place.
6. With the Upper Tube Assy. Slid into the Rear Mounting Bracket (A minimum of 1") and the Window Net Latch facing the inside of the car, find the location that the Cage Mounted Latch Bracket contacts the roll cage and tack weld in place.
7. Remove Upper Latch and Tube Assy., install window net on Assy.
8. Re-Install Upper Latch and Tube Assy. with window net.
Install the Lower Window Net Tube and Attach the Lower Tube Mounting Brackets (2-sm brackets) with the 3/8" Bolts included in this kit.
9. Tack weld the Mounting Brackets to the roll cage side bar.

NOTE: Tightening of the window net can be achieved by moving the Lower Tube Mounting brackets to the inside of the side bar and tacking them there instead of on the top of the bar.


10. Mark the tube of the Upper Latch and Tube Assy. 1/2" behind the Large Rear Mounting Bracket. This will be where the 3/16" Roll Pin will be installed.

NOTE: Drill the hole so that it will not be in alignment with the slot in the Large Rear Mounting Bracket.

NOTE: Make sure the pin sticks through one side of the bar ONLY.

11. Finish-weld all Brackets. The 6-1/4" Cable supplied in this kit is used to prevent the window net from sliding up the Lower Window Net Tube. To install, drill a 1/8" hole in the front Lower Tube Mounting Bracket.

12. Place the cable through the hole and the front portion of the window net.
13. It will be necessary to strip the plastic coating from the outside of the cable in order to slide the ferrule over the cable.
14. Slide the ferrule on the cable and crimp in place.

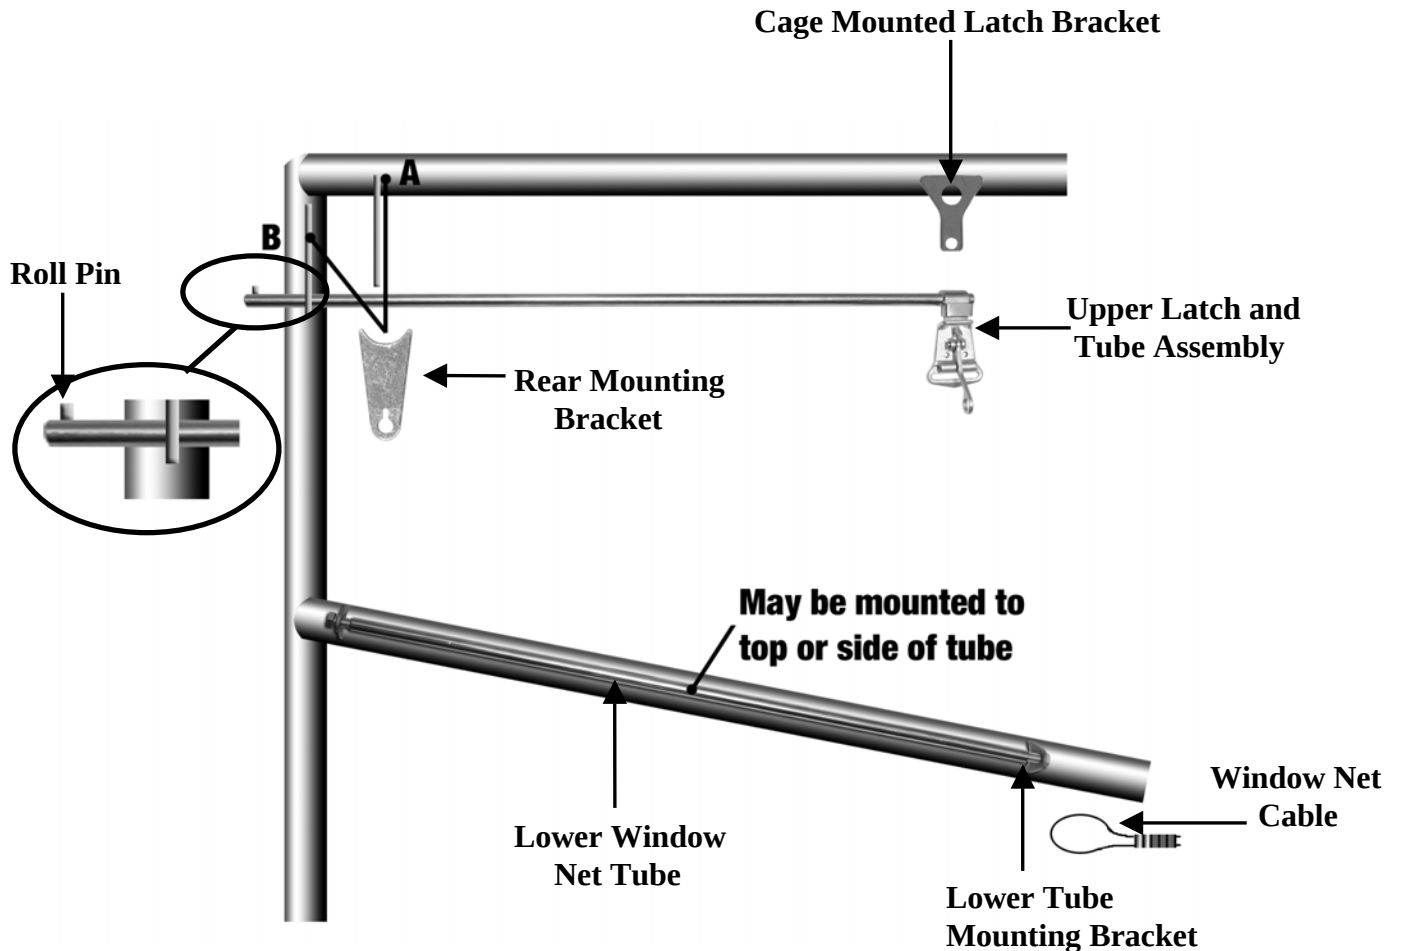

***For Technical Assistance, call Competition Engineering's Tech Line at
(203) 458-0542, 8:30am-5:00pm Eastern Time***

COMPETITION ENGINEERING
80 Carter Drive • Guilford, CT 06437
Phone: (203) 453-5200 • Fax: (203) 453-6906