




**CE-9807FBSK 2007 & up Jeep JK
Front Bump Stop Kit
Installation Instructions**

Kit includes:

- 2) CE-9807FBS - Black Urethane Bump Stops
- 2) CE-9807FBSS - 1" Aluminum Spacers
- 2) EE-5040CH5 - 1/2"-13 x 2.5" Bolts
- 2) EE-50WSAEH - 1/2" Flat Washers
- 2) EE-50WS - 1/2" Lock Washers

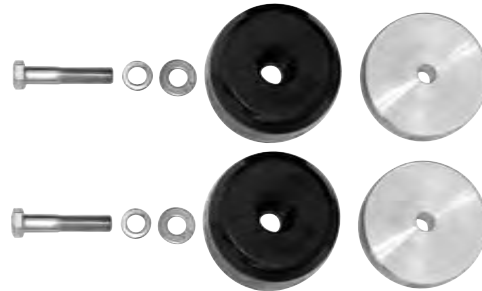

Instructions:

1. Drill center of the lower spring bucket using a 7/16 drill.
2. Tap hole with a 1/2"-13 tap.



3. When installing springs, insert the bump stop and spacer inside the spring prior to installation. Install spring then insert bolt and washers through spring and bolt bump stop kit down (use red loc-tite).



RockJock4x4/Currie Enterprises -1480 N. Tustin Ave., Anaheim, Ca. 92807
Ph (714) 528-6957 - F (714) 528-2338 - www.rockjock4x4.com