


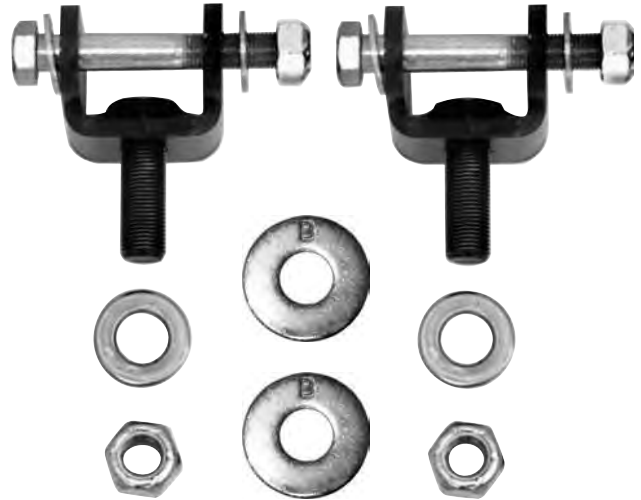

CE-9807FSRK 2007 & up Jeep JK Front Shock Relocator Kit Installation Instructions

Kit includes:

- 2) CE-9807FSRB - Front Shock Relocator Brackets
 - 2) EE-5144CH5 - 1/2"-20 x 2.75" Bolts
 - 2) EE-51ALNC - 1/2"-20 Stover Nuts
 - 4) EE-50WSAEH - 1/2" Washers
 - 2) EE-62WSAEH - 5/8" Washers
 - 2) EE-63NS - 5/8" Nylock Nuts
 - 2) EE-50WUSS9 - Thick Flat Washer - 1/2" x 1 3/8"
- *(Required for use with some shocks as a spacer.)




Instructions

1. Install shock relocator bracket on factory shock mount.



2. When installing the shocks, install nut towards the front of the vehicle.

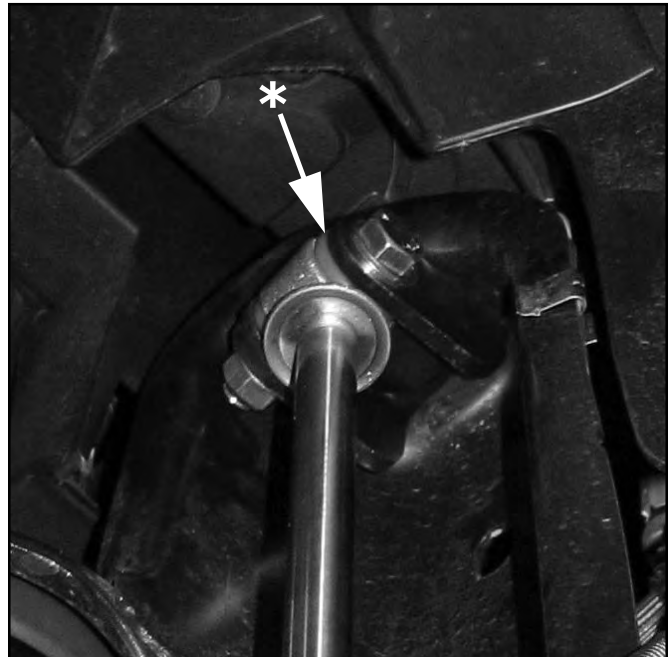

RockJock4x4/Currie Enterprises - 1480 N. Tustin Ave., Anaheim, Ca. 92807
Ph (714) 528-6957 - F (714) 528-2338 - www.rockjock4x4.com