

**INSTALLATION INSTRUCTIONS FOR
DYNOMAX TIP KIT: 88344**

2011 Chevrolet/GMC Silverado/Sierra 2500HD,
3500 6.6L, Diesel



2701 N. Dettman Rd.
Jackson, MI 49201


DANGER WARNING: SHOULD THE PURCHASER DECIDE TO INSTALL ANY EXHAUST PRODUCT AT HOME, BE WARNED THAT PASSENGER CAR OR LIGHT DUTY TRUCK/VAN "BUMPER" JACKS ARE INTENDED FOR EMERGENCY USE ONLY. THE USE OF FRAME CONTACT JACK STANDS IN CONJUNCTION WITH A FLOOR JACK AS MAIN SUPPORT IS HIGHLY RECOMMENDED TO MINIMIZE ACCIDENTAL DROPPING OF A VEHICLE DURING THE INSTALLATION PROCESS.

NOTE: Read all instructions before starting any work.

1. Cut the OE tail pipe assembly after the last bend and just before the last weld area. Cutting at this point will allow enough room to clamp the DynoMax tip extension pipe and SS tip.



2. Install DynoMax extension pipe **52487**. Use the 4" band clamp to tighten the OE tail pipe.
3. Install DynoMax SS tip **36483** using the 5" band clamp. Position the tip to suit appearance.
4. Beginning at the inlet end, align the extension pipe and tip and fully tighten the all clamps.

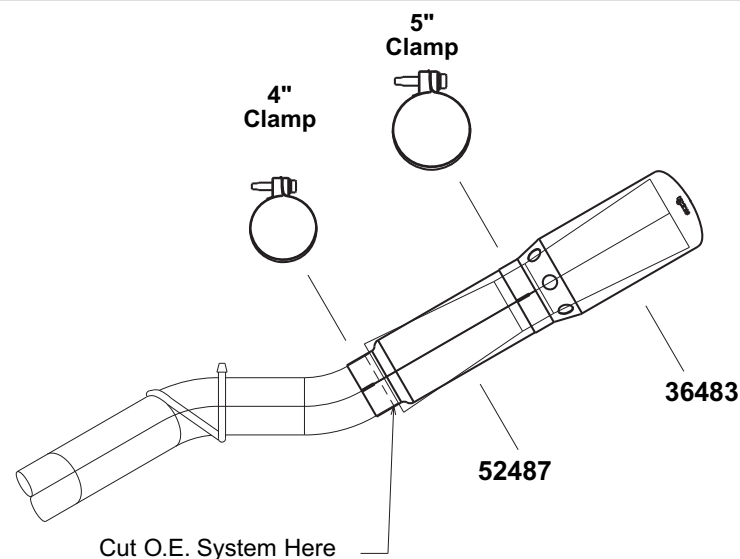

DynoMax Components in Bold Outline

KIT CONTAINS:

- (1) **52487 EXTENSION PIPE**
- (1) **36483 SS TIP**
- (1) **4" BAND CLAMP**
- (1) **5" BAND CLAMP** (Included with tip)
- (1) **711359 INSTRUCTION SHEET**