


## GENUINE ACCESSORIES

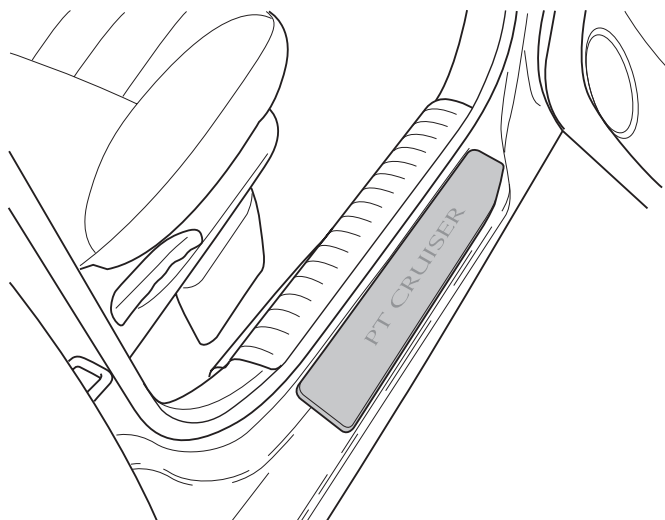

|            |                                                          |
|------------|----------------------------------------------------------|
| <b>GB</b>  | INSTALLATION INSTRUCTION <b>SCUFF PLATES</b>             |
| <b>D</b>   | EINBAUANLEITUNG <b>EINSTIEGSLEISTE</b>                   |
| <b>E</b>   | INSTRUCCIONES DE MONTAJE <b>MOLDURA DE ENTRADA</b>       |
| <b>F</b>   | INSTR. DE MONTAGE <b>BANDE D'ENCADREMENT DE PORTIÈRE</b> |
| <b>I</b>   | ISTRUZIONI DI MONTAGGIO <b>LISTELLO DELL'ENTRATA</b>     |
| <b>P</b>   | INSTR. DE MONTAGEM <b>FOLHA PROTECTORA DE ENTRADA</b>    |
| <b>NL</b>  | INBOUW-INSTRUCTIE <b>DREMPELLIJST</b>                    |
| <b>DK</b>  | MONTERINGSVEJLEDNING <b>FODPANELLISTE</b>                |
| <b>N</b>   | MONTERINGSVEILEDNING <b>STIGBRETTLIST</b>                |
| <b>S</b>   | MONTERINGSANVISNING <b>TRÖSKELSKENA</b>                  |
| <b>FIN</b> | ASENNUSOHJE <b>KYNNYSLISTA</b>                           |
| <b>CZ</b>  | NÁVOD K MONTÁŽI <b>NÁSTUPNÍ LIŠT</b>                     |
| <b>H</b>   | BESZERELÉSI UTASÍTÁS <b>KÜSZÖBLEMEZ</b>                  |
| <b>PL</b>  | INSTRUKCJA INSTALOWANIA <b>LISTWA PROGOWA</b>            |
| <b>GR</b>  | Οδηγίες Τοποθέτησης <b>ΠΗΧΗΣ ΕΠΙΒΙΒΑΣΗΣ</b>              |

Subject to alteration without notice  
 Technische Änderungen vorbehalten  
 Reservadas modificaciones técnicas  
 Sous réserve de modifications techniques  
 Con riserva di apportare modifiche tecniche  
 Reservamo-nos o direito a alterações técnicas  
 Technische wijzigingen voorbehouden  
 Med forbehold for tekniske ändringer  
 Tekniske forendringer forbeholdes  
 Med reservation för tekniska ändringar  
 Tekniset muutokset pidätetään  
 Technické zmeny vyhrazeny  
 A változtatások technika jogát fenntartjuk  
 Zmiany techniczne zastrzeżone  
 Επιφύλασσόμεθα για αλλαγές

Expert Fitment Required  
 Montage durch Fachwerkstatt erforderlich  
 Montaje sólo por el concesionario  
 Montage par spécialiste nécessaire  
 E' necessario in officina specializzata  
 Especialista em montagem requerido  
 Montage door vakman nodig  
 Montage ved professionelt værksted påkrævet  
 Nødvendig med montering fra fagvejverksted  
 Verkstadsmontage erfordras  
 Asennus tarpeen merkkikorjaamossa  
 Montáž ve specializované dílně nutná  
 A szereléshez szakműhely kell  
 Konieczny montaż przez warsztat specjalistyczny  
 Να τοποθετεί από συνεργείο


04-2000

K6858321

© DAIMLERCHRYSLER


## GENUINE ACCESSORIES

1x

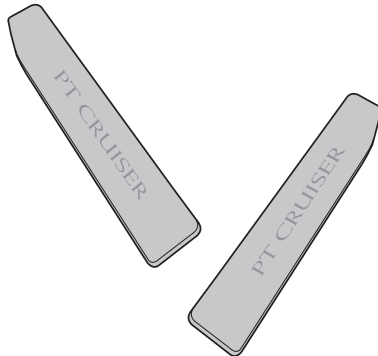


A


1x




B

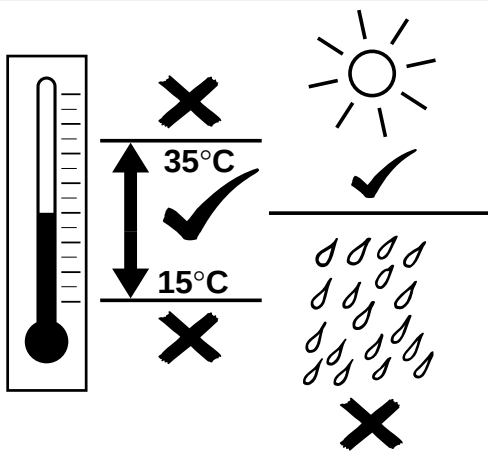




1

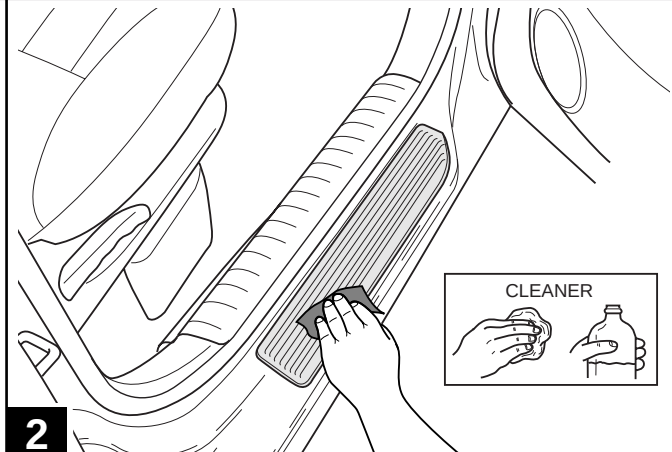


2

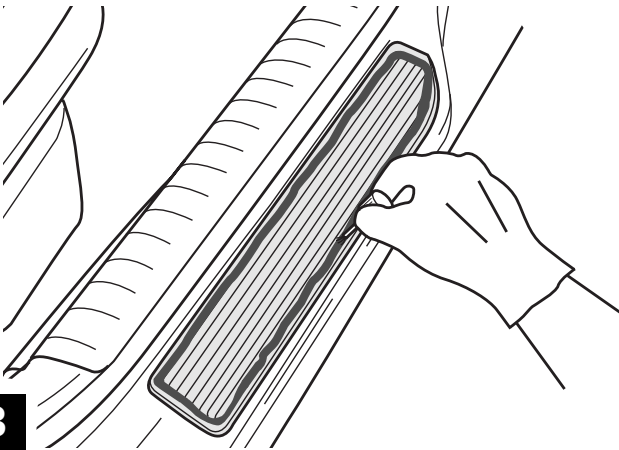

3

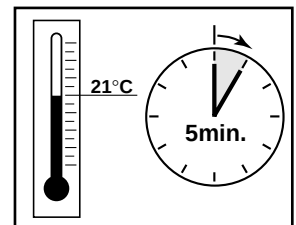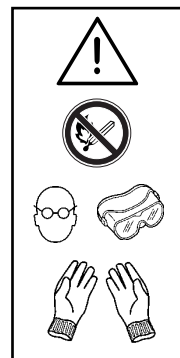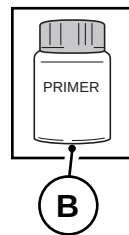

4

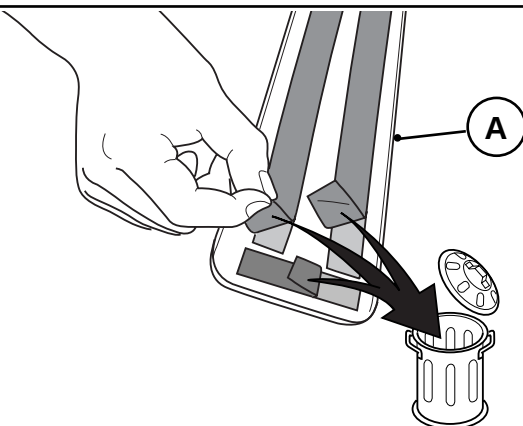

5

