


THIS KIT DOES NOT FIT MODEL 3500 (4X2) WITH 2WD FRAME

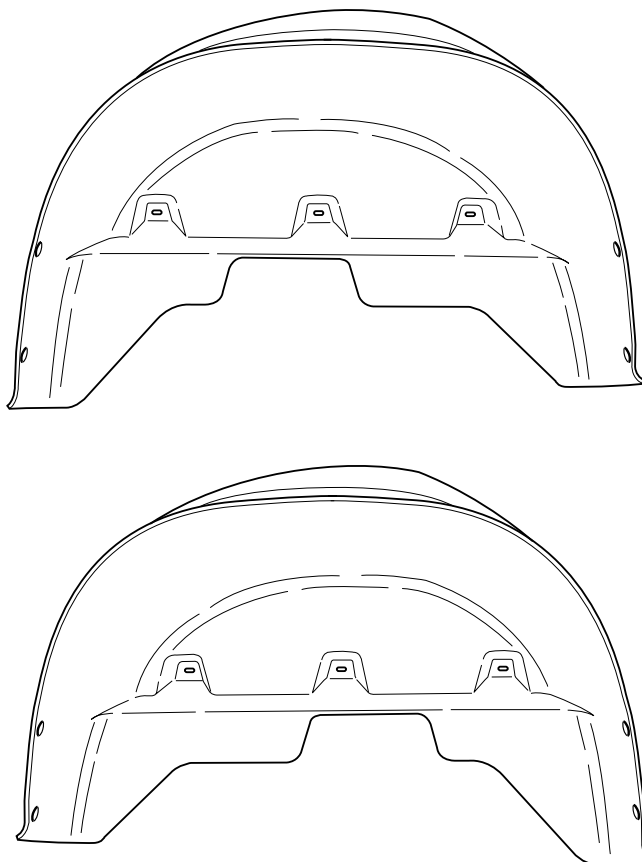

GB

INSTALLATION INSTRUCTION

REAR WHEELHOUSE LINERS

E

INSTRUCCIONES DE MONTAJE

SUPLEMENTOS DE AJUSTE DEL GUARDAFANGO

F

NOTICE DE MONTAGE

DOUBLURES DE PASSAGE DE ROUES ARRIÈRE


Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques

Expert Fitment Required
Montaje sólo por el concesionario
Montage par spécialiste nécessaire


10-19-2006

K6860268


© DAIMLERCHRYSLER

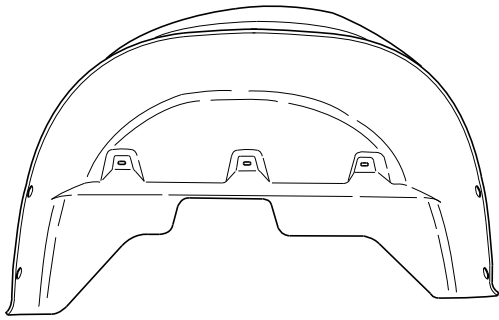


A

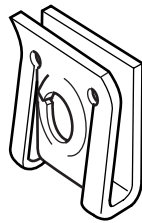


B 8x

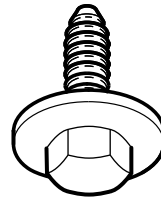


C 14x

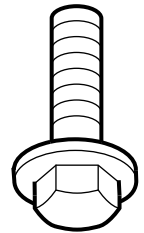


D 6x

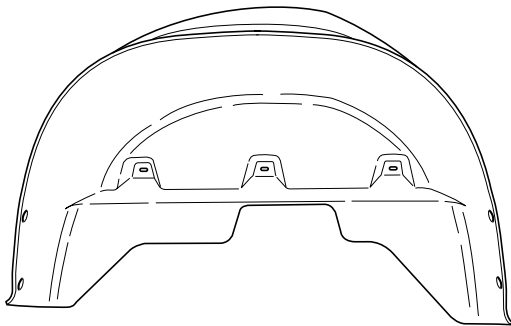





F

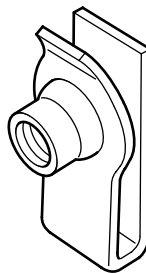

E 6x

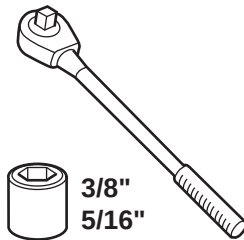

3/8"
5/16"

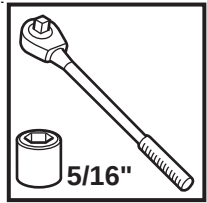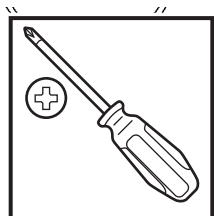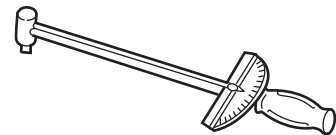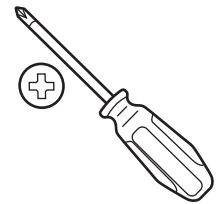


5/16"


FRONT OF VEHICLE
PARTE DELANTERA
DEL VEHÍCULO
AVANT DU VÉHICULE



1 2x

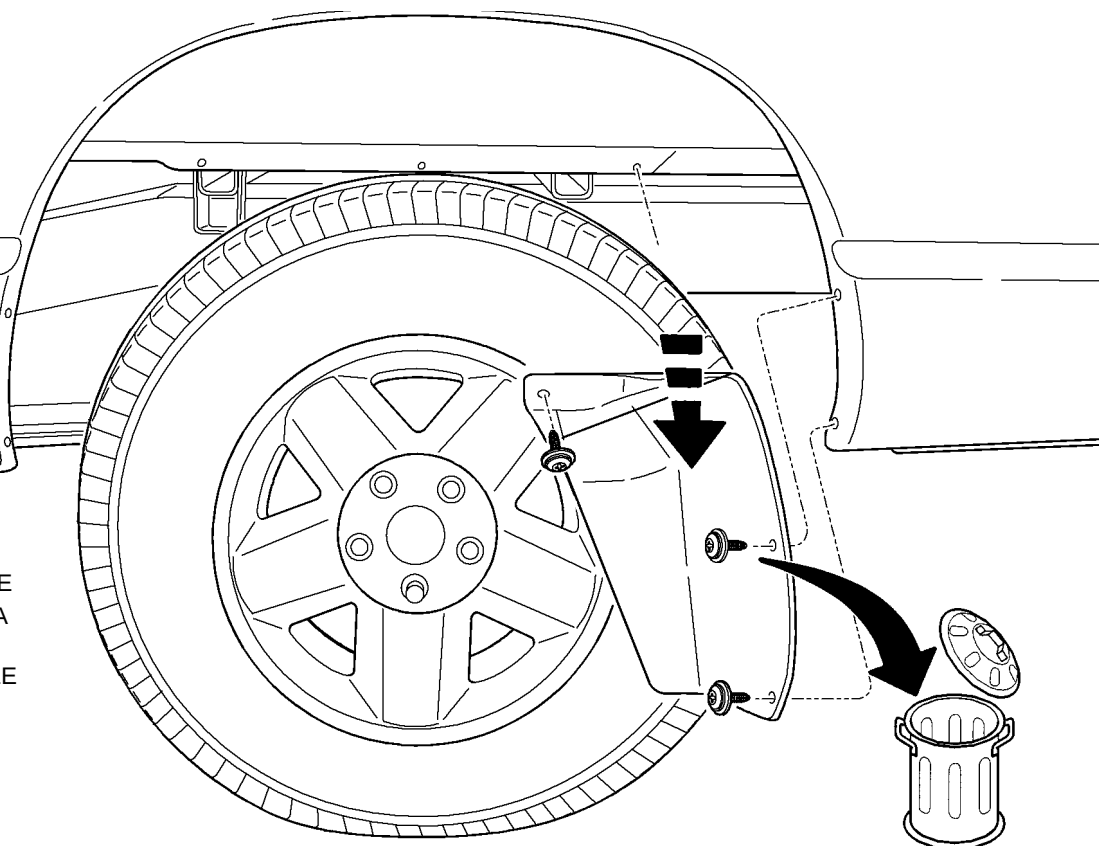


THIS KIT DOES NOT FIT MODEL 3500 (4X2) WITH 2WD FRAME

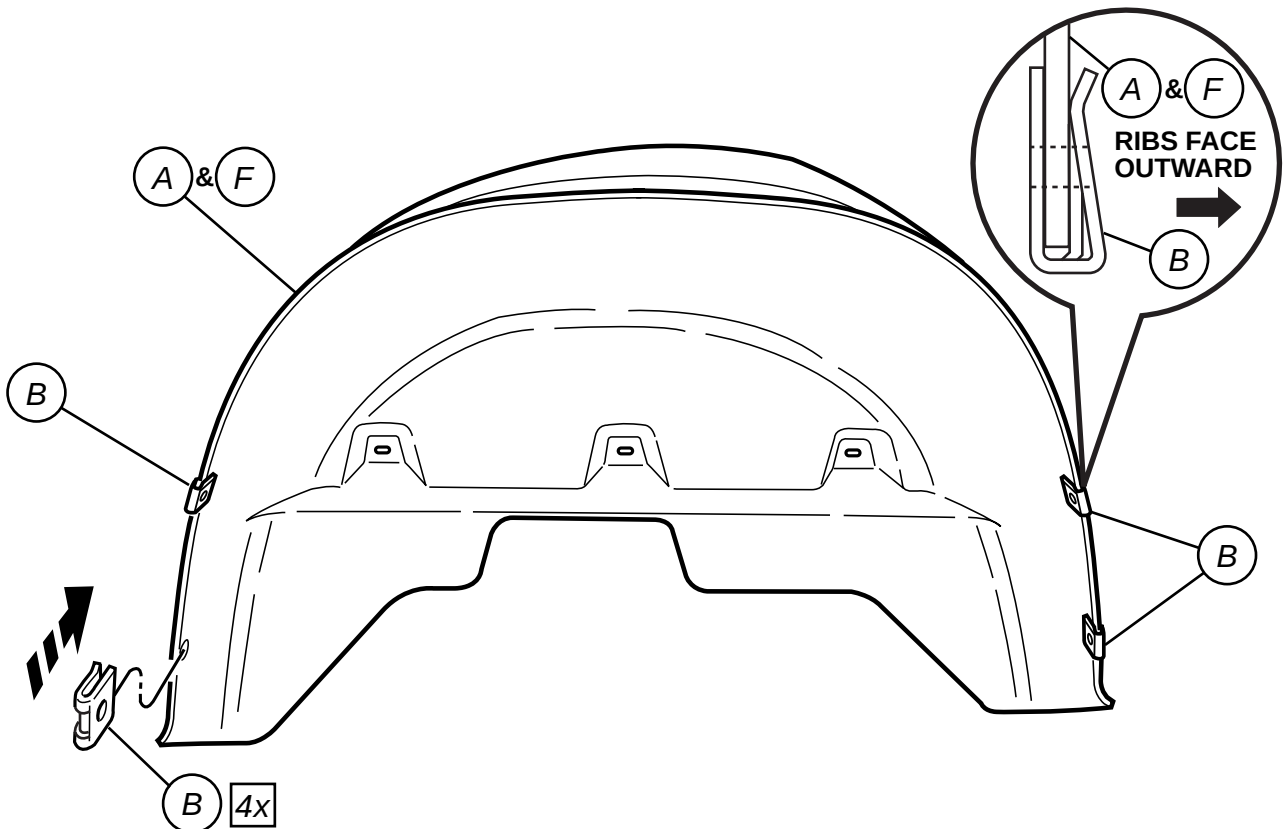

2

TRUCK BODY WITH PIERCED HOLES UTILIZE SELF-TAPPING BOLTS "C"


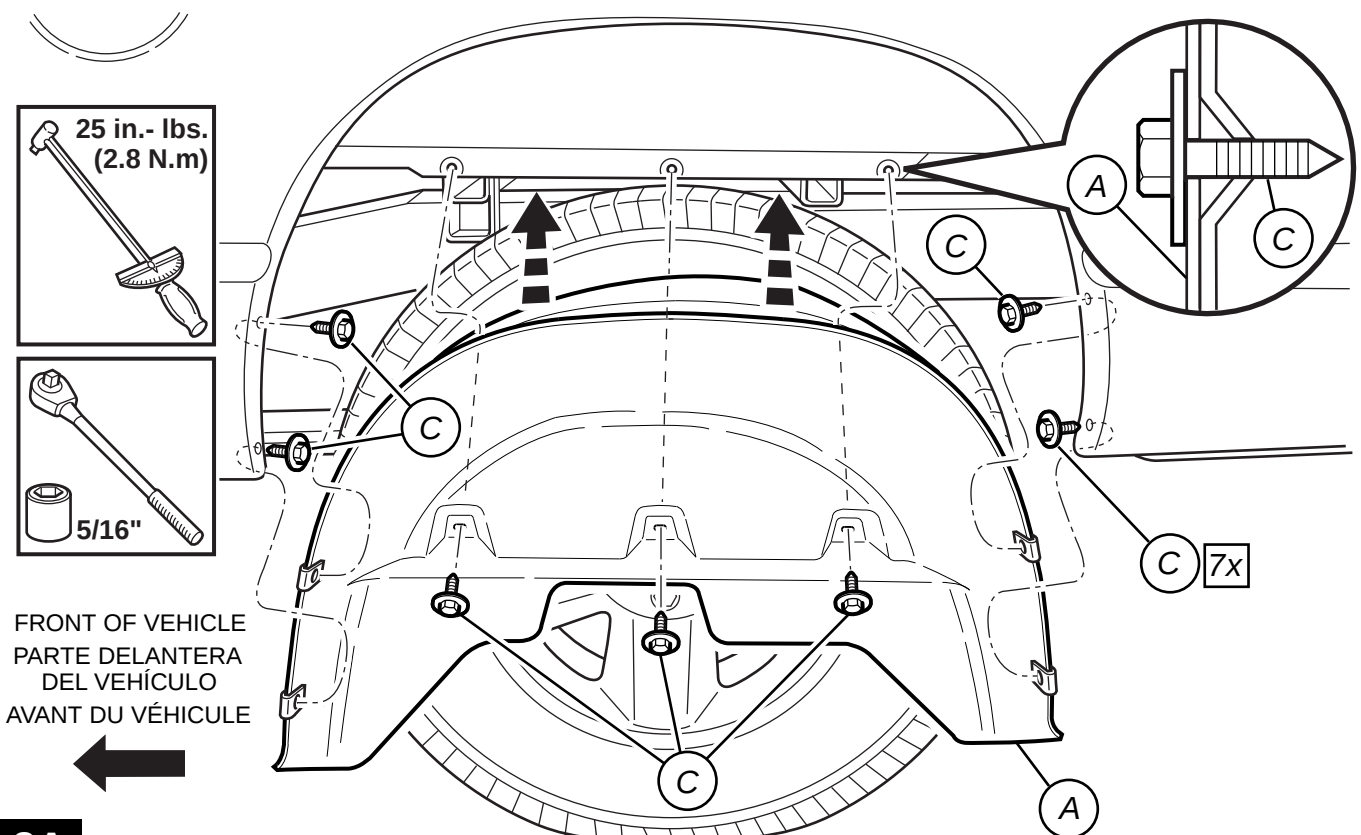


FRONT OF VEHICLE
PARTE DELANTERA
DEL VEHICULO
AVANT DU VEHICULE


3A

SAME PROCEDURE APPLIES TO OPPOSITE SIDE USING LINER "F"

**TRUCK BODY WITH PUNCHED HOLES UTILIZE U-NUTS "E",
BOLTS "D" AND SELF-TAPPING BOLTS "C"**

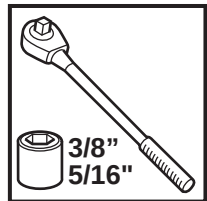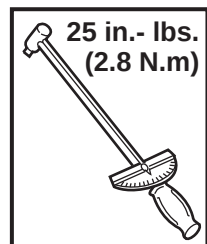

FRONT OF VEHICLE
PARTE DELANTERA
DEL VEHÍCULO
AVANT DU VÉHICULE

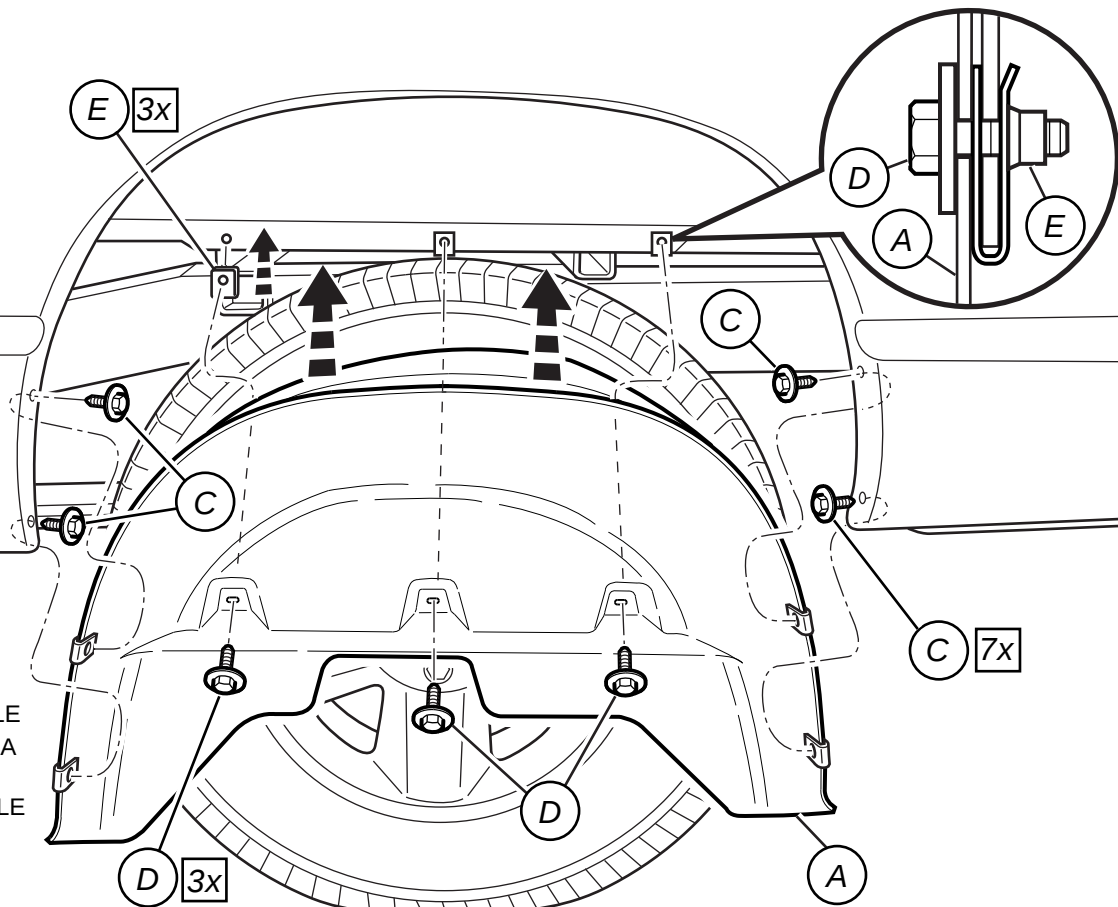

3B

SAME PROCEDURE APPLIES TO OPPOSITE SIDE USING LINER "F"