


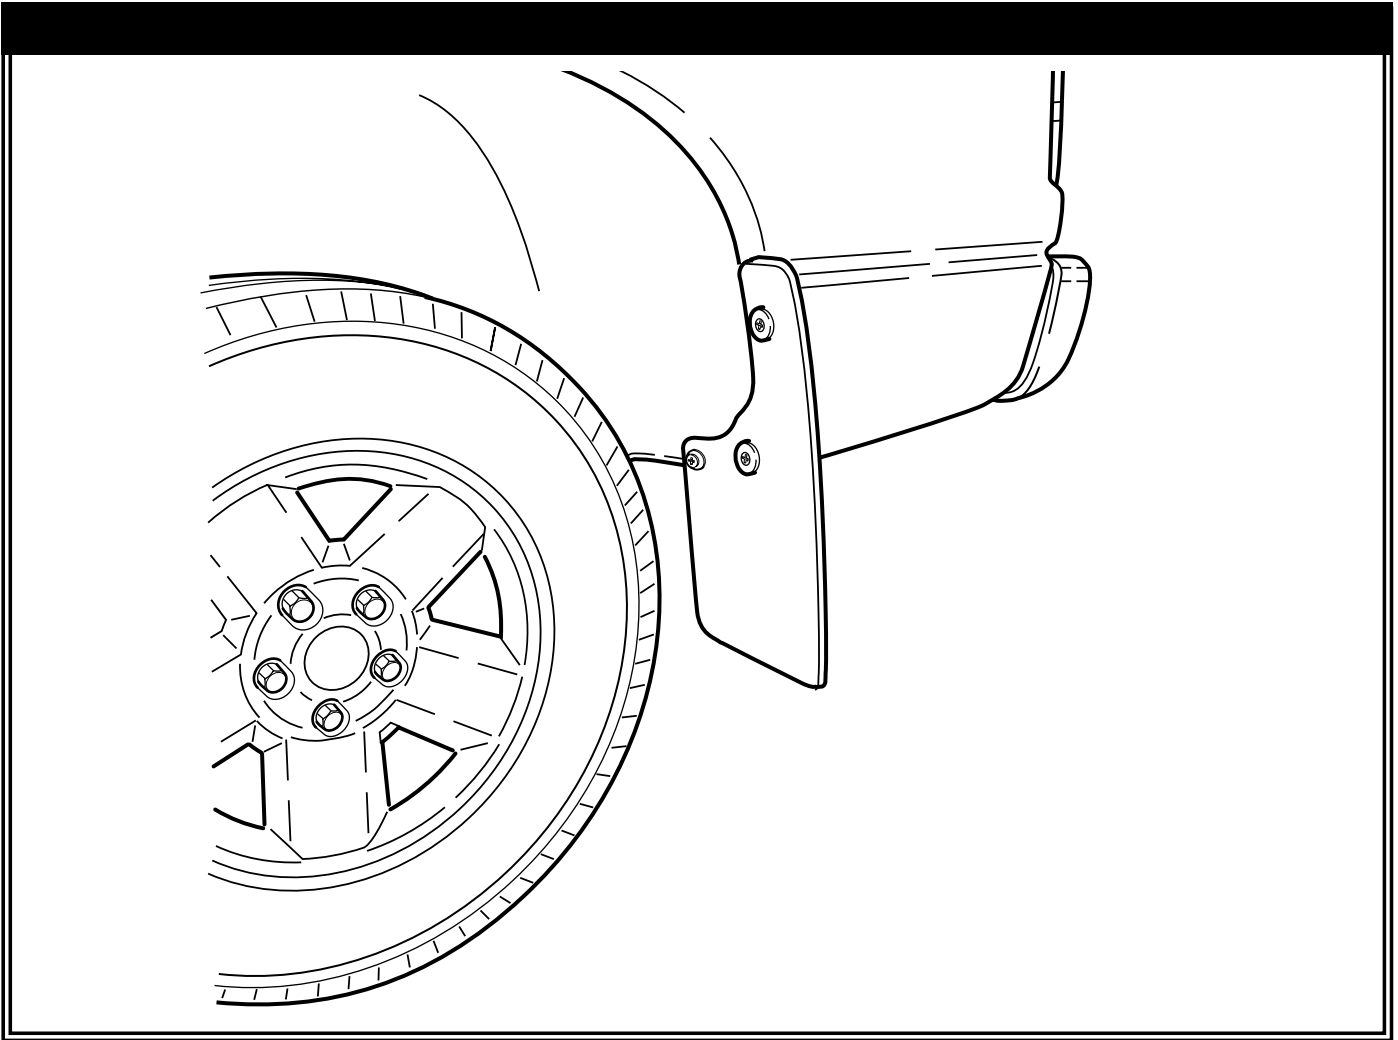

GB

INSTALLATION INSTRUCTION REAR FLAT RUBBER SPLASH GUARDS

E

INSTRUCCIONES DE MONTAJE GUARDABARROS TRASEROS DE GOMA - PLANOS

F








NOTICE DE MONTAGE BAVETTES GARDE-BOUE PLATES EN CAOUTCHOUC ARRIÈRE


Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques

Expert Fitment Required
Montaje sólo por el concesionario
Montage par spécialiste nécessaire

06-12-2001 K6858526


© DAIMLERCHRYSLER

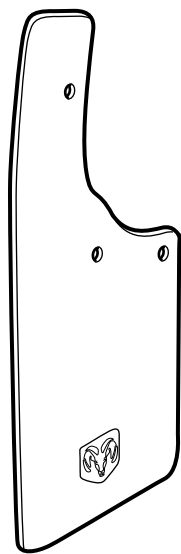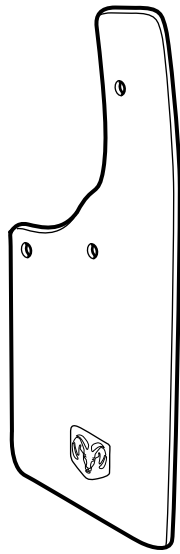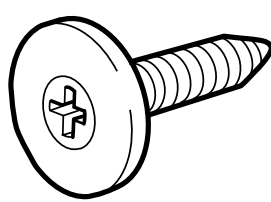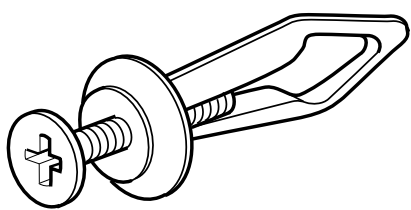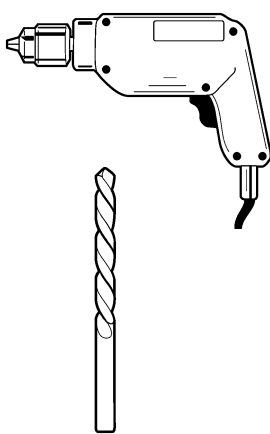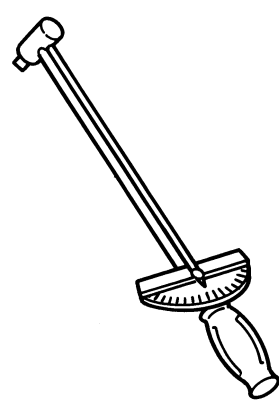 A L	 B R			
 C 4x	 D 2x			
 3/16"	 T25			

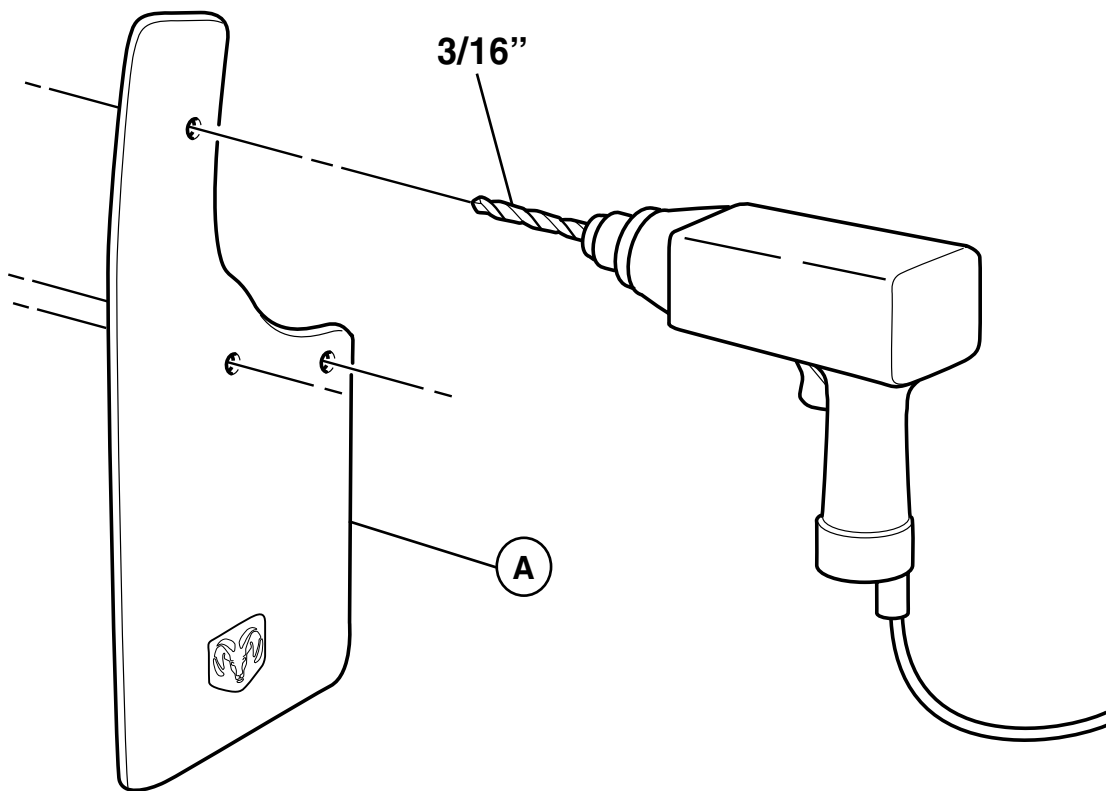


L/R

1

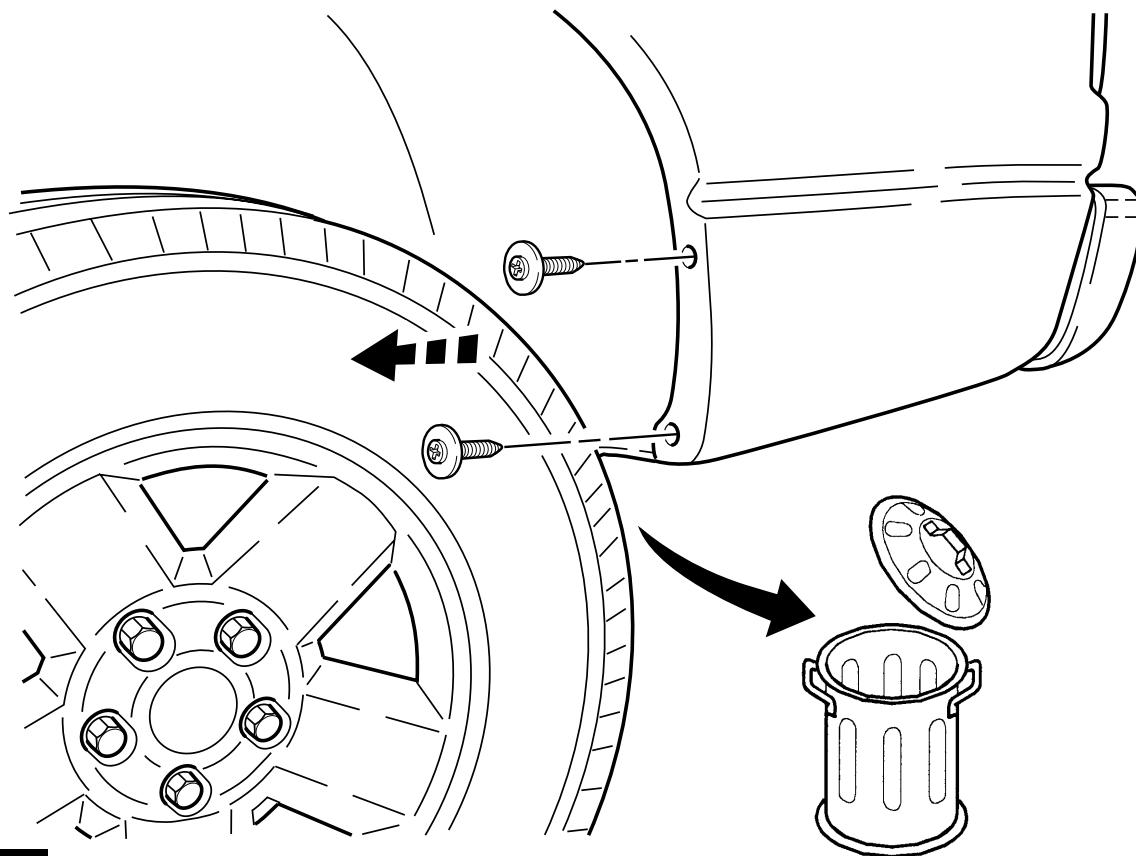


L/R

2

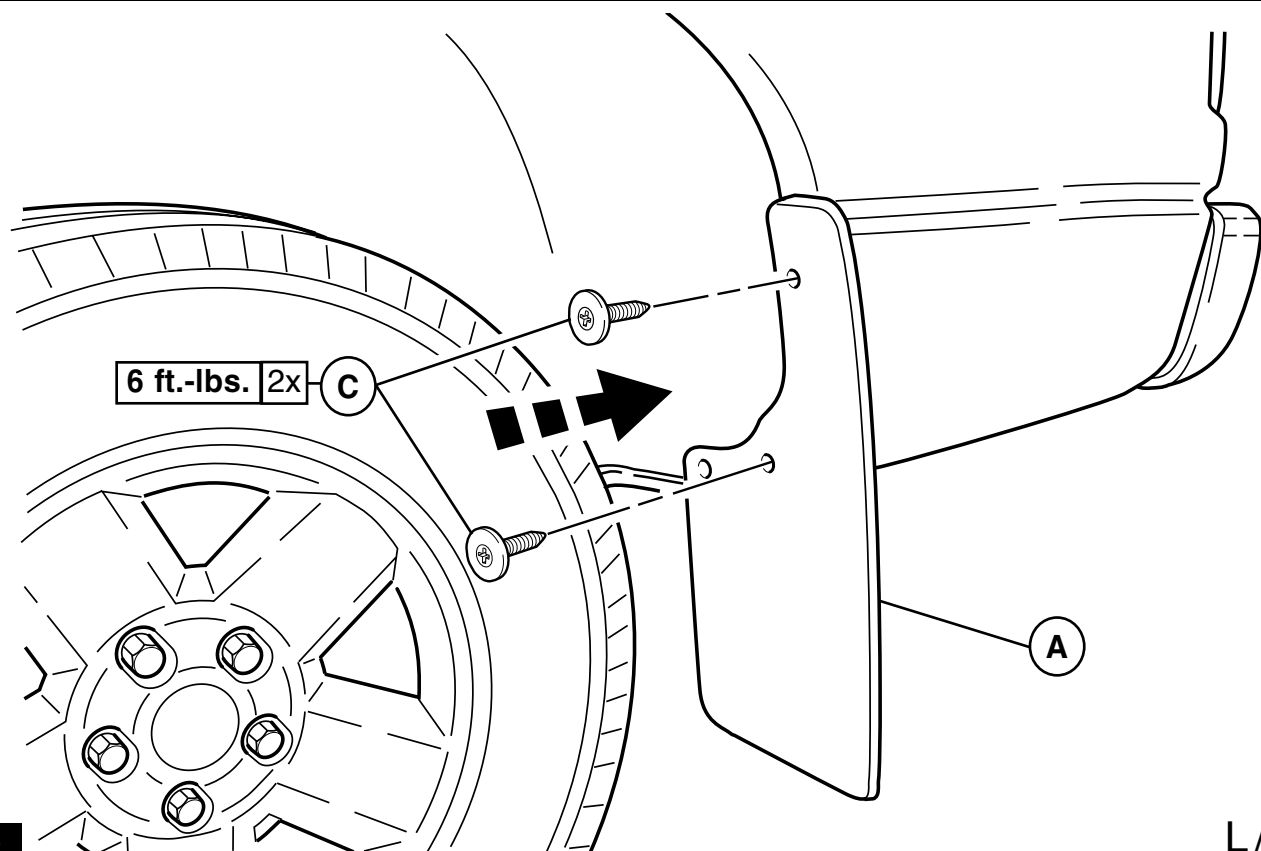


3

L/R

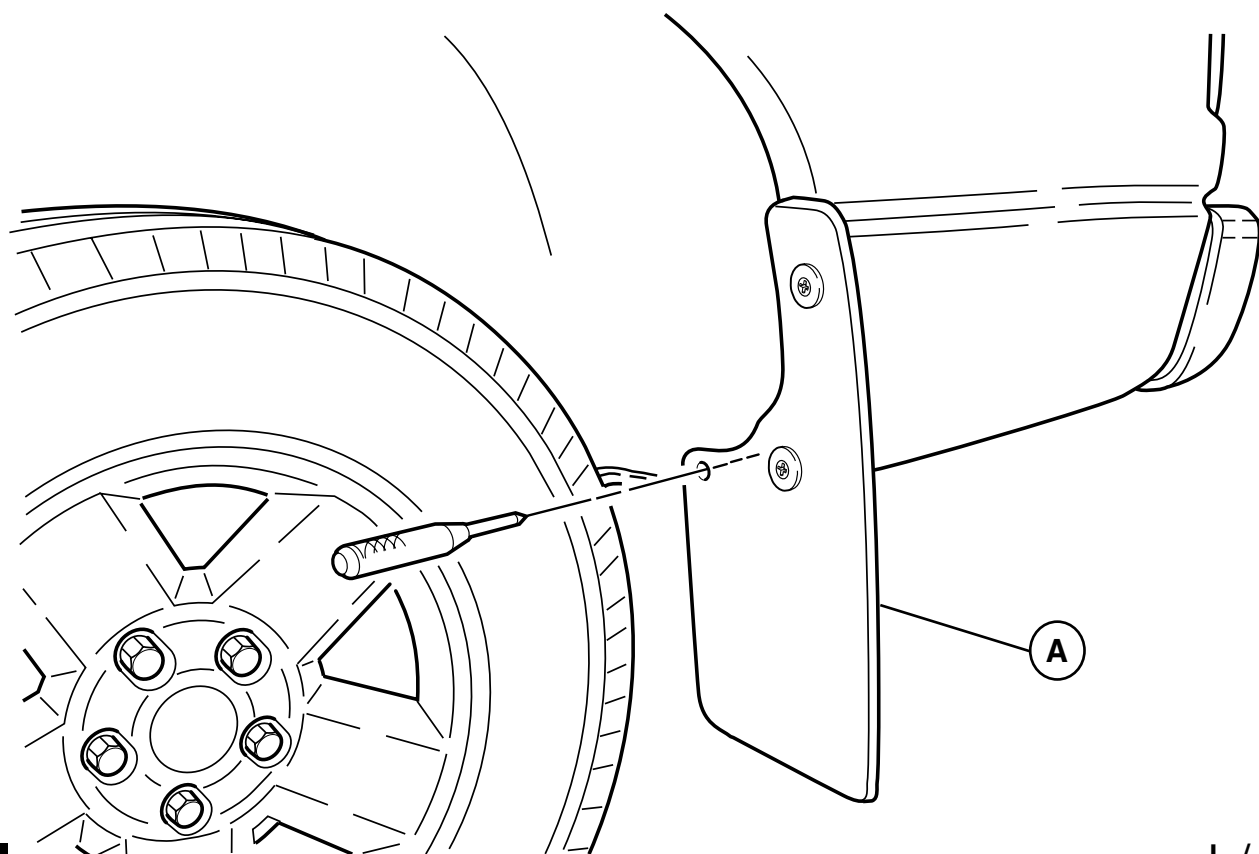


4

L/R

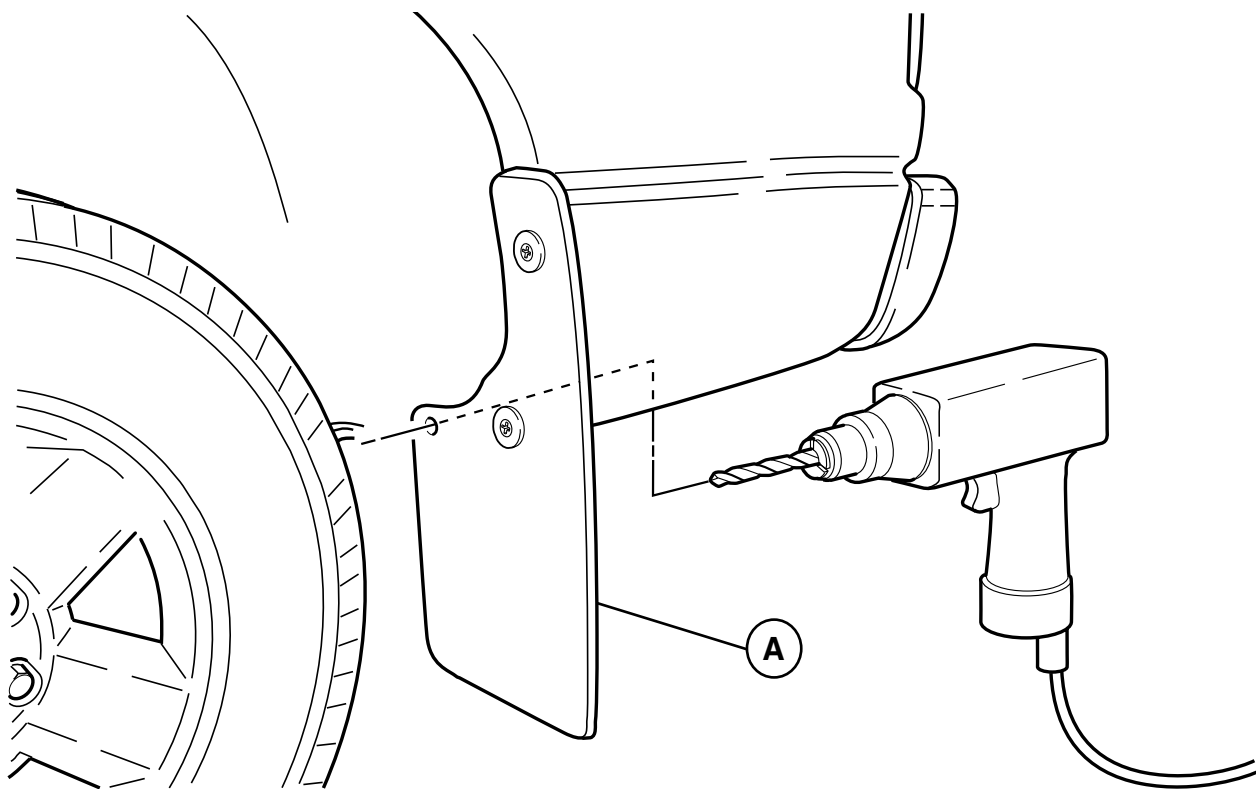

5

L/R

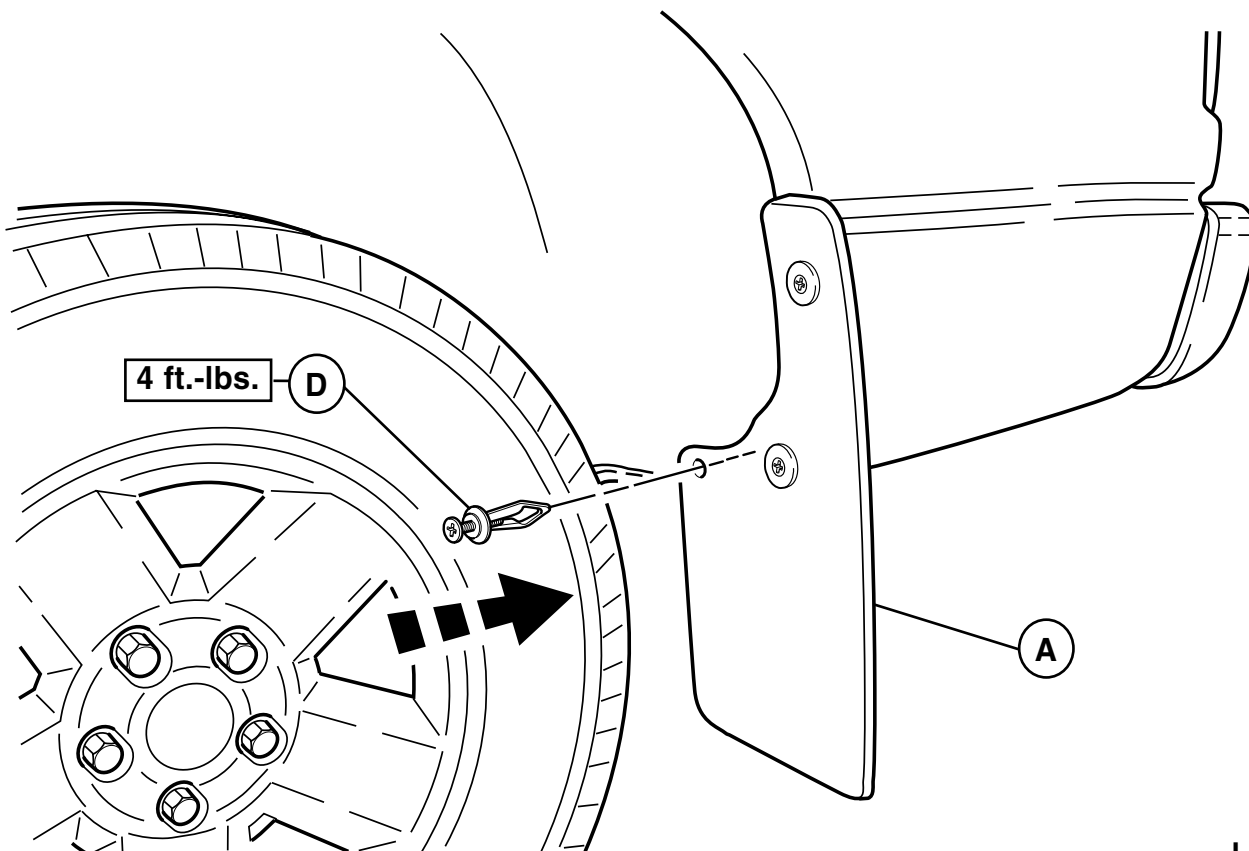

6

L/R