


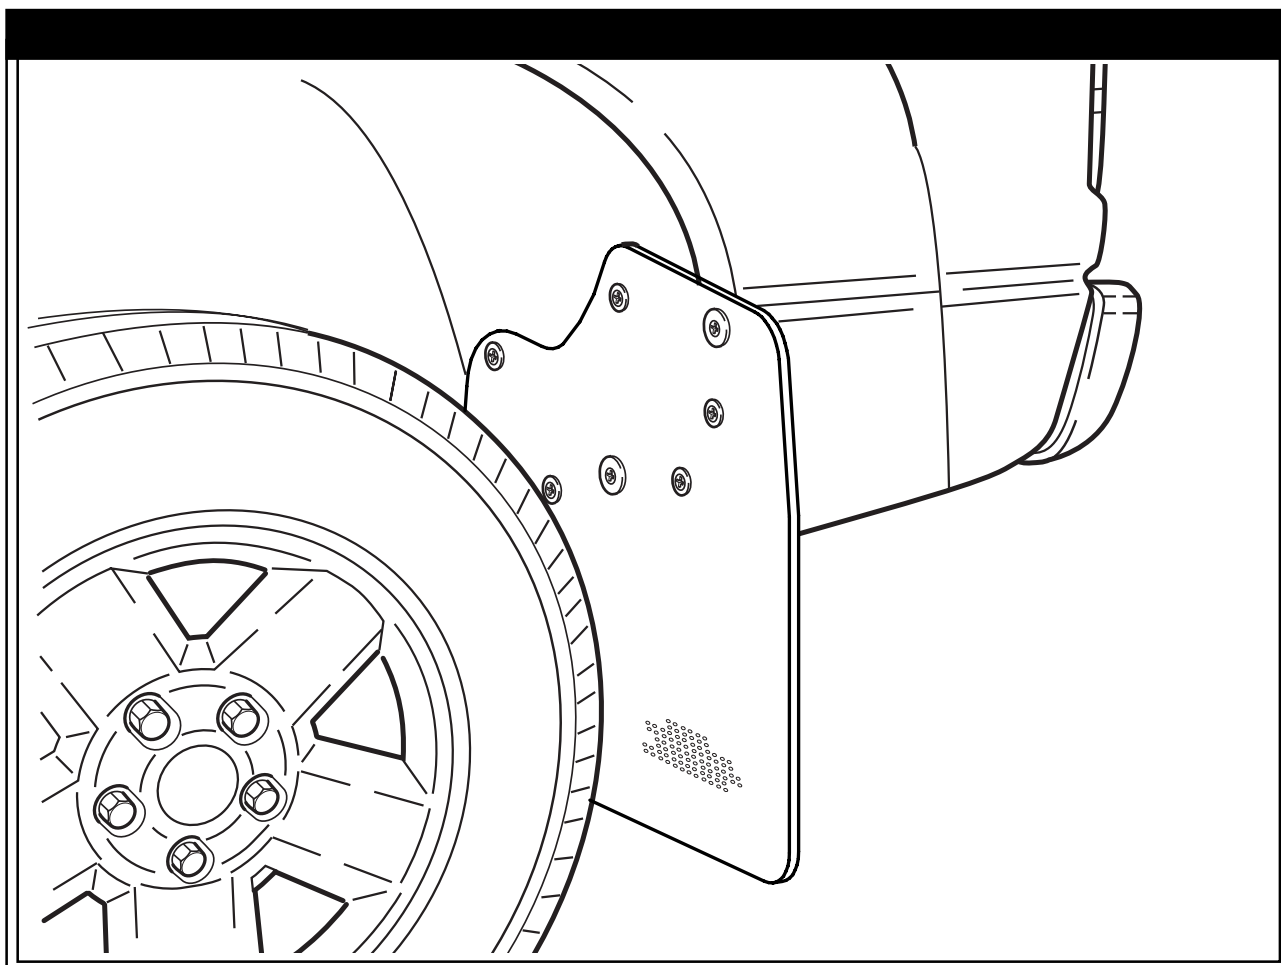

GB

INSTALLATION INSTRUCTIONS REAR FLAT RUBBER SPLASH GUARDS

E

INSTRUCCIONES DE MONTAJE GUARDABARROS TRASEROS DE GOMA - PLANOS

F


NOTICE DE MONTAGE BAVETTES GARDE-BOUE PLATES EN CAOUTCHOUC ARRIERE

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques


Expert fitment required
Montaje solo por el concesionario
Mantaje par spécialiste necesarie

04-29-02 K6858612


© DAIMLERCHRYSLER

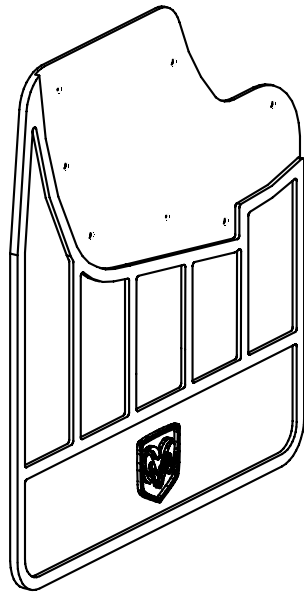


A 1X

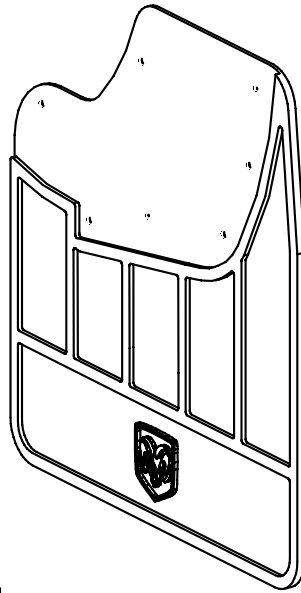


B 1X

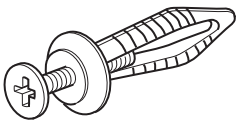

C 6X

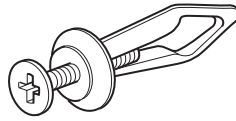



D 4X



E 4X






8mm

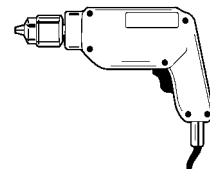


1/4"



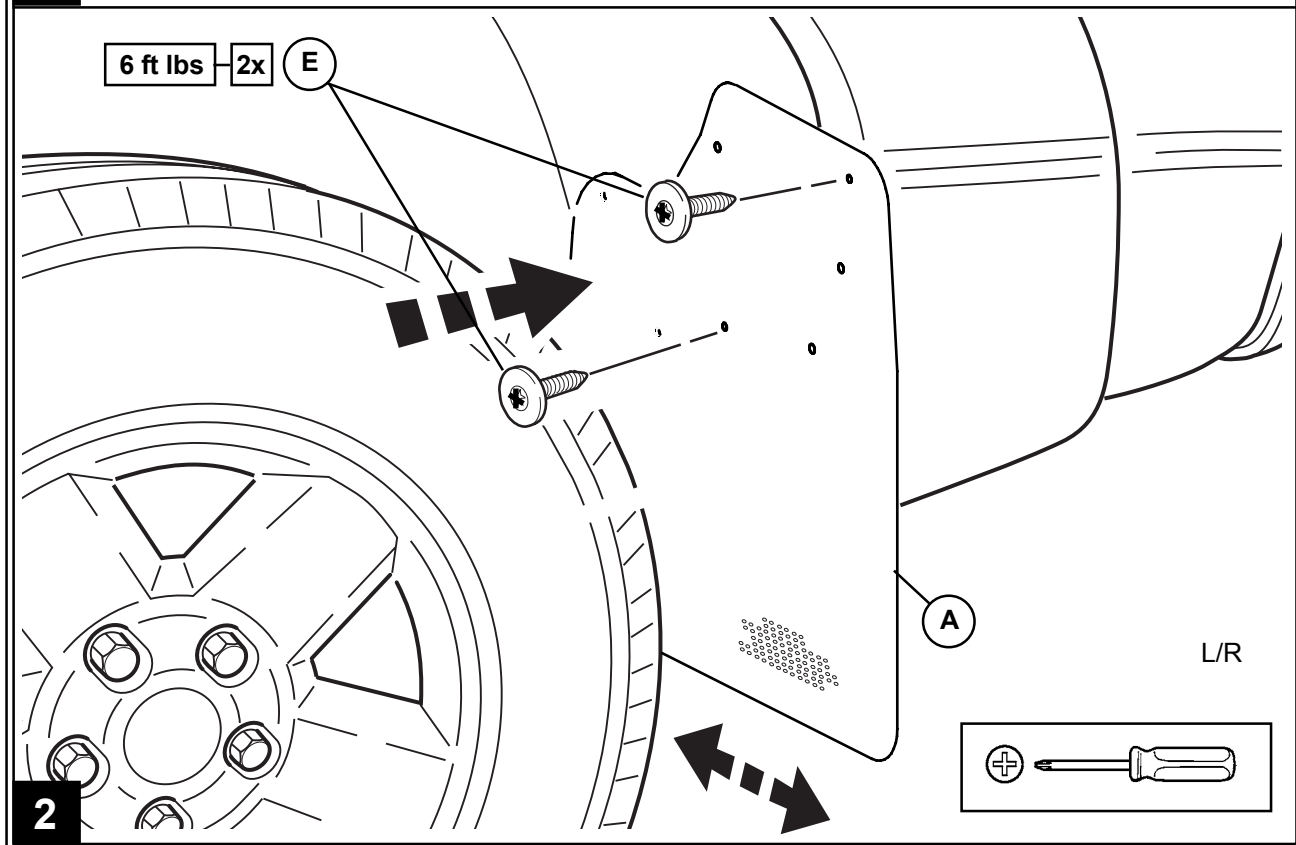
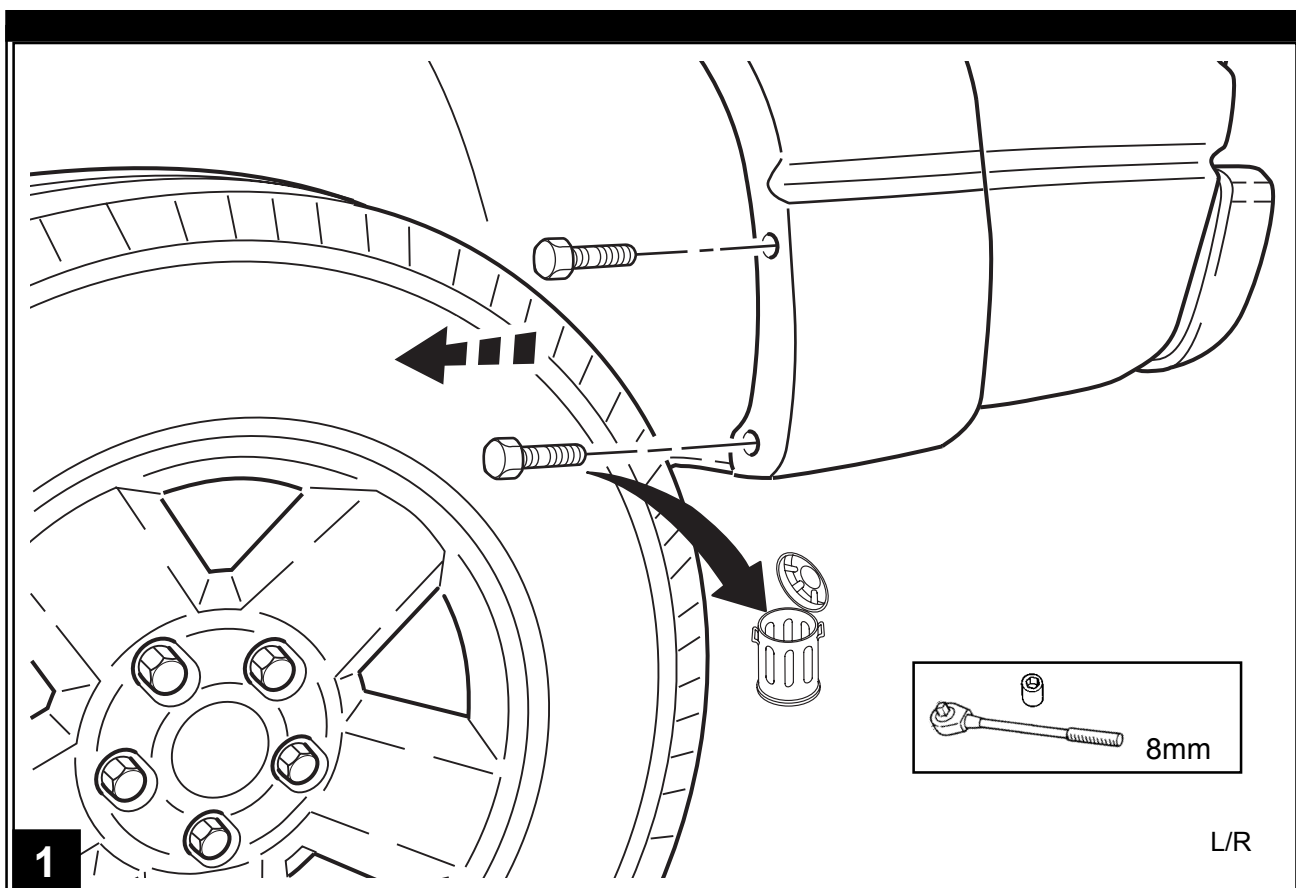


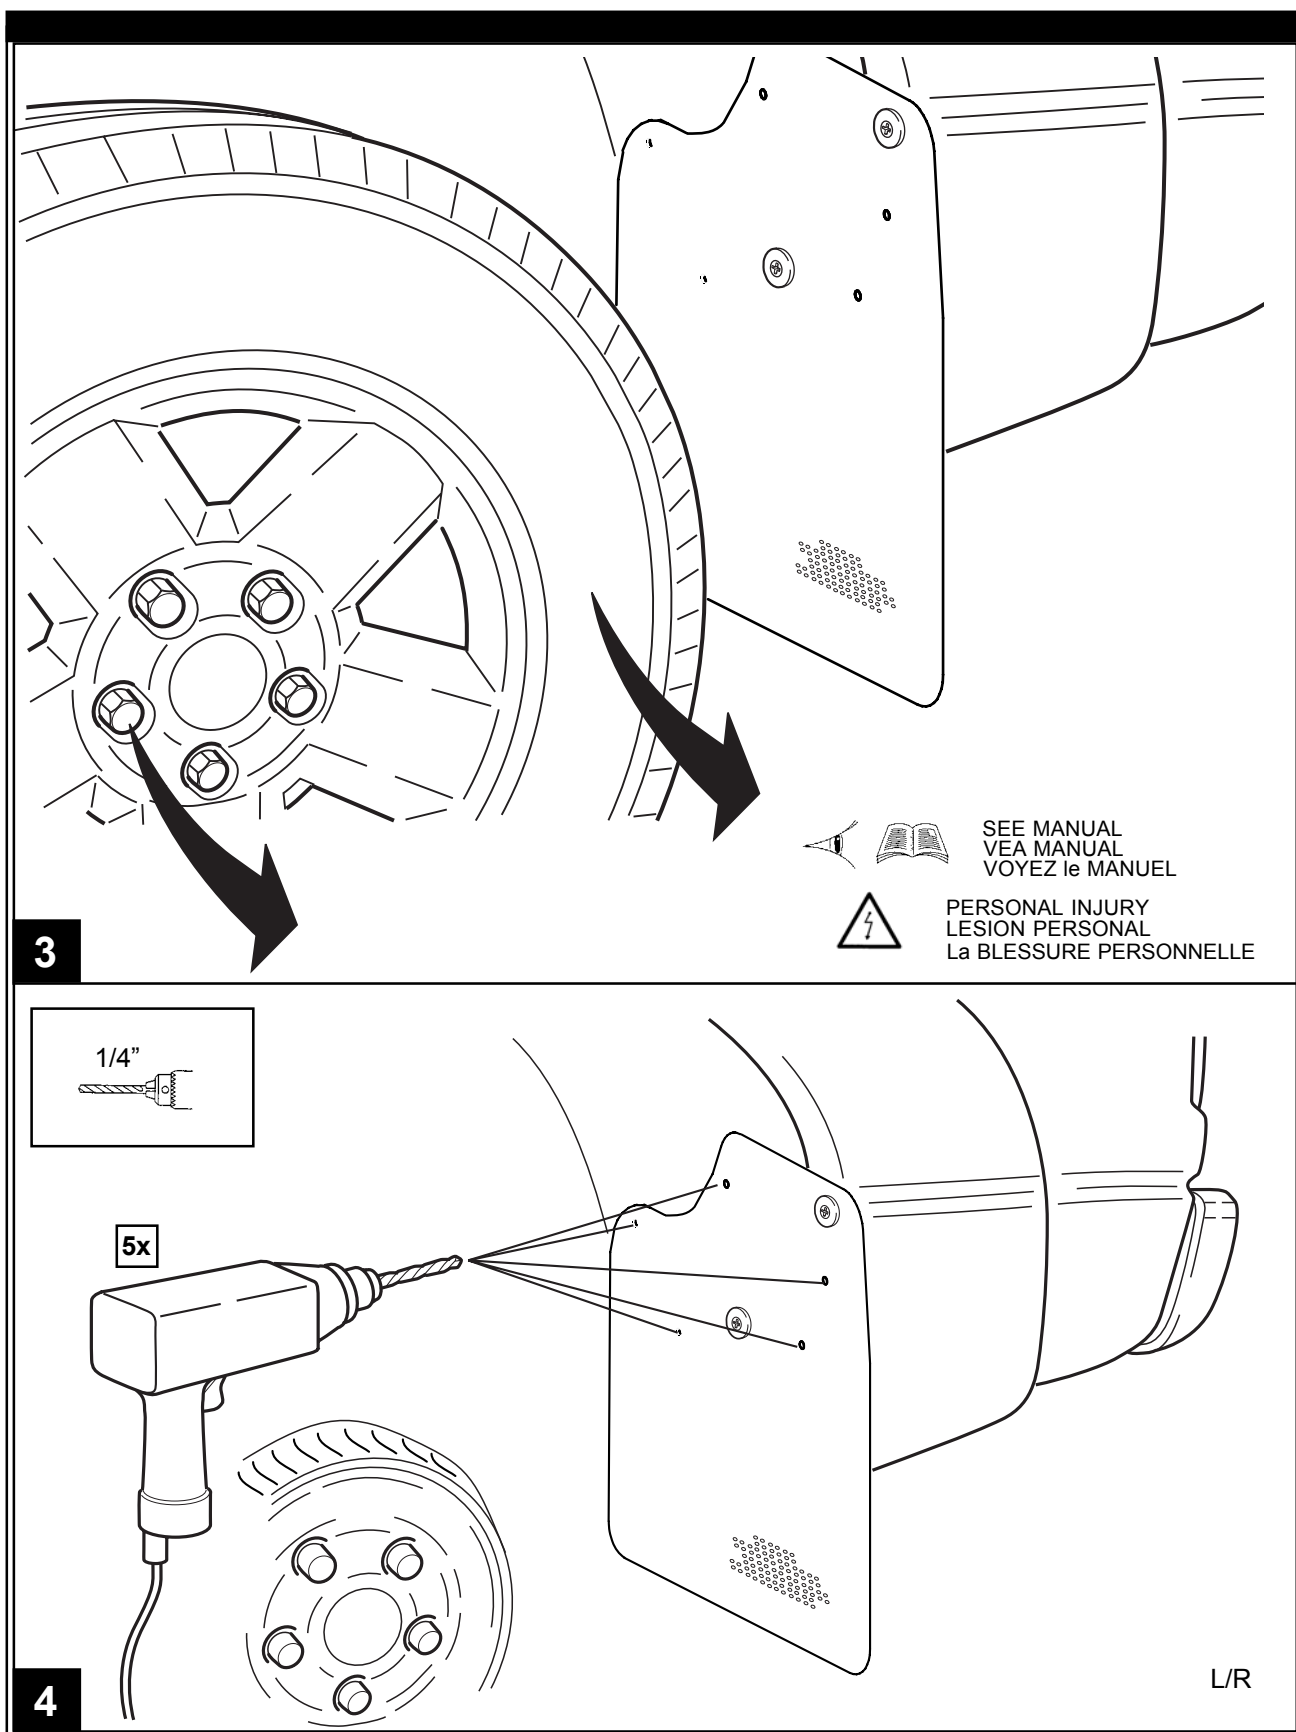

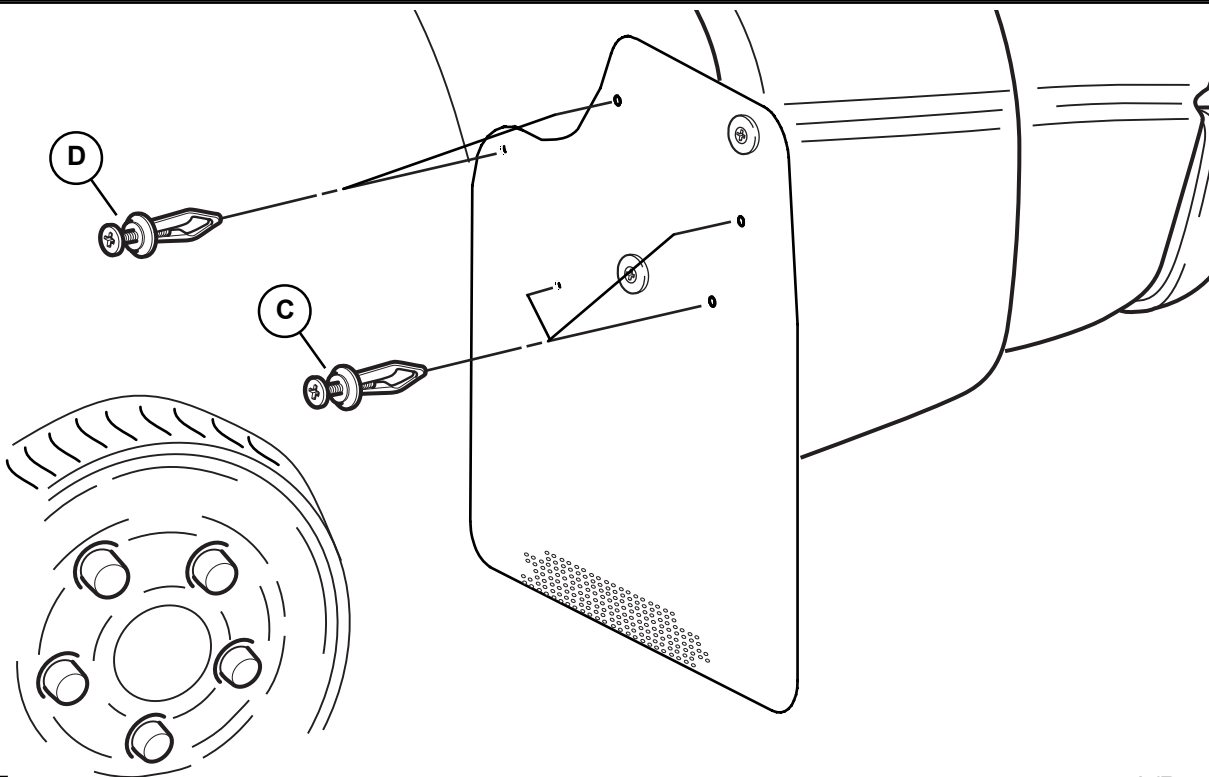


5

L/R

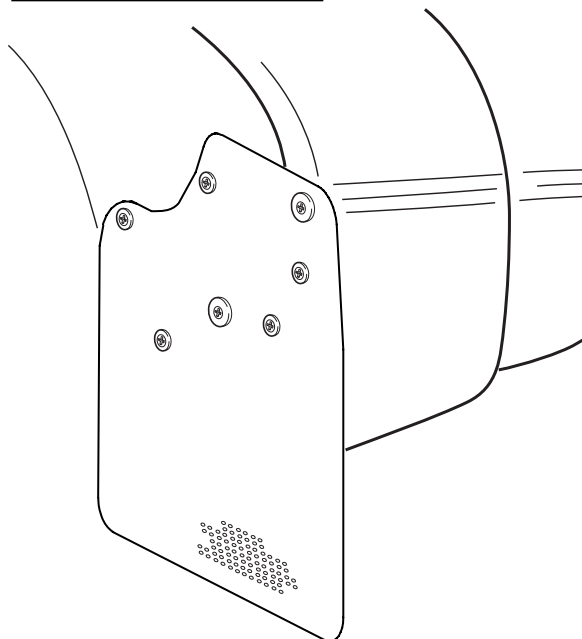

6

L/R

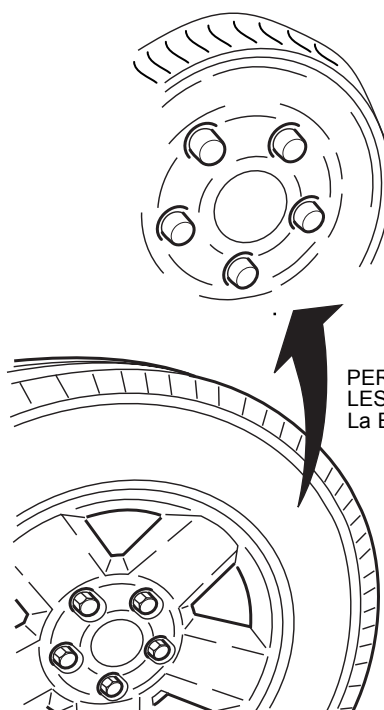

SEE MANUAL
VEA MANUAL
VOYEZ le MANUEL



PERSONAL INJURY
LESION PERSONAL
La BLESSURE PERSONNELLE

7

L/R