


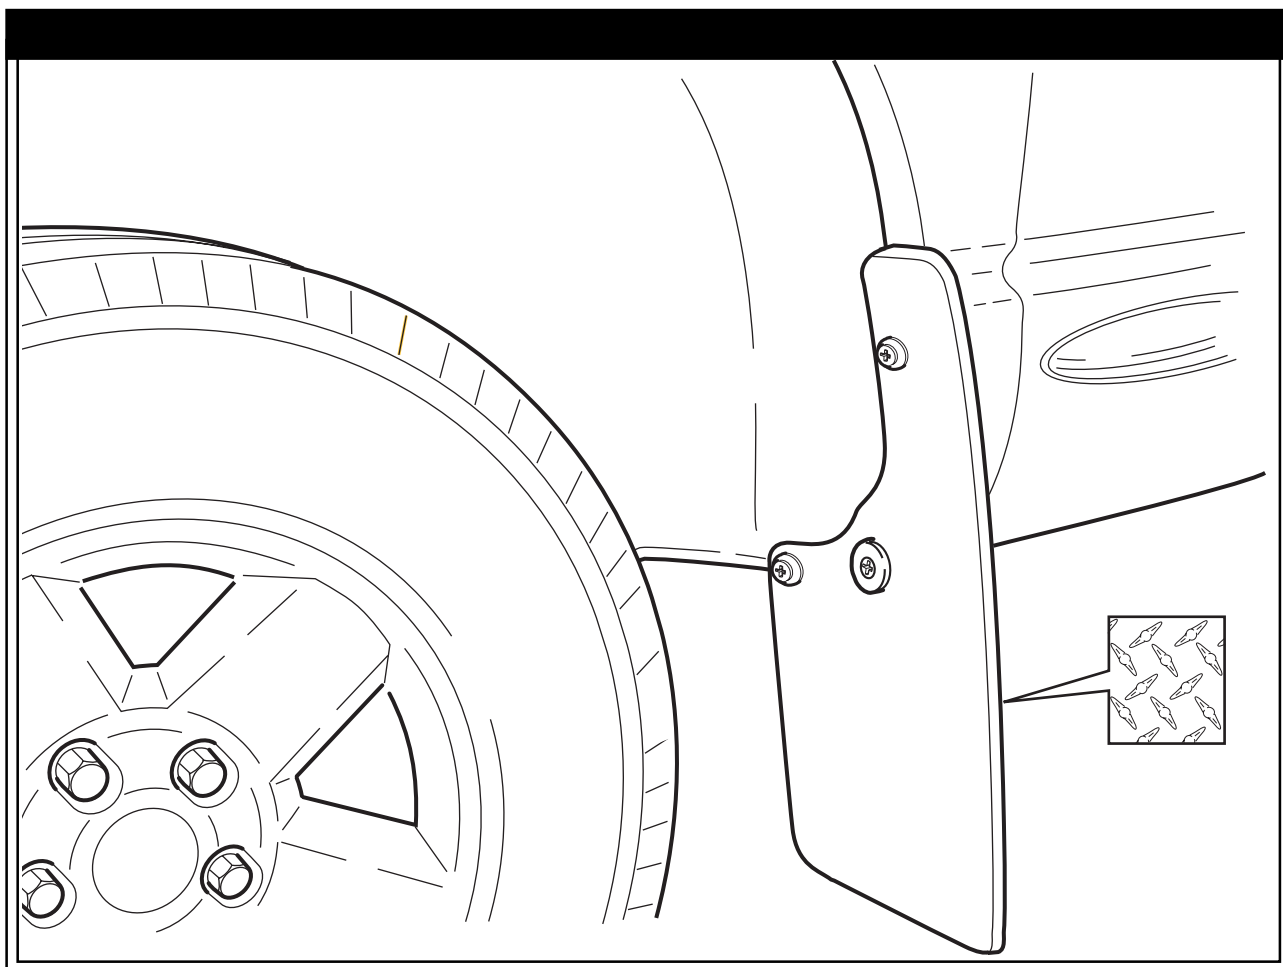

GB

INSTALLATION INSTRUCTIONS **FRONT BRITE TREAD SPLASH GUARDS**

E

INSTRUCCIONES DE MONTAJE **GUARDABARROS TRASEROS DE GOMA - PLANOS**

F

NOTICE DE MONTAGE **BAVETTES GARDE-BOUE PLATES EN CAOUTCHOUC ARRIERE**








Subject to alteration without notice
Reservadas modificaciones técnicas
Sous reserve de modifications techniques


Expert fitment required
Montaje solo por el concesionario
Mantaje par spécialiste necesarie

03-01-02


K6858610

© DAIMLERCHRYSLER

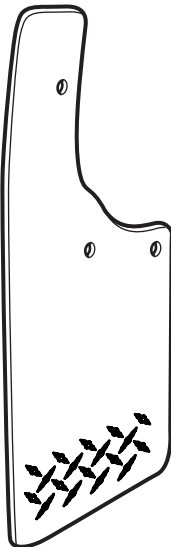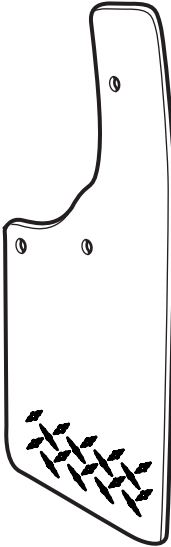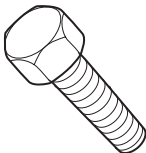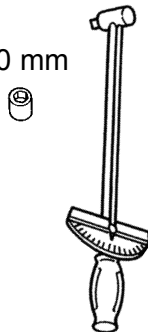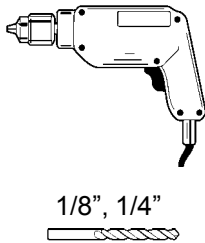					
A 1X			B 1X		
					
C 4X			D 2X		
					
F 2X			E 2X		
		 T25	 10 mm	 10 mm	 1/8", 1/4"





T25

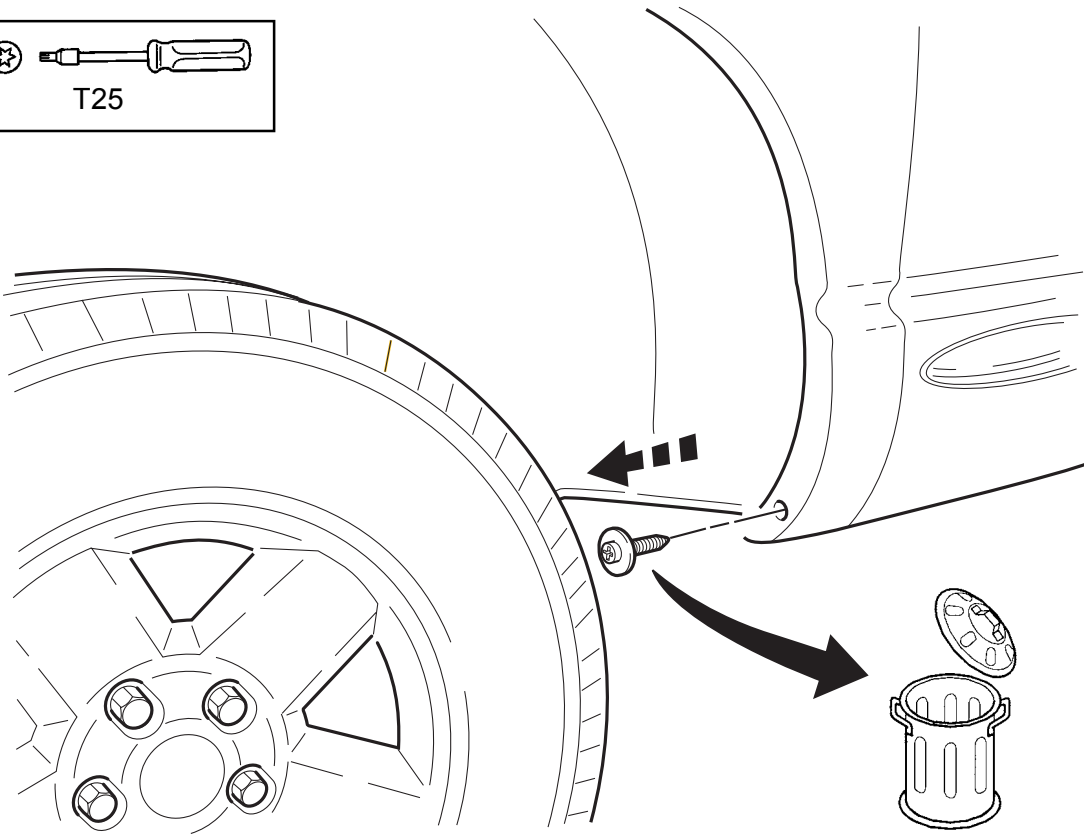


1

L/R

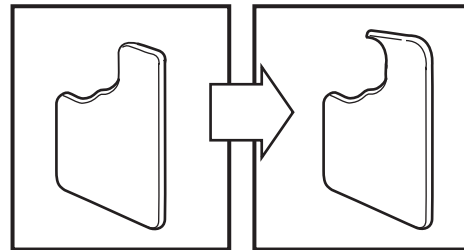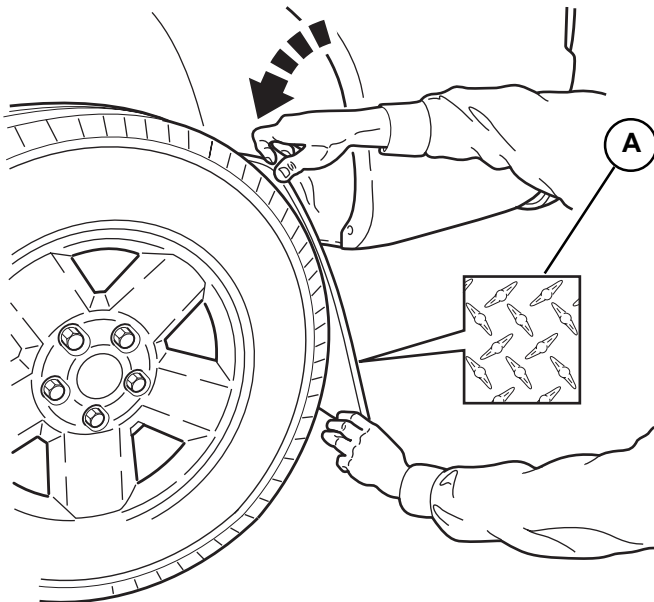


2



L/R




6 ft lbs 1x

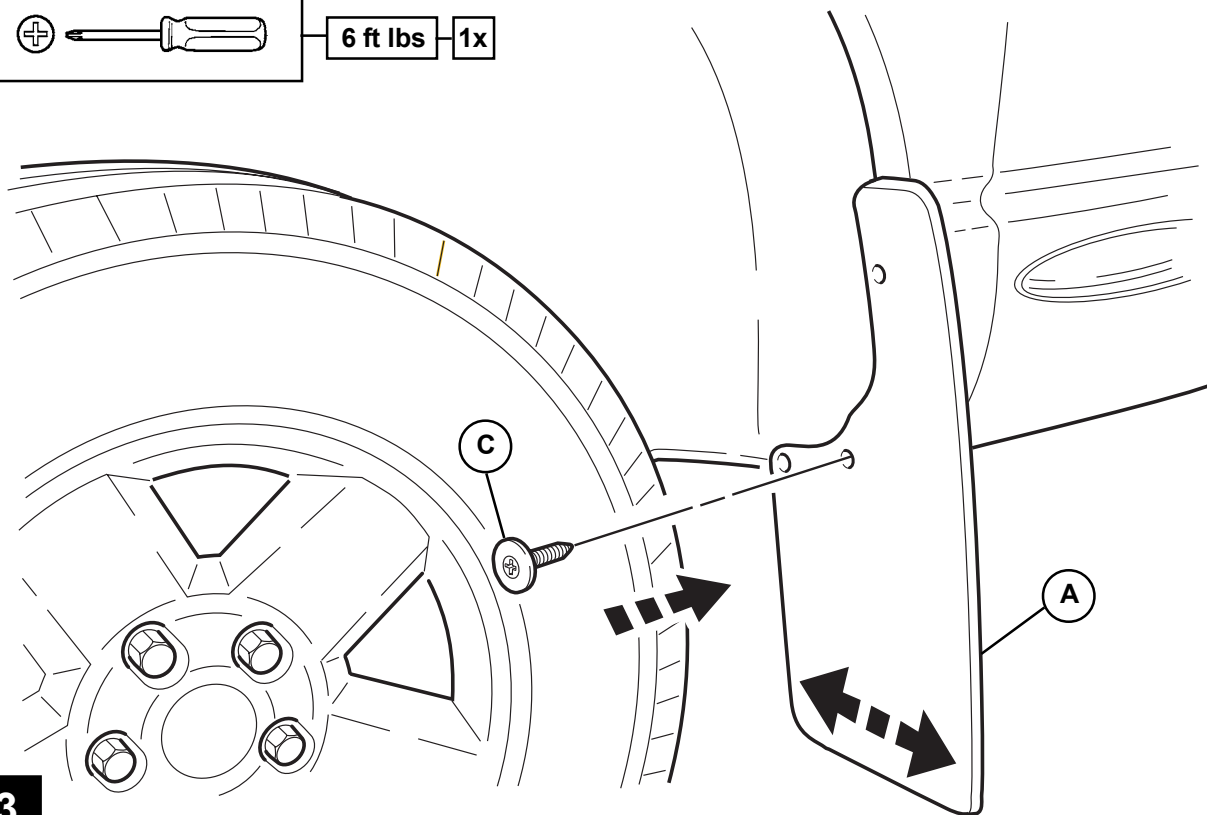

3

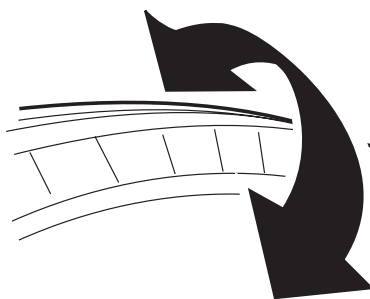

1X



1X

A

L/R

4

