


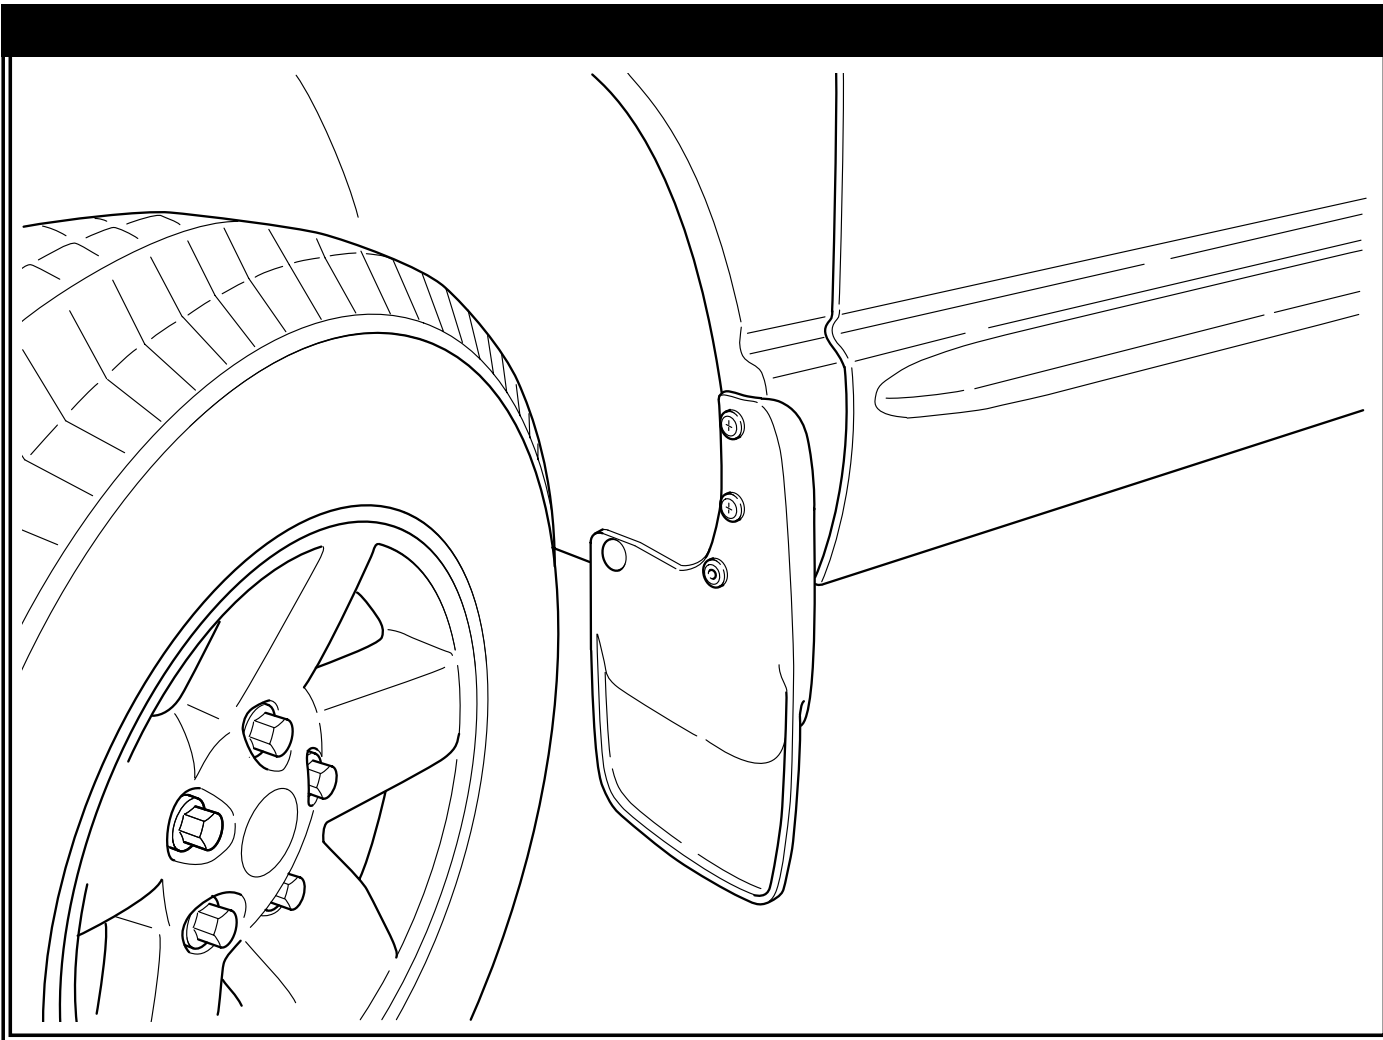

GB

INSTALLATION INSTRUCTION FRONT MOLDED SPLASH GUARDS

E

INSTRUCCIONES DE MONTAJE GUARDABARROS DELANTEROS MOLDEADOS

F


NOTICE DE MONTAGE BAVETTES GARDE-BOUE MOULÉES AVANT

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques


Expert Fitment Required
Montaje sólo por el concesionario
Montage par spécialiste nécessaire

06-12-2001 **K6858540**


© DAIMLERCHRYSLER

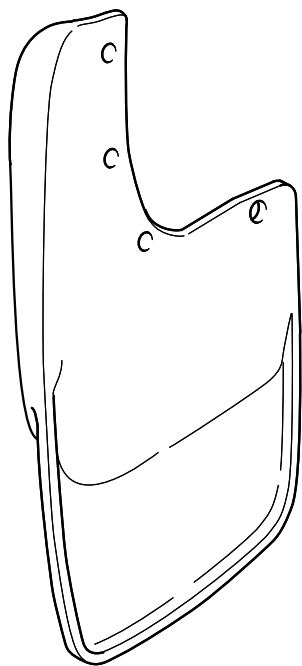

A

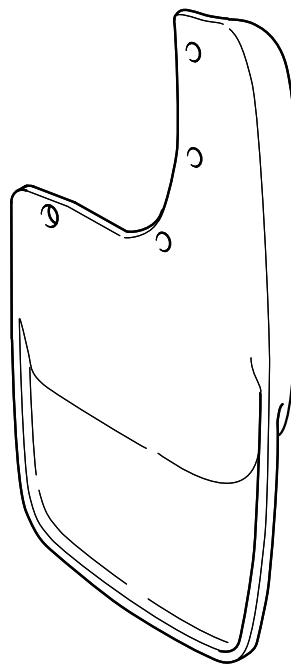


D

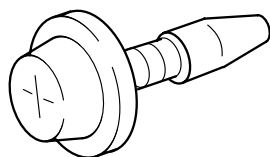


B

6x

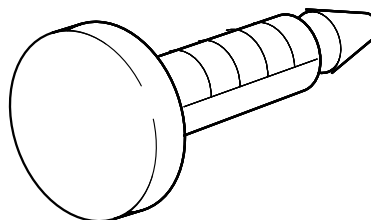


C

2x

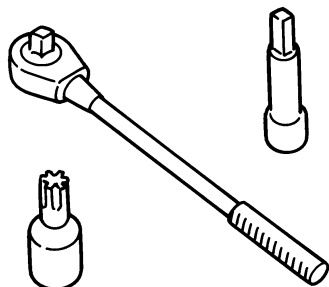

T25



3/32" (2.5mm)



1/4" (6.3mm)

