



LHS Assembly

A X1




RHS Assembly

B X1

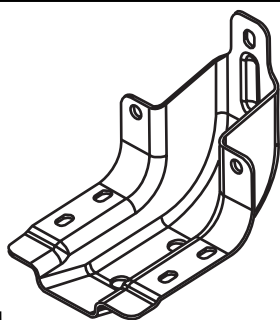


C X4

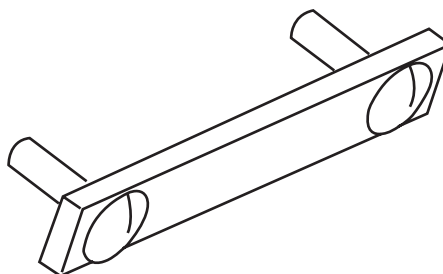


D X4




E X8

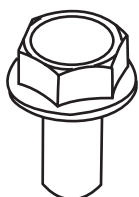

F X12

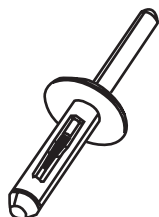

G X2

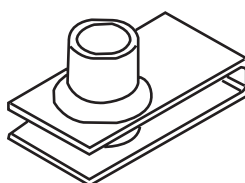




H X4




I X2



J X2

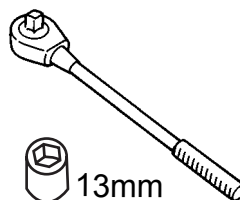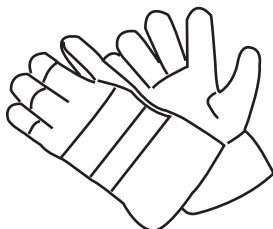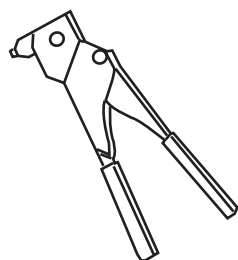

13mm

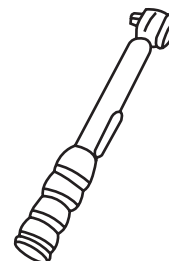








Subject to alteration without notice
Veränderungen vorbehalten
Reservadas modificaciones técnicas
Assujetti à des modifications sans préavis


Expert Fitment Required
Fachmännische Einrichtung notwendig
Montaje sólo por el concesionario
Montage par spécialiste nécessaire

K6858953
03-2005


© DAIMLERCHRYSLER

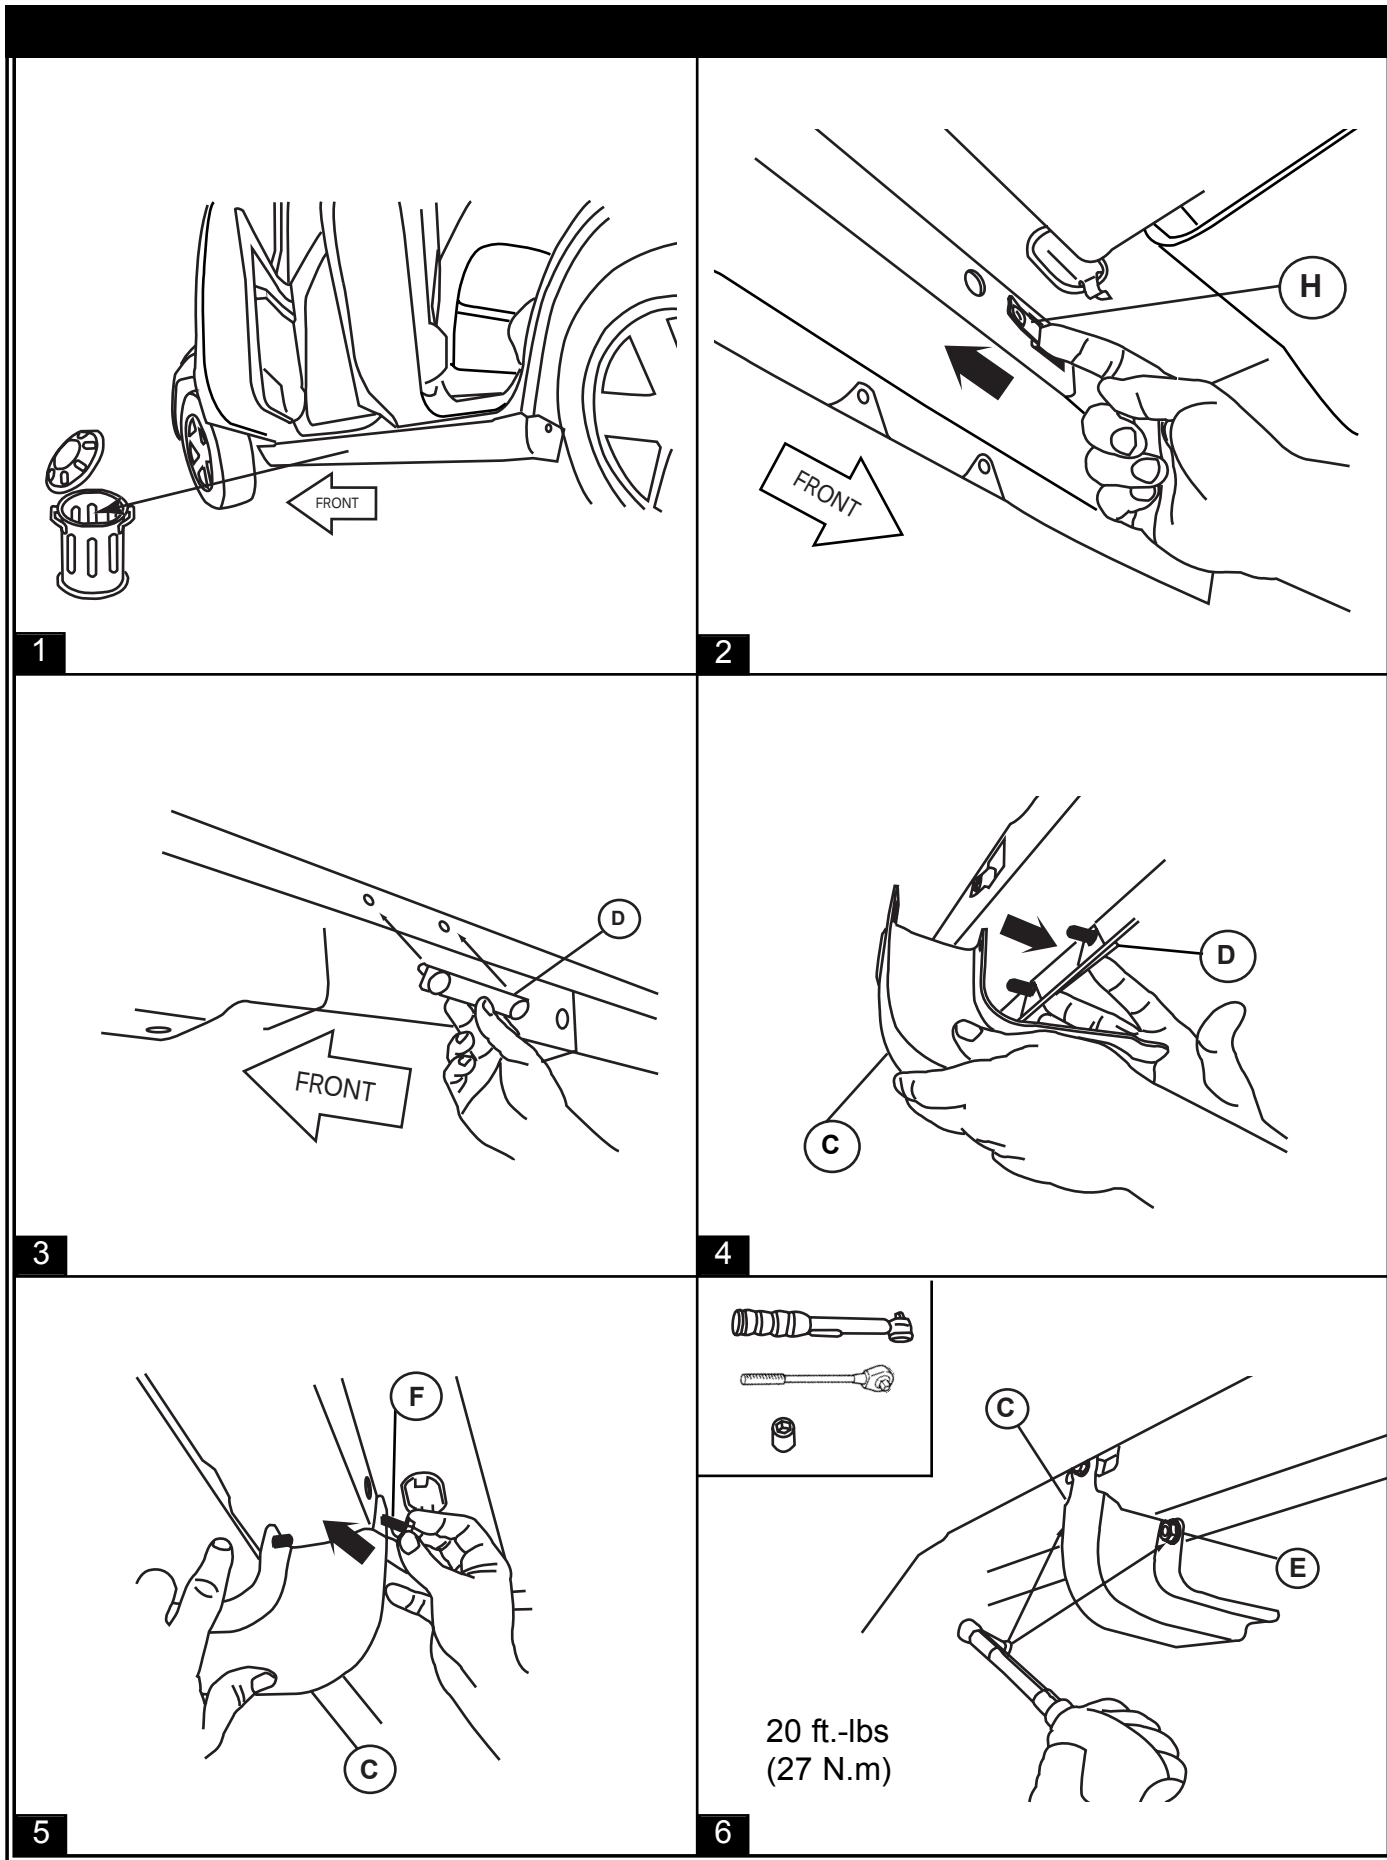

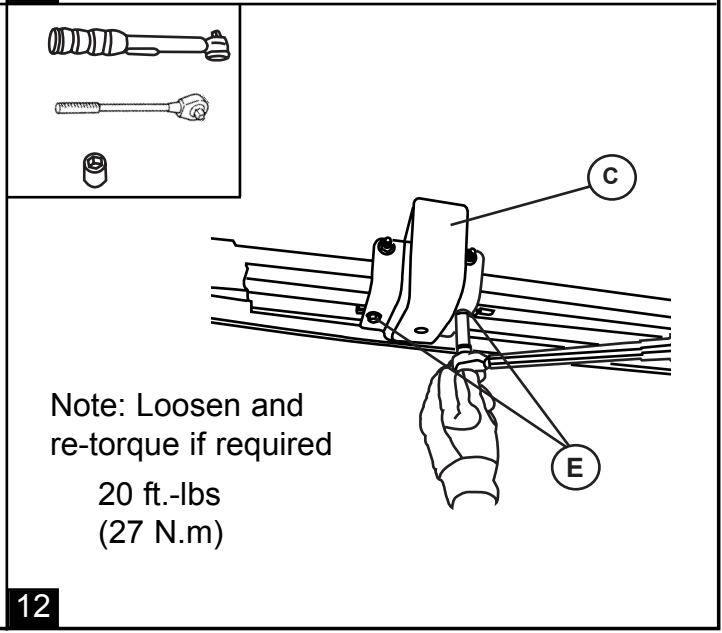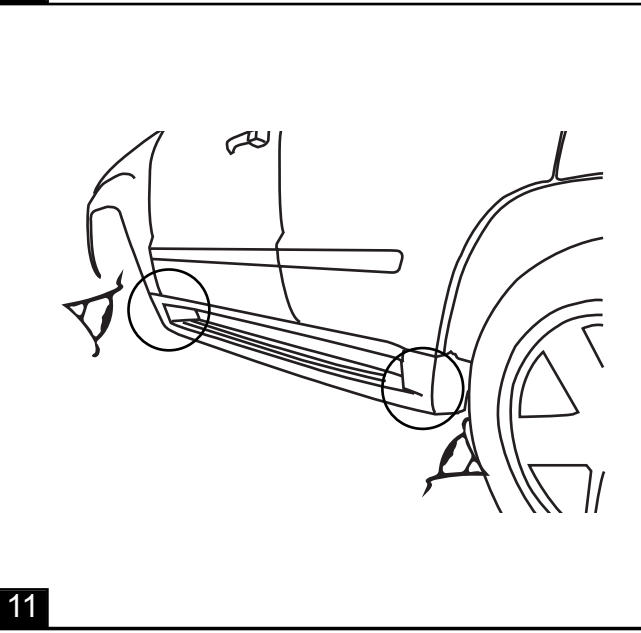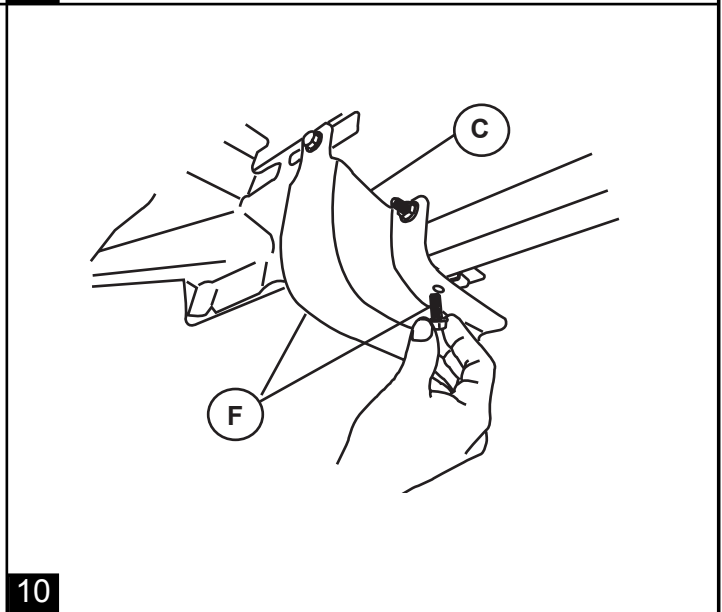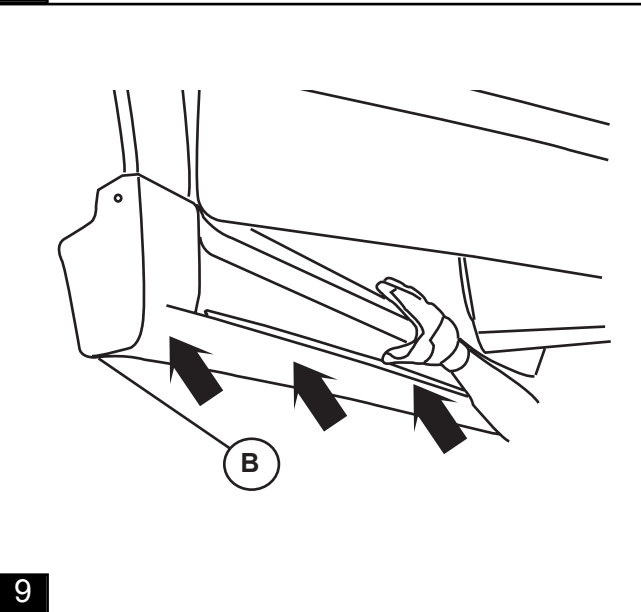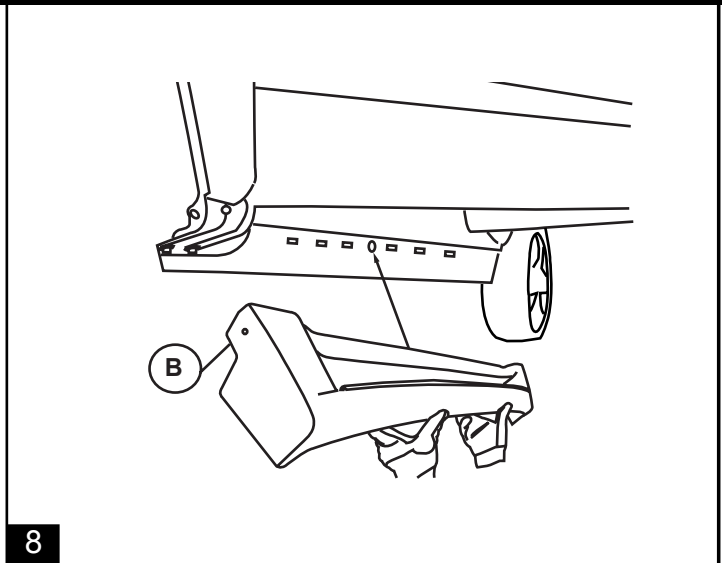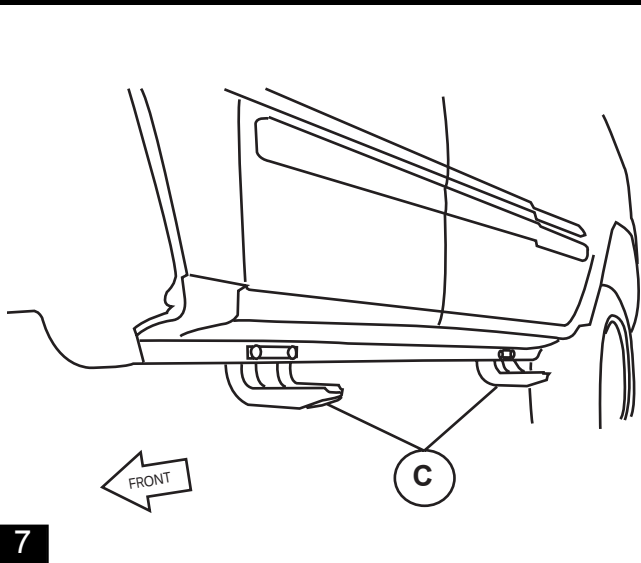


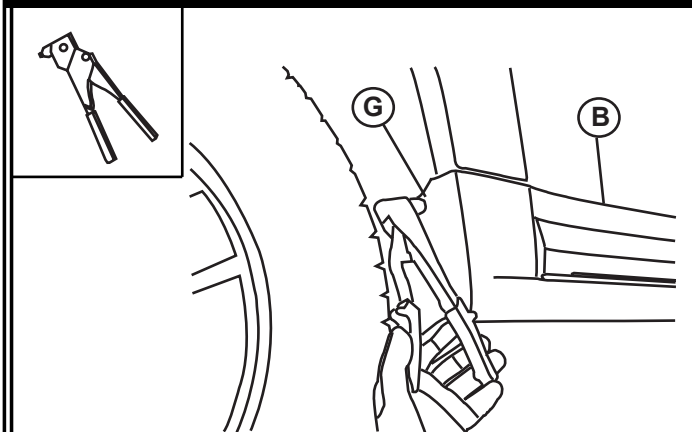


13 Front

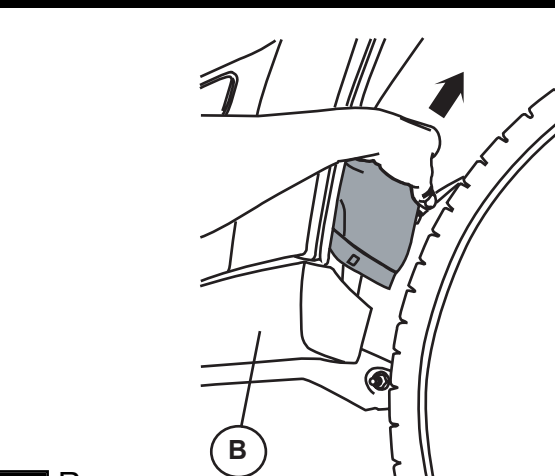


14 Rear

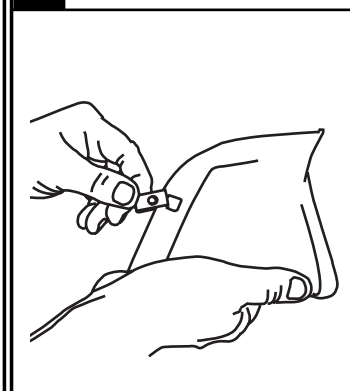


15A Rear

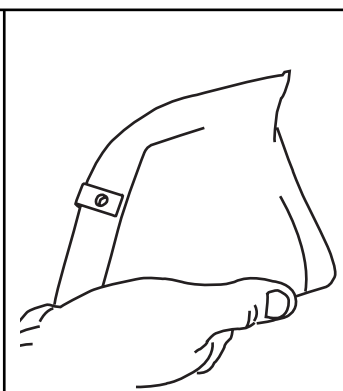


15B Rear

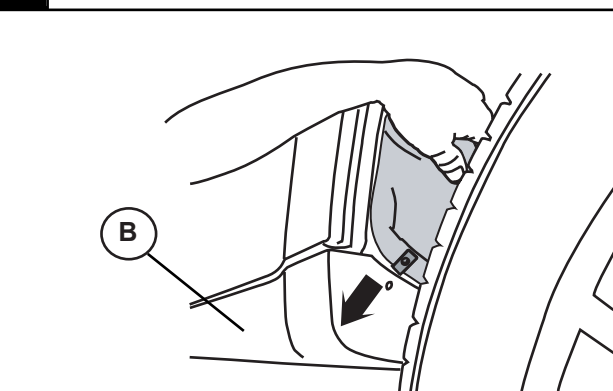


16 Rear

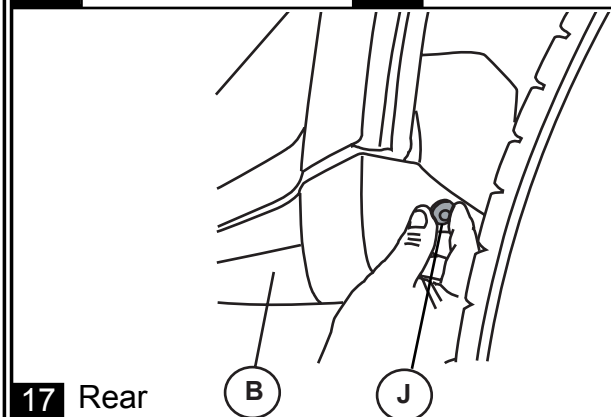

17 Rear

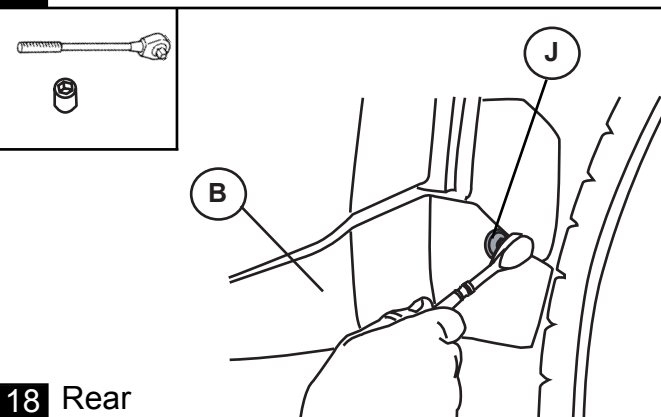

18 Rear

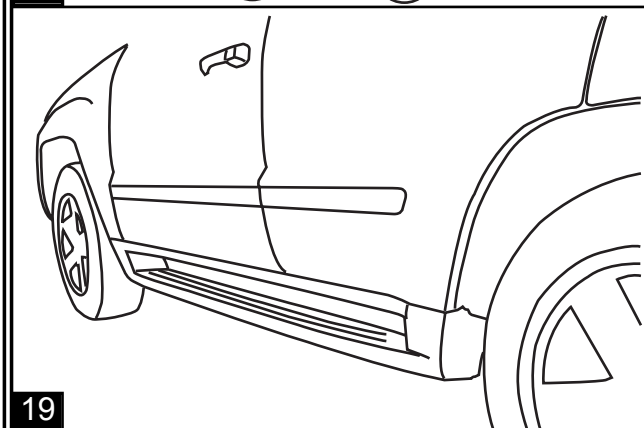

19

GB NOTE: Repeat steps 1-19 on the other side

E NOTA: Repita estos pasos 1-19 en otro lado

F NOTE: Répétez les étapes 1-19 pour l'autre côté

G ANMERKUNG: Wiederhole Schritte 1-19 auf der piher Seite

20