


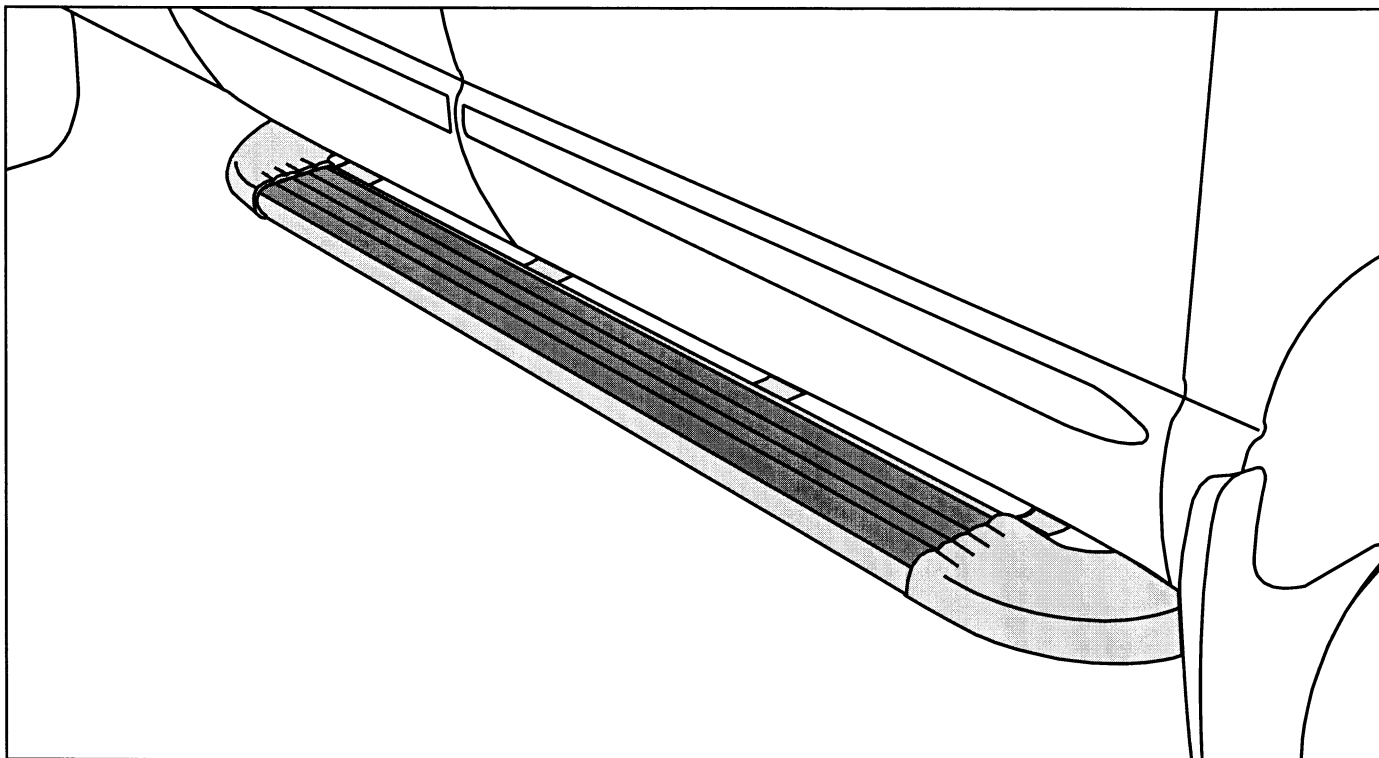

**GB**

**INSTALLATION INSTRUCTIONS 2500/3500 Side Step for Regular & Quad Cabs**

**E**

**INSTRUCCIONES DE MONTAJE 2500/3500 Escalón Lateral para Cab Regular & Quad**

**F**

**NOTICE DE MONTAG Marchepied pour les Cabs Regulier et Quad (4 Portes)**

Subject to alteration without notice.

Reservadas modificaciones técnicas.


Sous reserve de modifications techniques.

1-16-2004  
8754-00-0  
K6859210  
©DAIMLERCHRYSLER




**2X A**

NOTE: DRIVER AND PASSENGER SIDE COMMON  
 La NOTA: el LADO de CONDUCTOR Y LADO de PASAJERO SON COMUNES  
 LA NOTE: LE COTE DE CHAUFFEUR ET LE COTE DE PASSAGER SONT COMMUNS

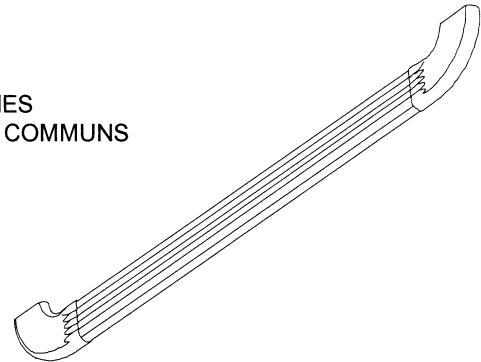


| 2X                                | B                                  | 2X     | C              | 4X                | D              | 1X                | E              | 1X                | F              | 1X                | G              | 1X                | H                 |
|-----------------------------------|------------------------------------|--------|----------------|-------------------|----------------|-------------------|----------------|-------------------|----------------|-------------------|----------------|-------------------|-------------------|
|                                   |                                    |        |                |                   |                |                   |                |                   |                |                   |                |                   |                   |
| PASSENGER<br>FRONT/DRIVER<br>REAR | DRIVER FRONT/<br>PASSENGER<br>REAR | MIDDLE | DRIVER<br>REAR | PASSENGER<br>REAR | DRIVER<br>REAR | PASSENGER<br>REAR | DRIVER<br>REAR | PASSENGER<br>REAR | DRIVER<br>REAR | PASSENGER<br>REAR | DRIVER<br>REAR | PASSENGER<br>REAR | PASSENGER<br>REAR |

| 8X                  | I                   | 16X                           | J             | 20X               | K              | 12X | L | 20X | M | 2X | N |
|---------------------|---------------------|-------------------------------|---------------|-------------------|----------------|-----|---|-----|---|----|---|
|                     |                     |                               |               |                   |                |     |   |     |   |    |   |
| M8<br>FLANGE<br>NUT | M6<br>FLANGE<br>NUT | M8 X 30mm<br>HEX HEAD<br>BOLT | M8<br>"T" NUT | M8<br>FLAT WASHER | M6<br>"T" Bolt |     |   |     |   |    |   |


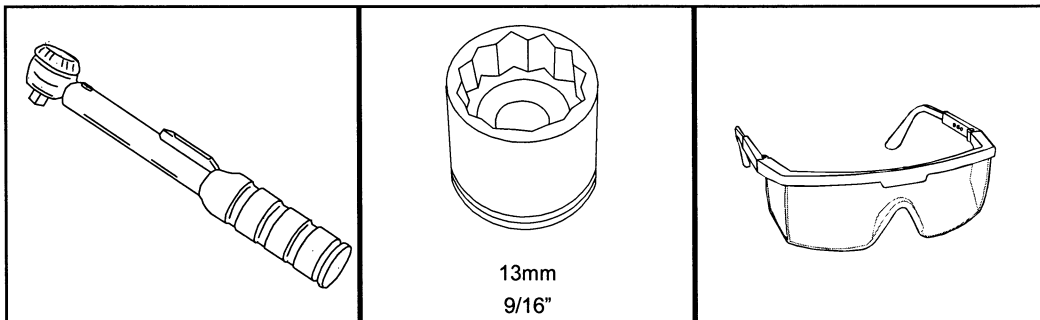





PASSENGER SIDE SHOWN  
EI LADO del PASAJERO MOSTRADO  
LE PASSAGER PREND PARTI MONTRE

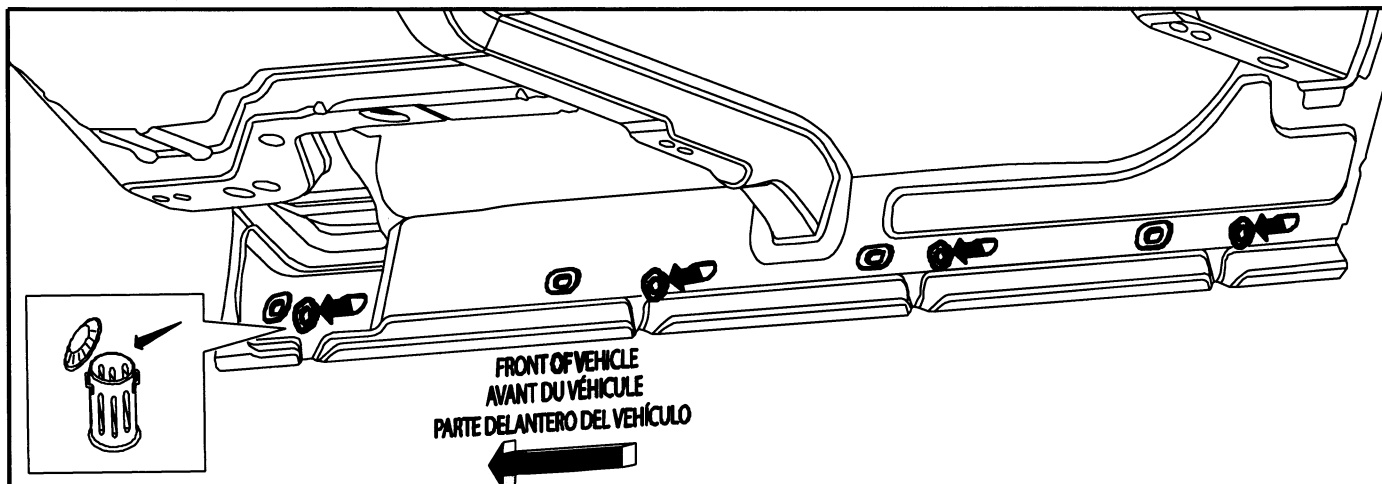


1

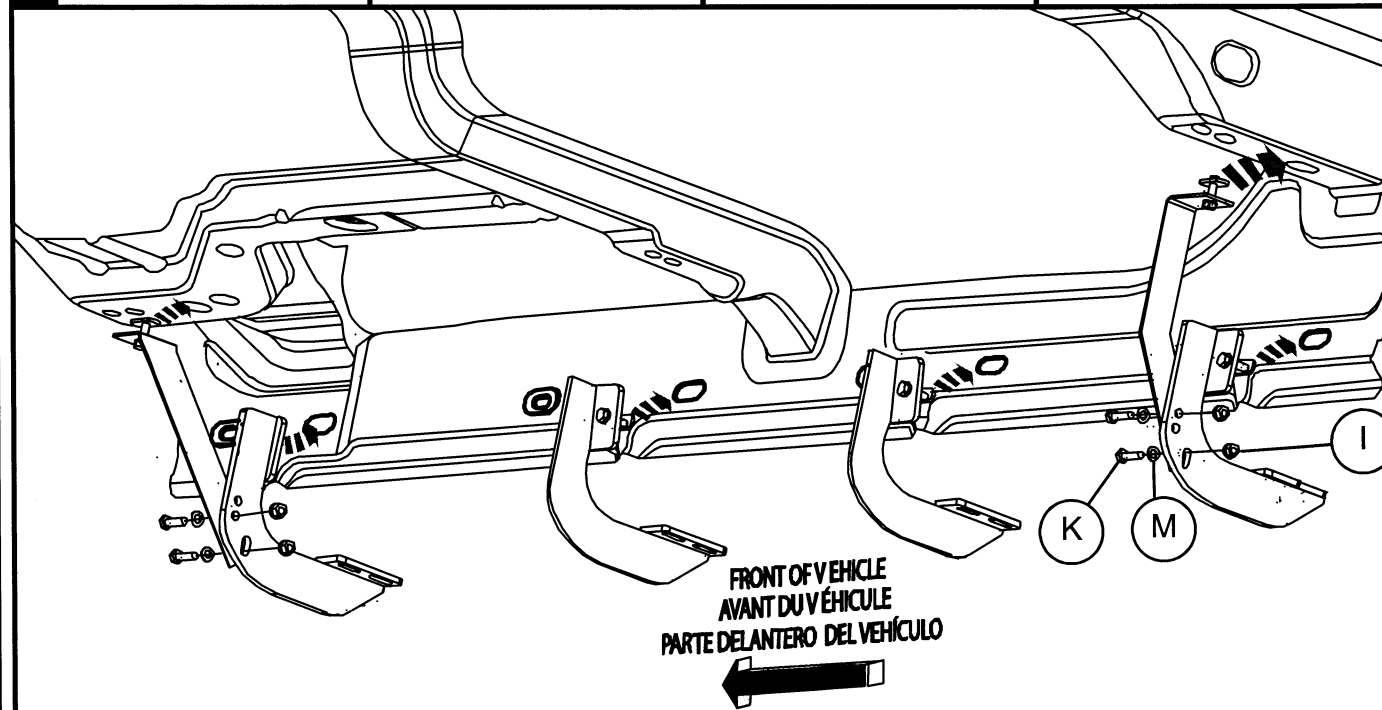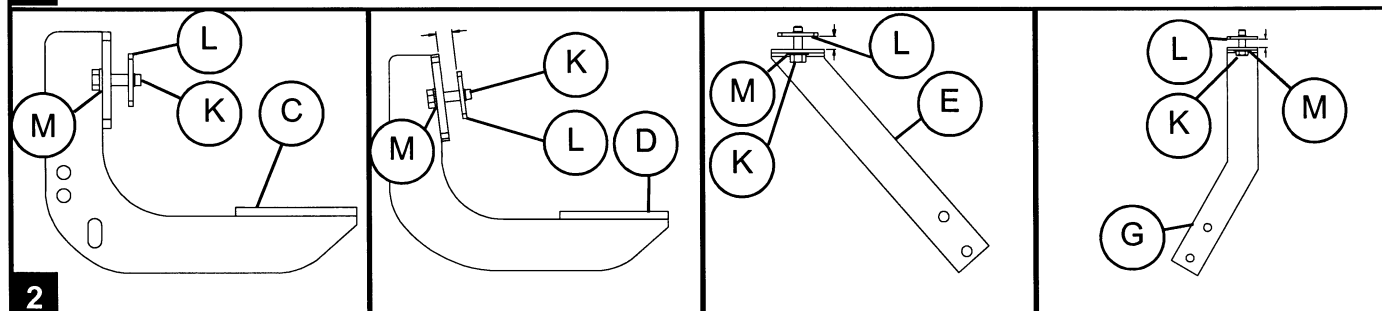

3

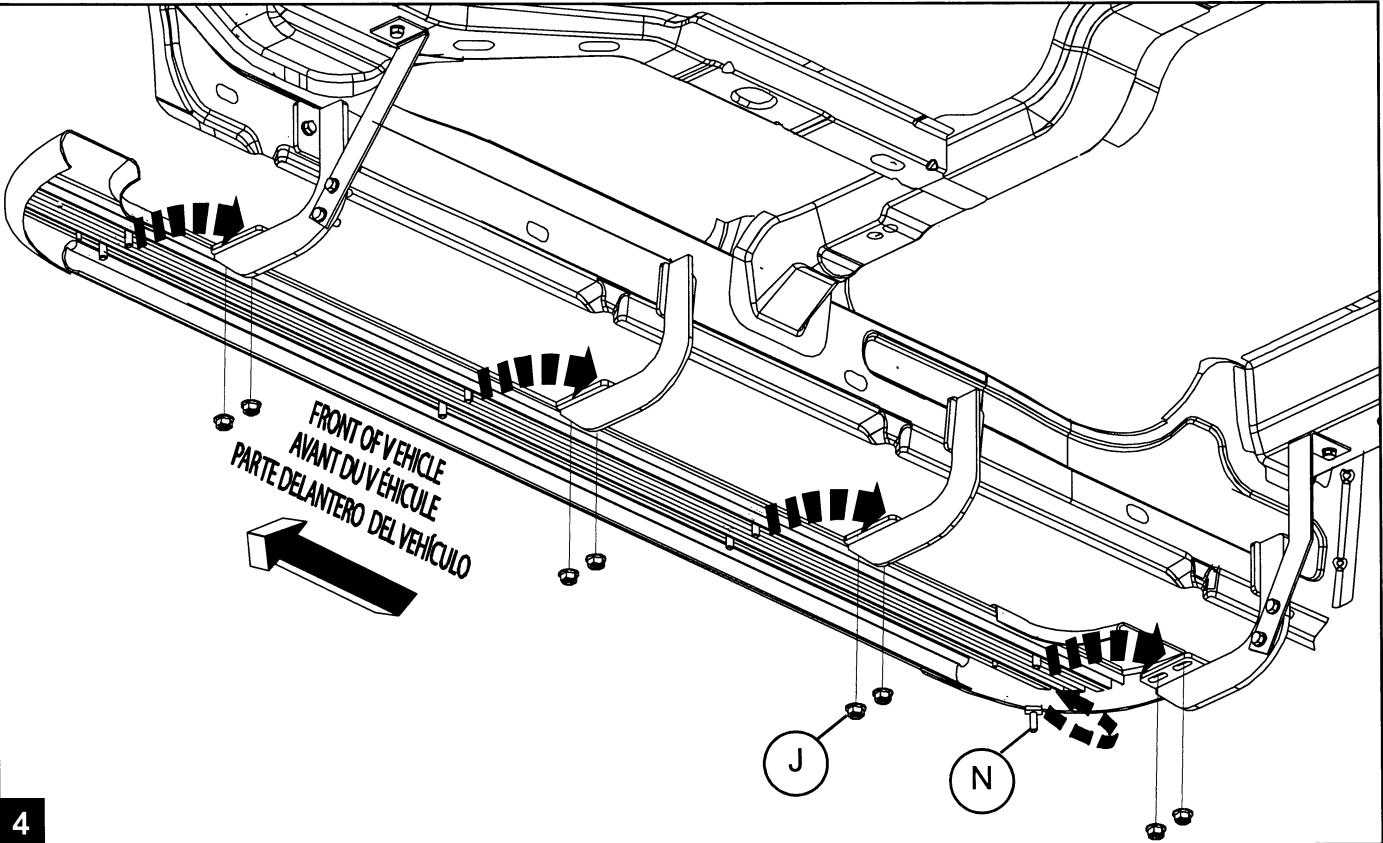

4

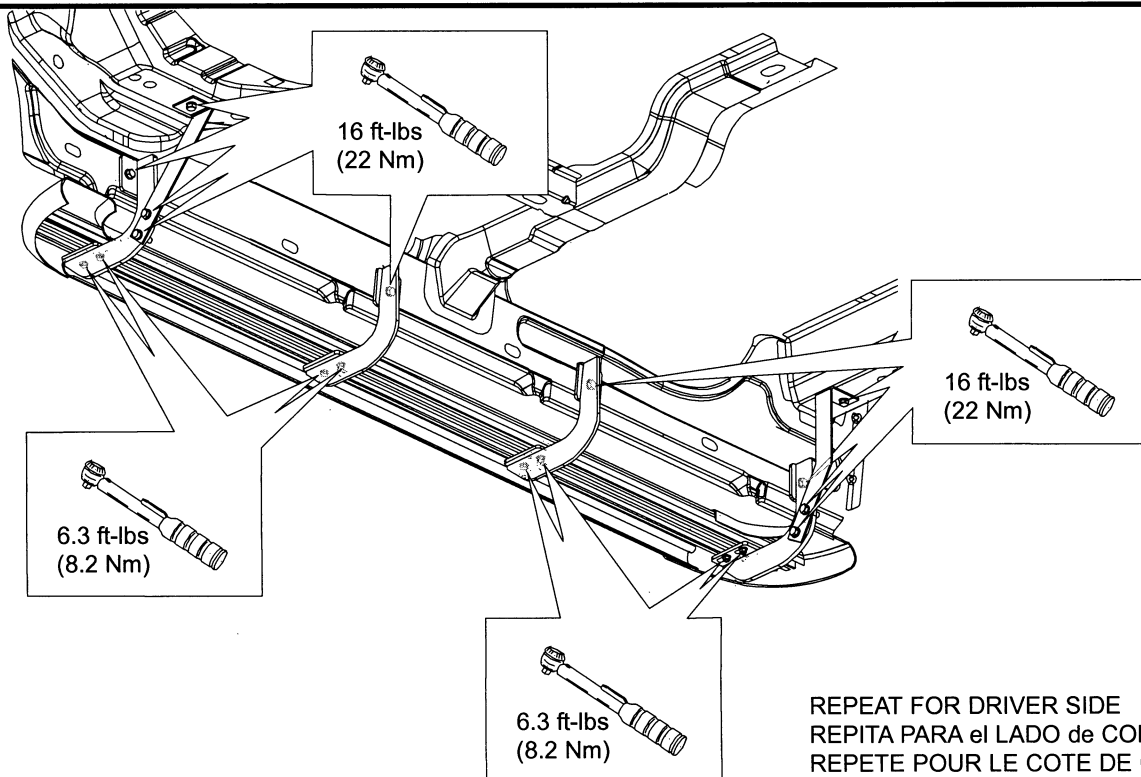

5