





JEEP GRAND CHEROKEE / JEEP COMMANDER

Front Tow Hooks

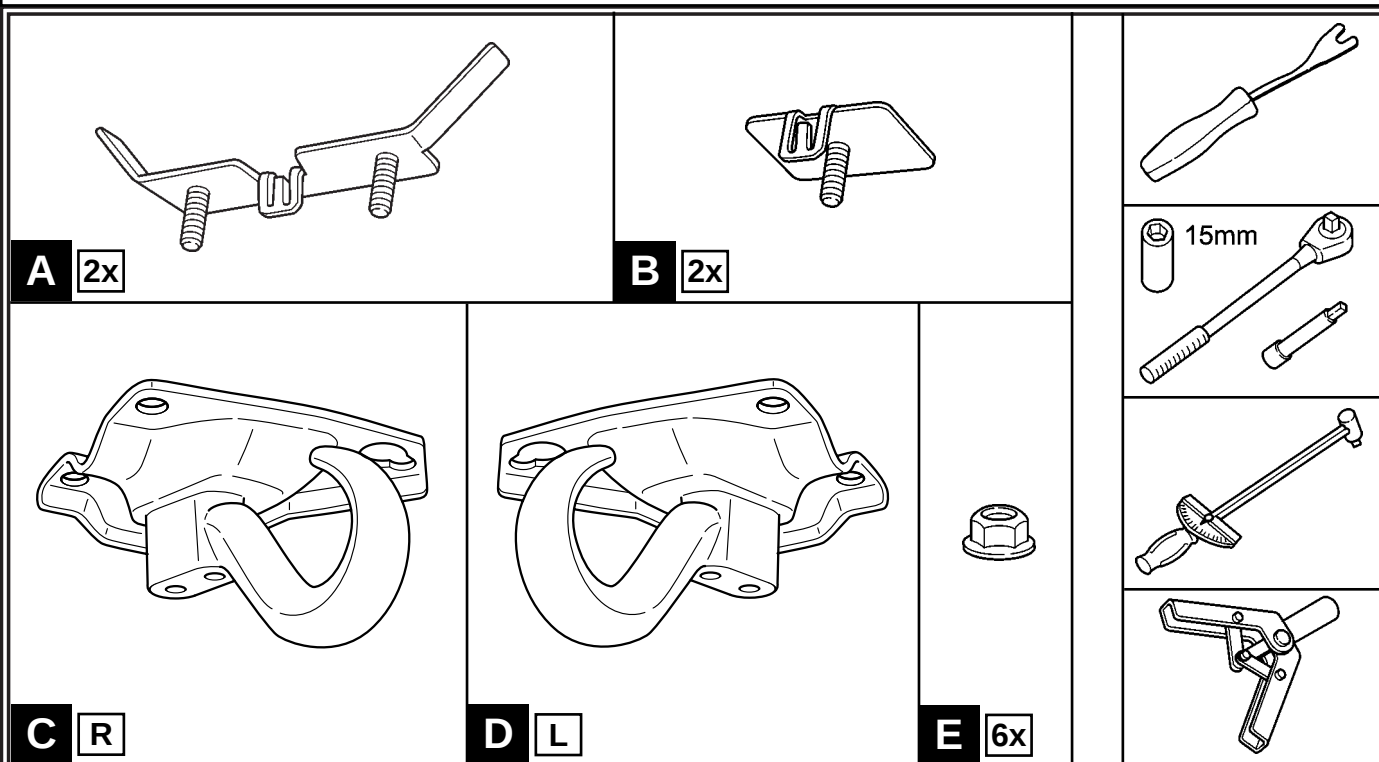


JEEP GRAND CHEROKEE

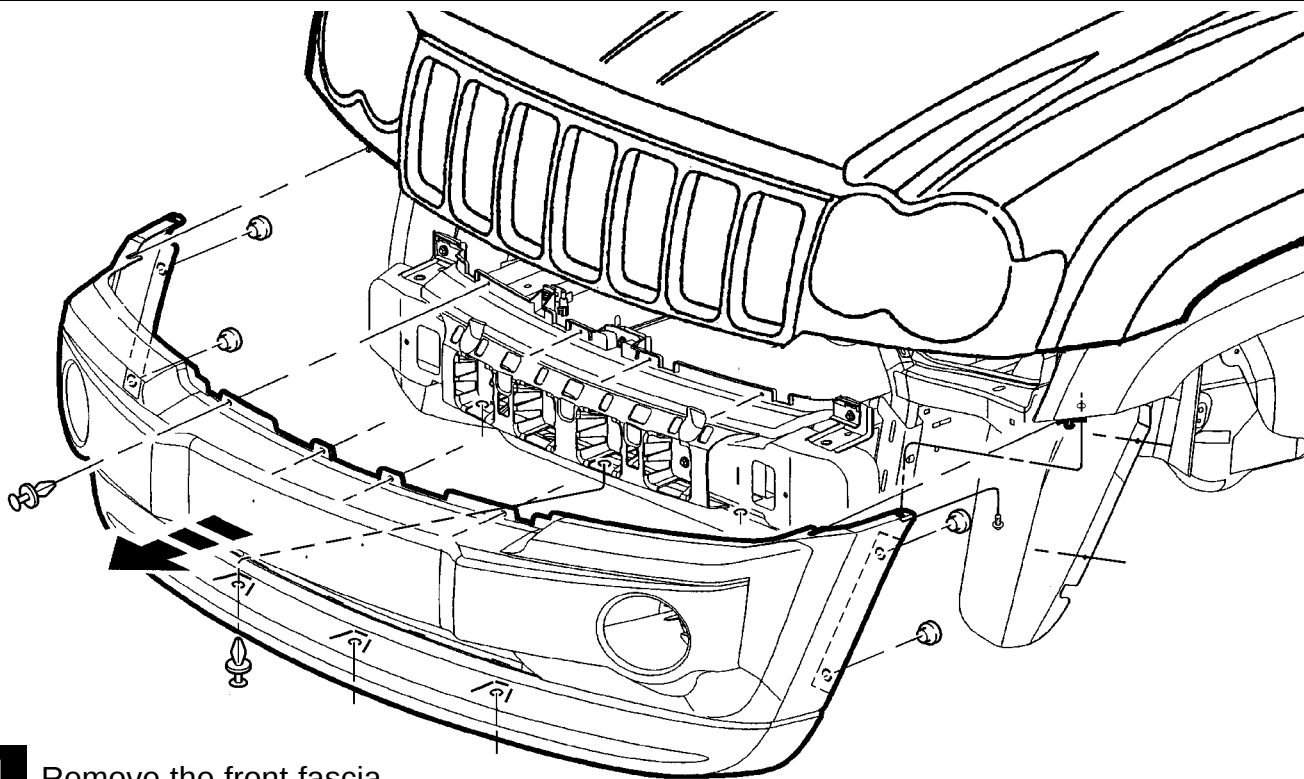


1 Remove the front fascia.

JEEP GRAND CHEROKEE

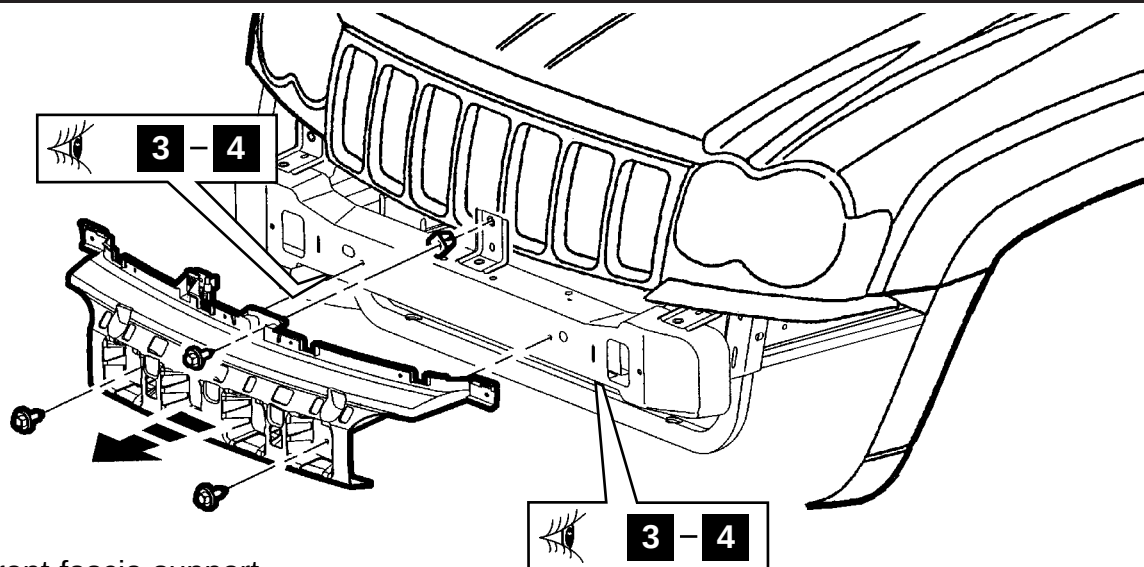


2 Remove front fascia support.

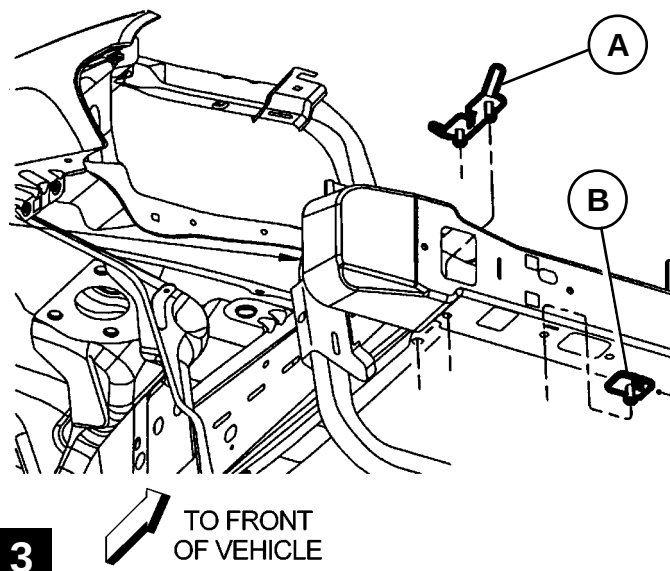


3

TO FRONT
OF VEHICLE

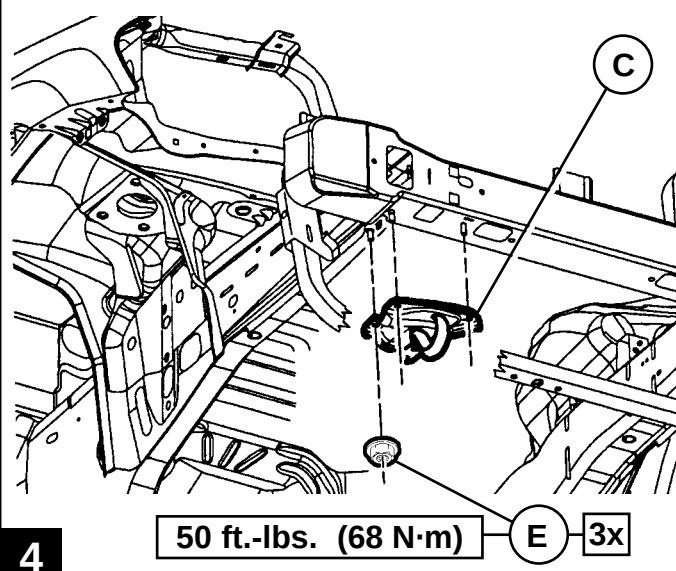


4


50 ft.-lbs. (68 N·m) E 3x

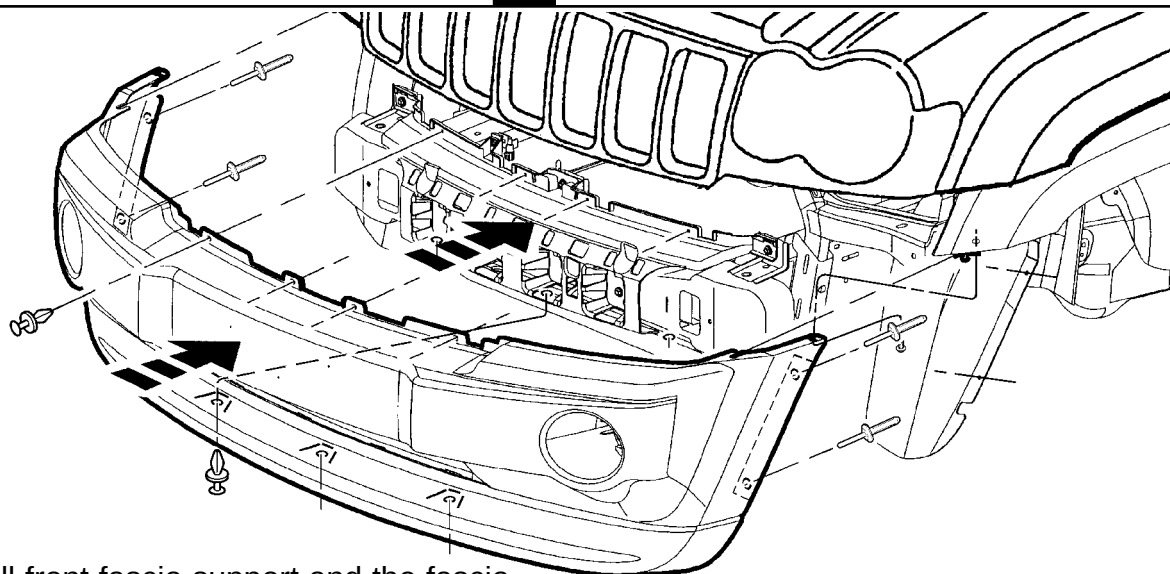

5 Re-install front fascia support and the fascia.

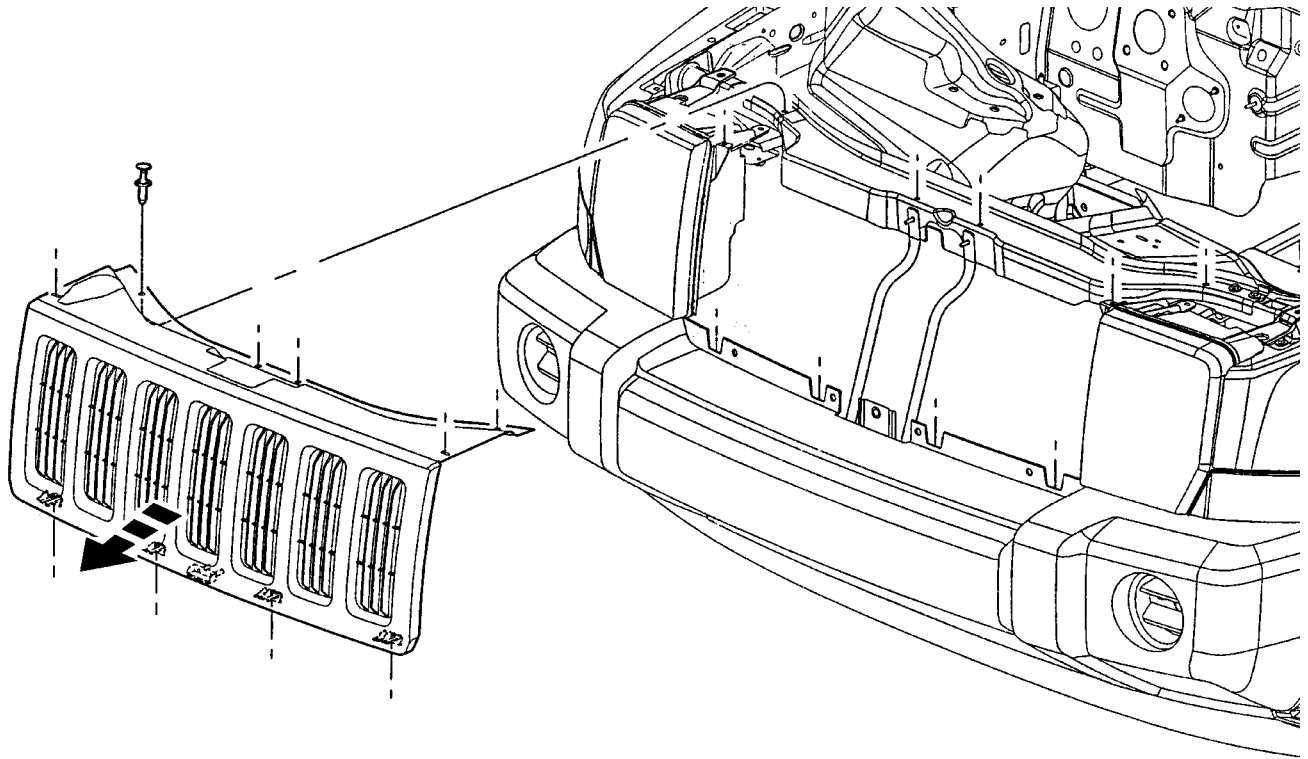

1 Remove the front grille.

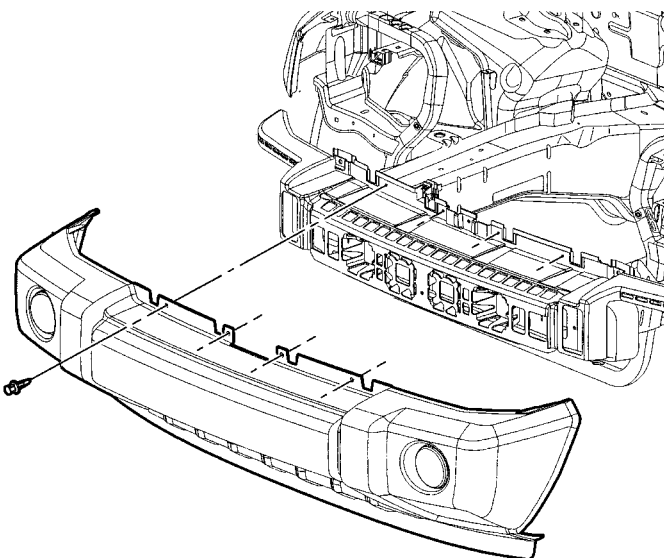


2


5

For front fascia removal.


2 Remove (4) push pin fasteners.

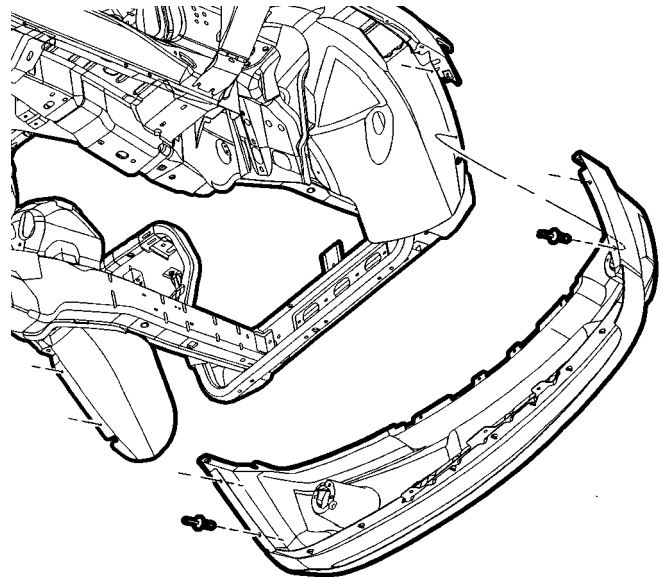


3 Remove (3) plastic rivets each side.

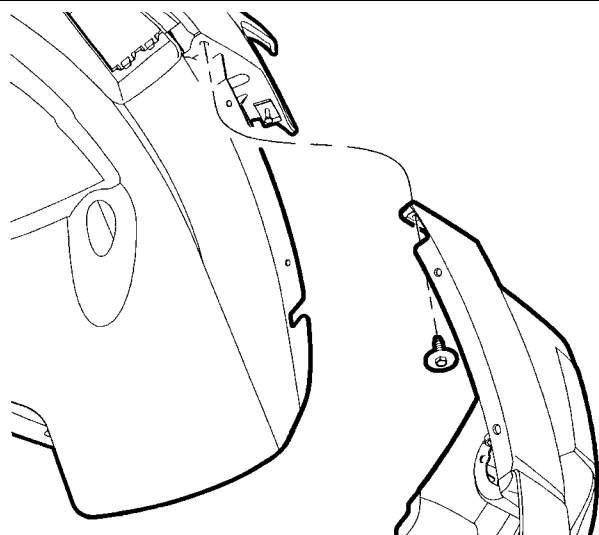

4 Remove (1) screw each side.

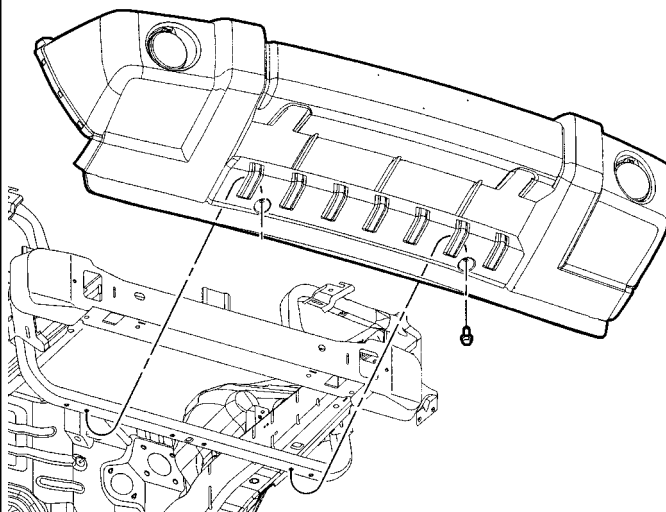


5 Remove (2) lower screws.

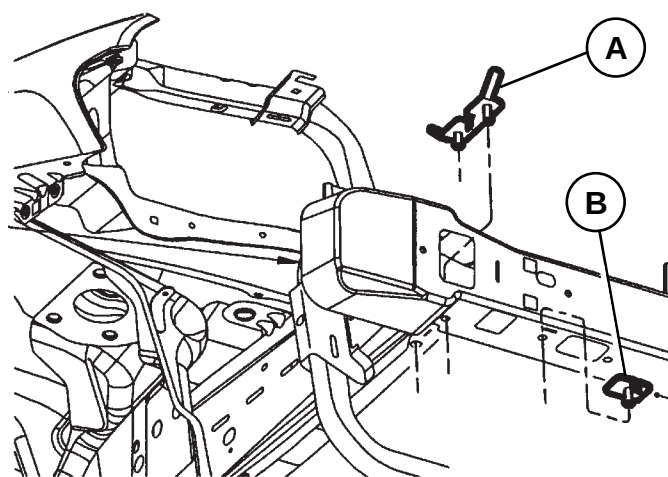


6

TO FRONT
OF VEHICLE

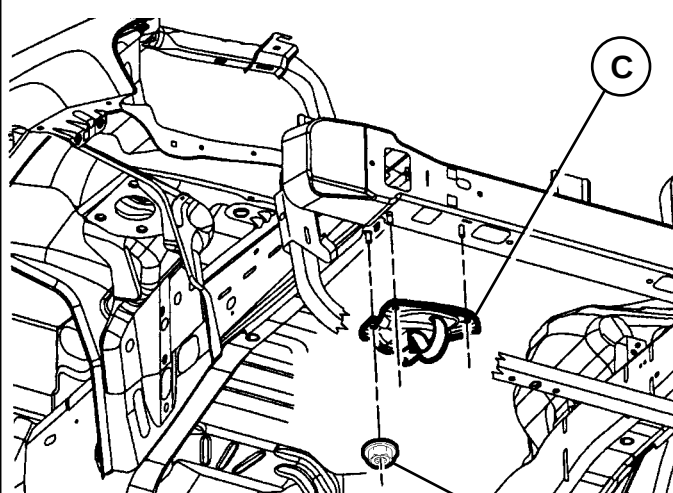

7

50 ft.-lbs. (68 N·m) **E** 3x

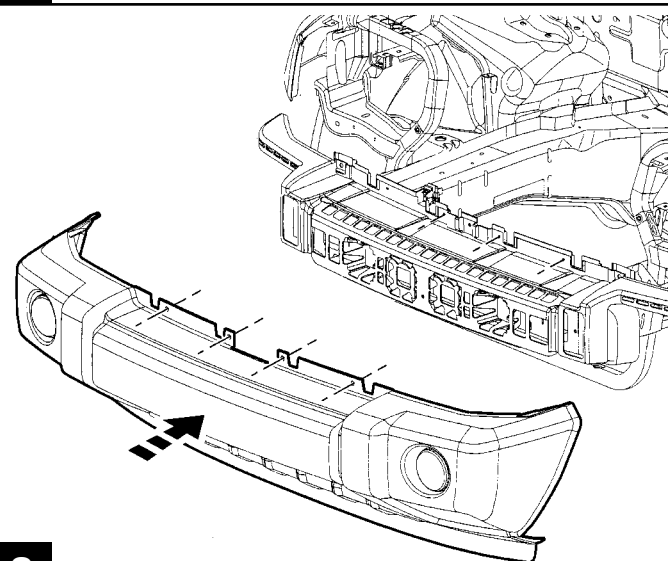

8 Re-install front fascia.