


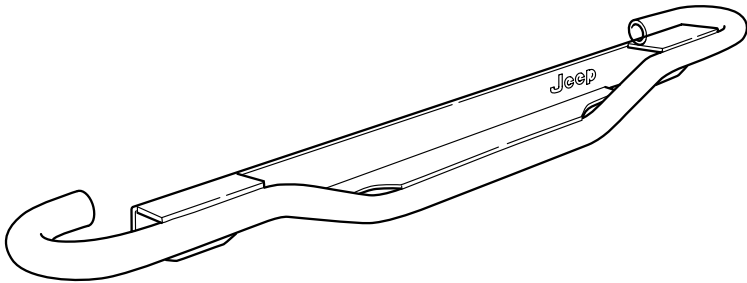


JEEP WRANGLER


Rear Bumper




A

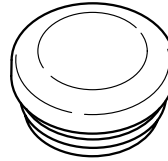










B 2x

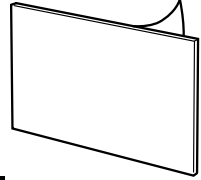

C

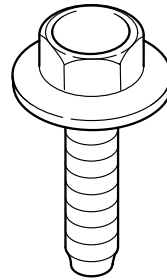


D 4x

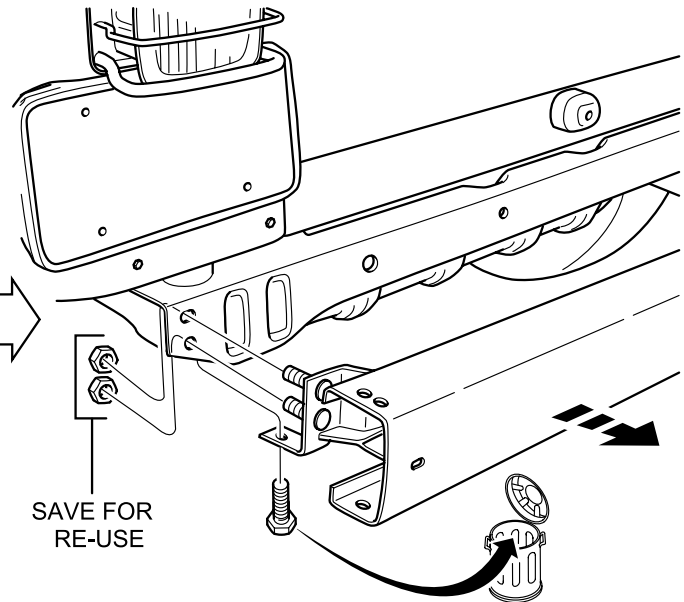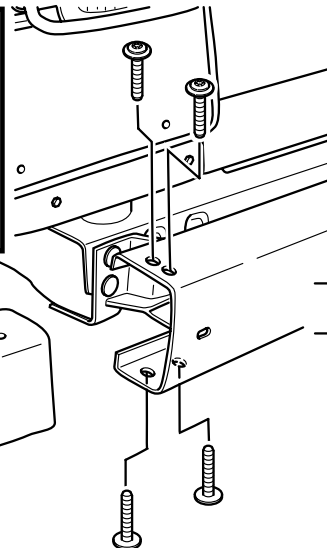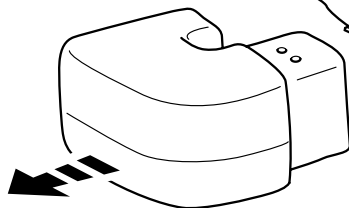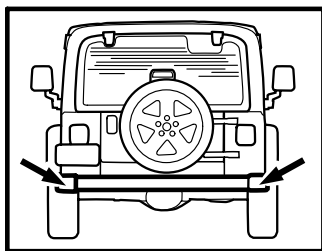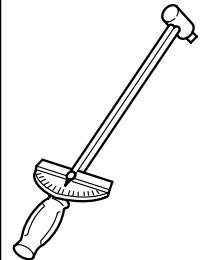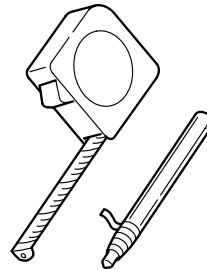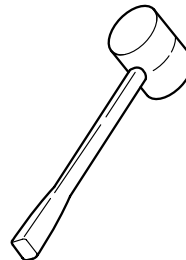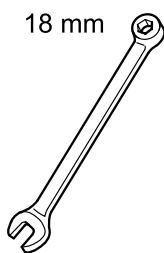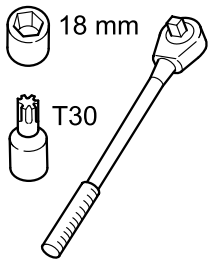


SAVE FOR RE-USE


1

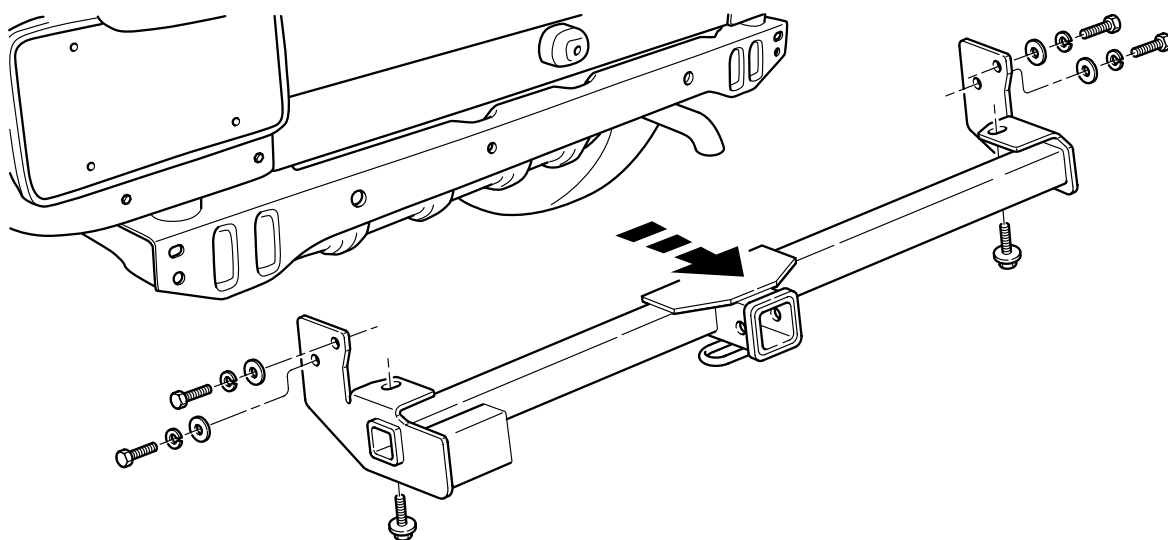


2 Remove trailer hitch, if equipped. See K6859176.

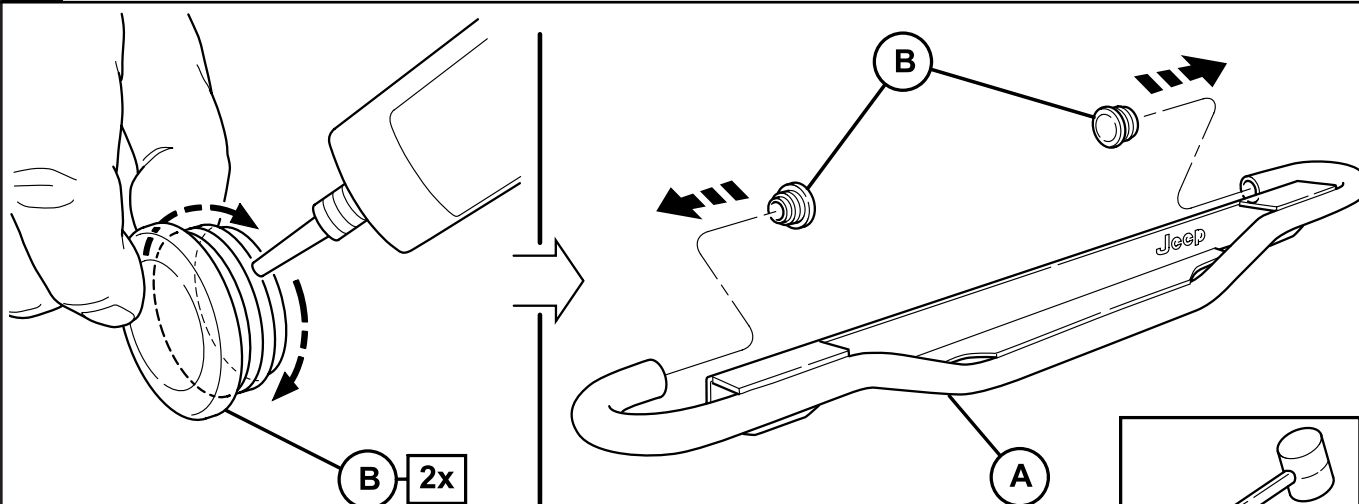


3 It is recommended to apply Mopar Weatherstrip Adhesive 04773774 or equivalent to the threads of the end plug.

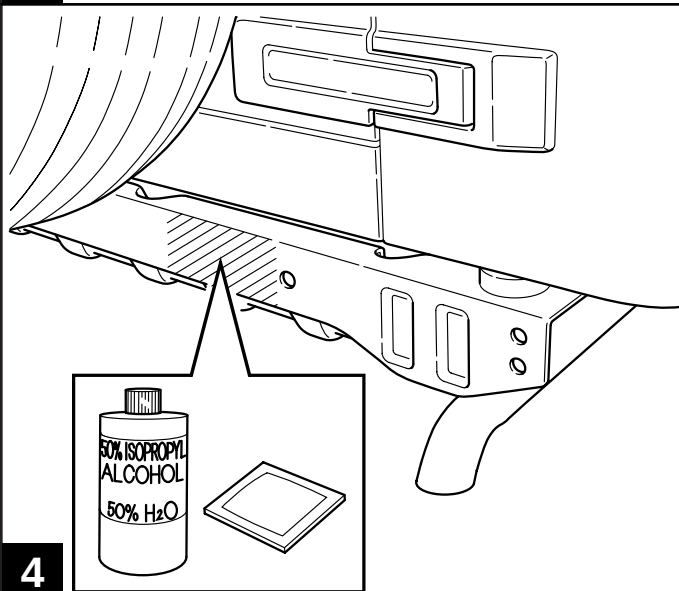


4

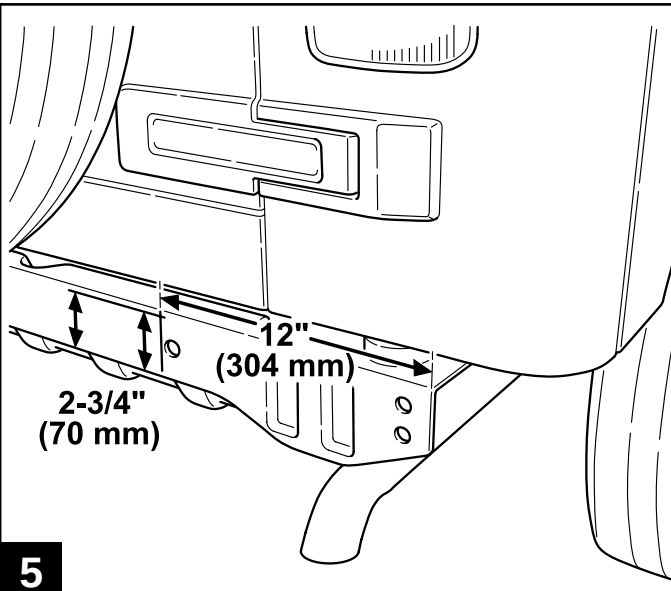


5

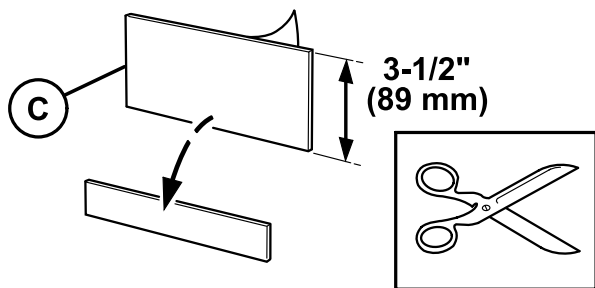


6

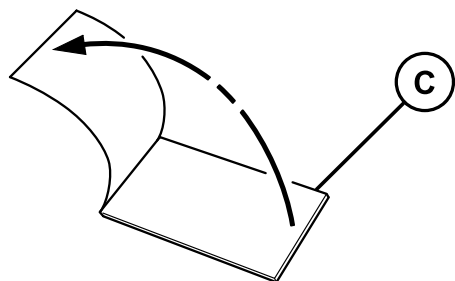


7

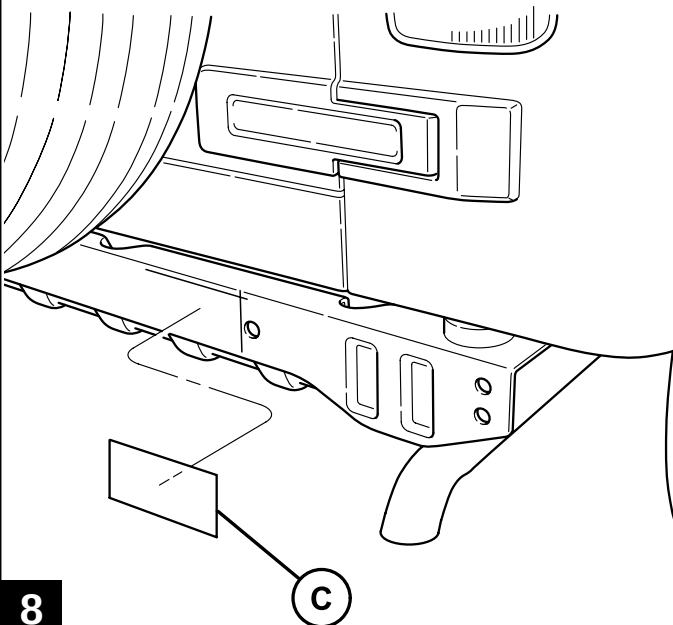

8

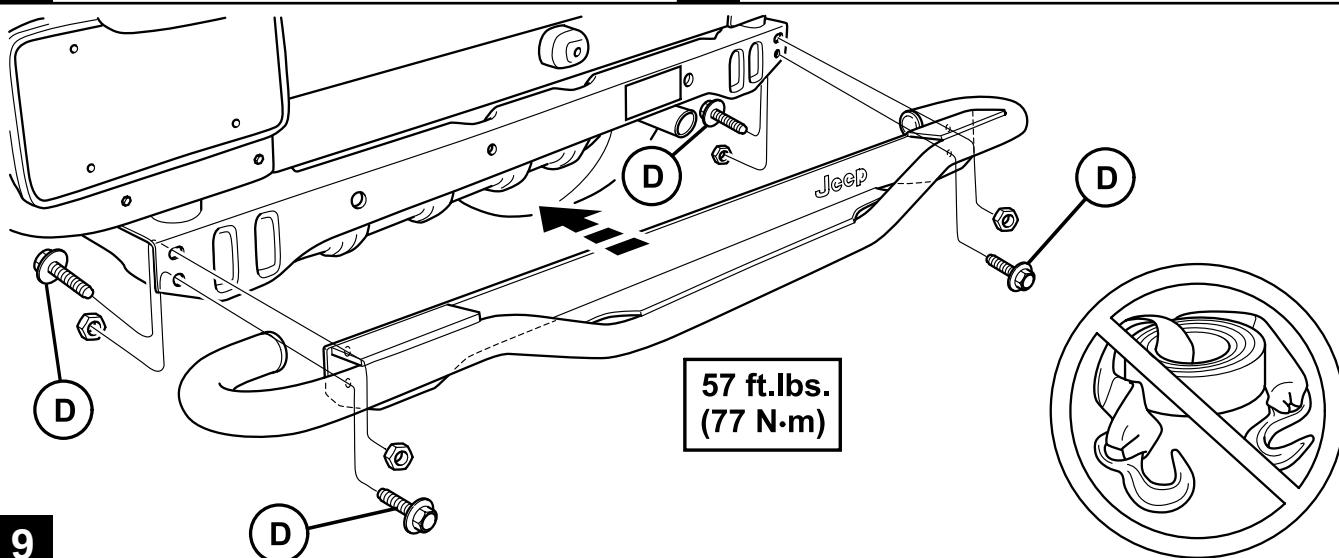

9

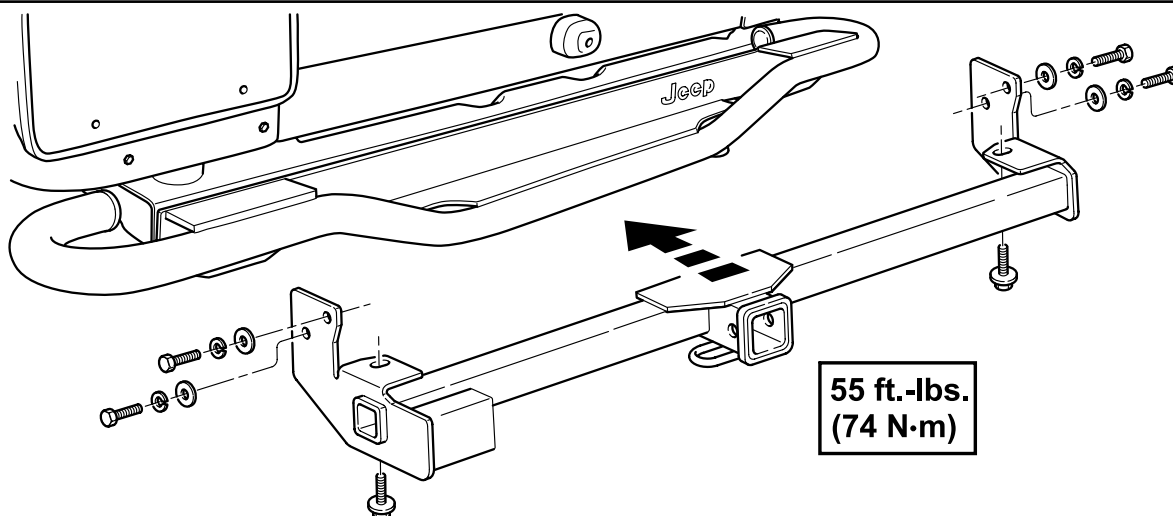

10 Re-install trailer hitch, if equipped.