





DODGE RAM TRUCK




Chrome Door Mouldings

STANDARD CAB: SEE PAGES 2 AND 3.


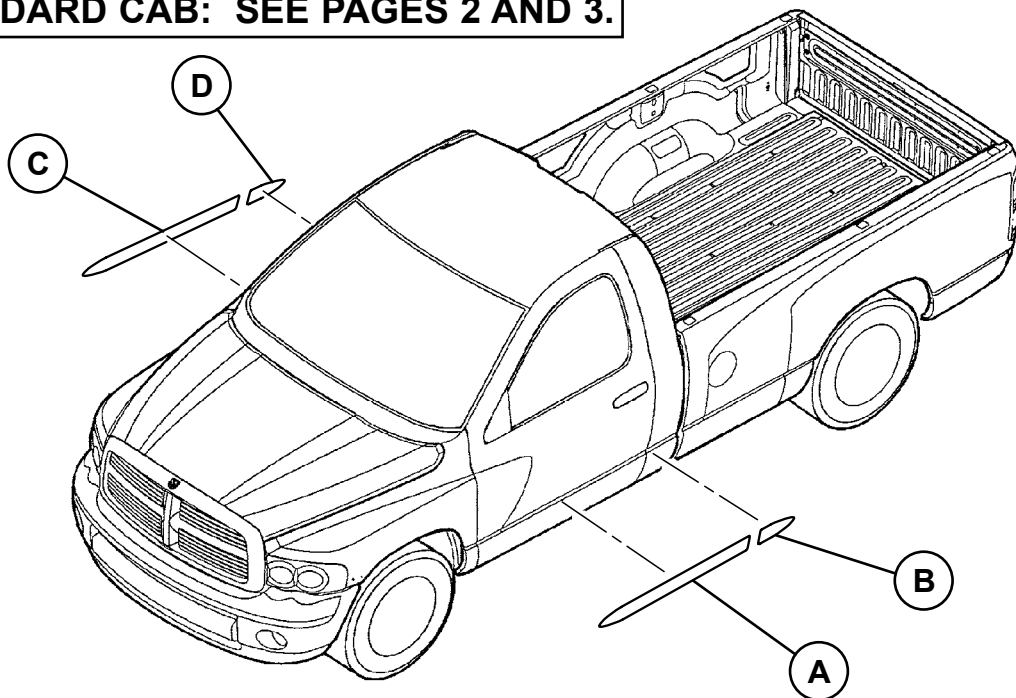


QUAD CAB: SEE PAGES 4 AND 5.



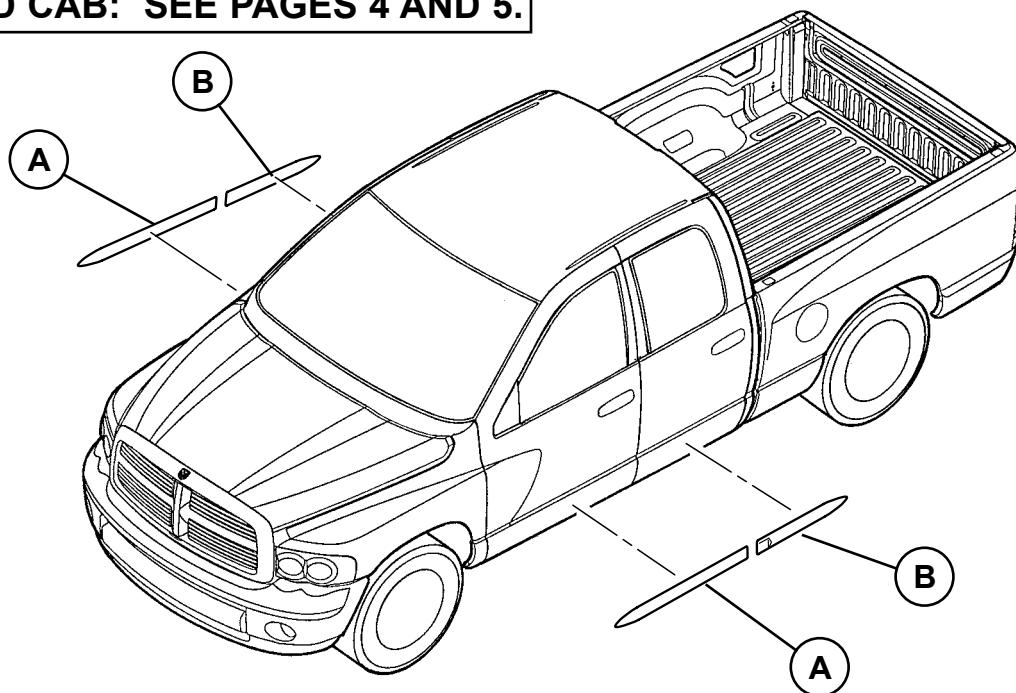


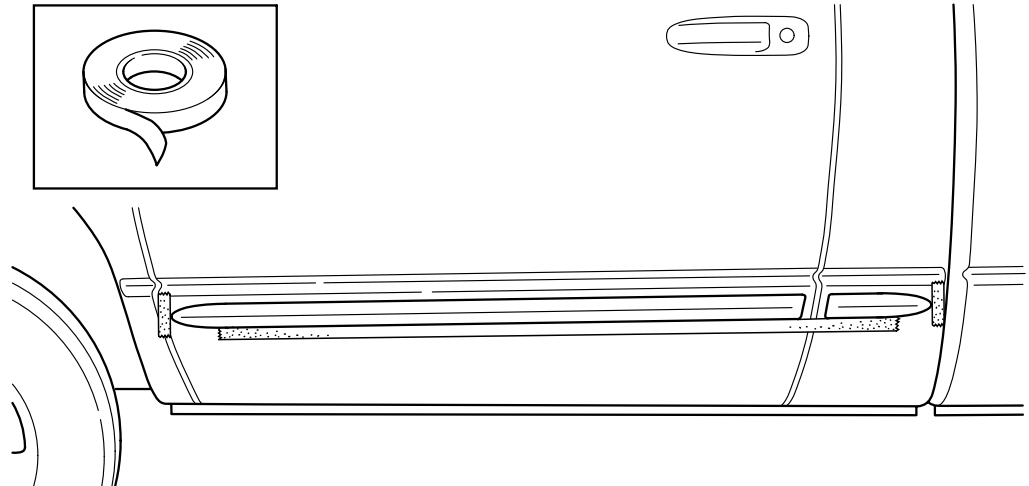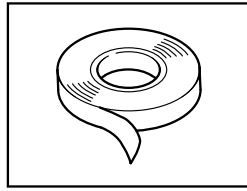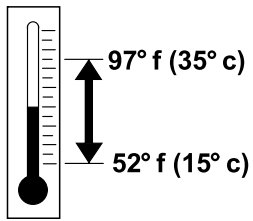**1****2**

IF VEHICLE HAS FACTORY INSTALLED MOULDINGS, APPLY MASKING TAPE AS SHOWN.

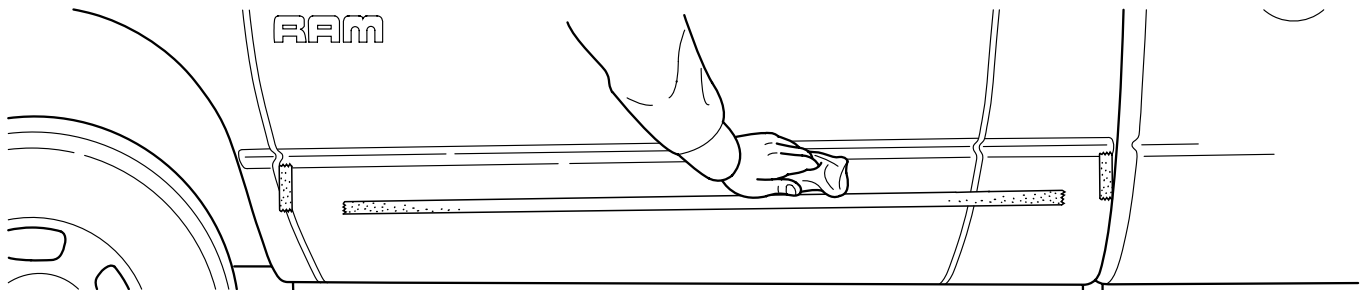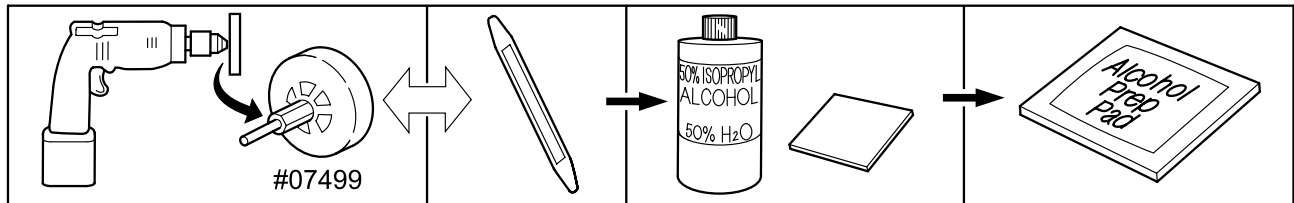
**3**

REMOVE EXISTING MOULDINGS AND ADHESIVE RESIDUE.

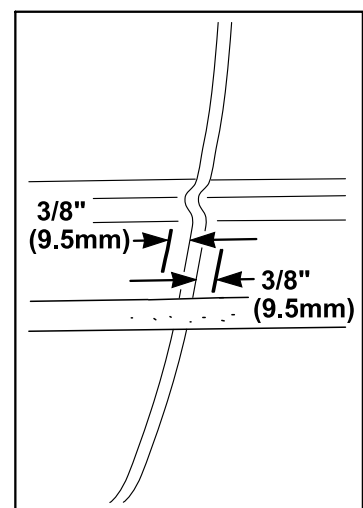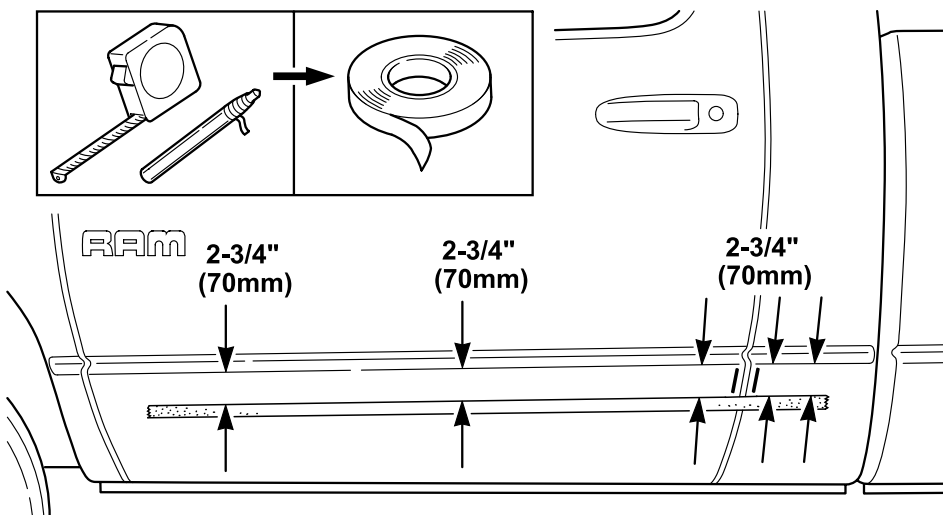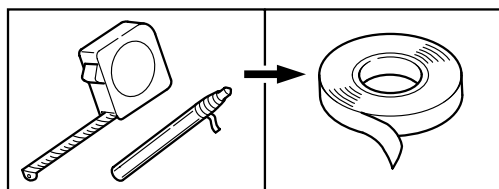
**4**

IF VEHICLE HAS NO MOULDINGS, MEASURE AS SHOWN AND APPLY MASKING TAPE.


STANDARD CAB

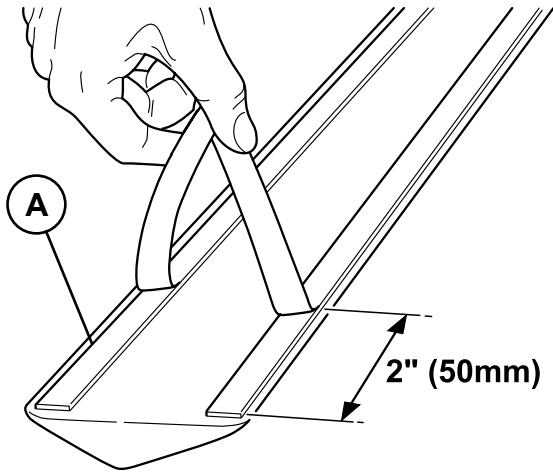


5

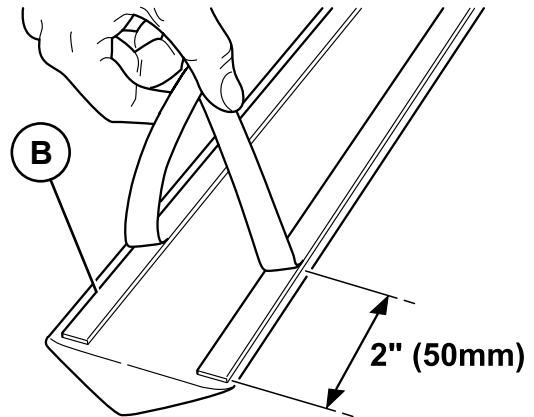


6

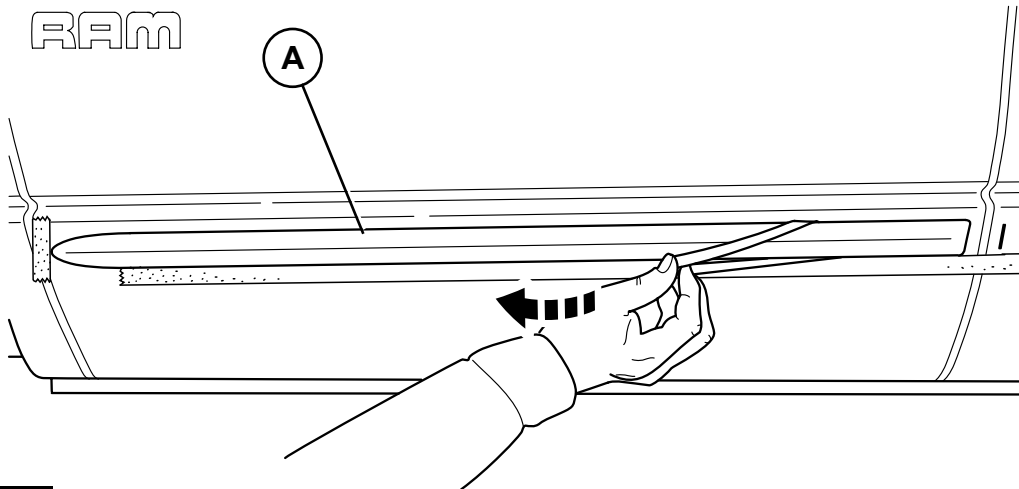


7

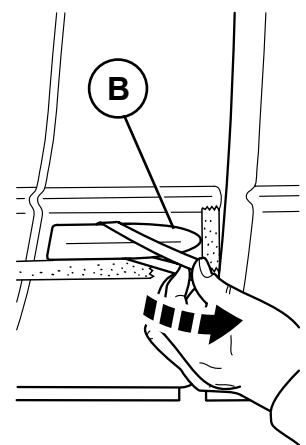



8

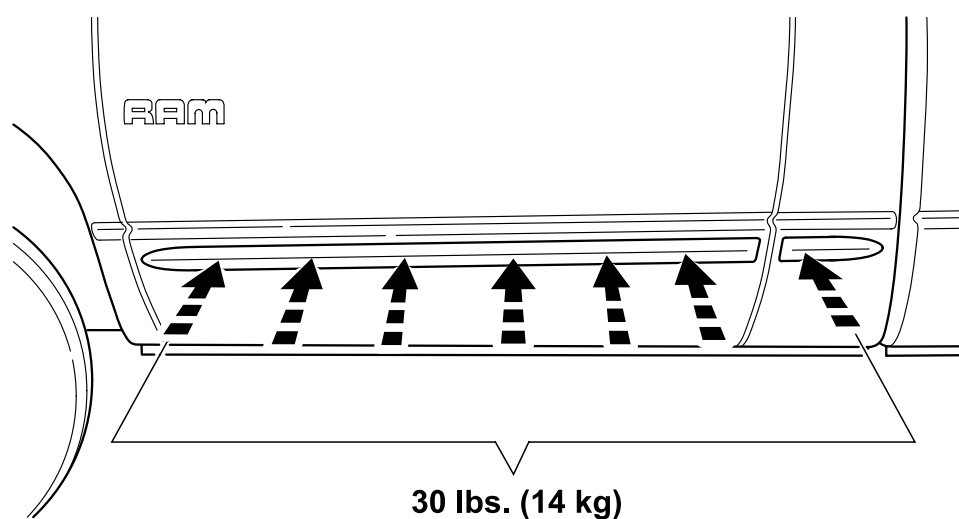


9

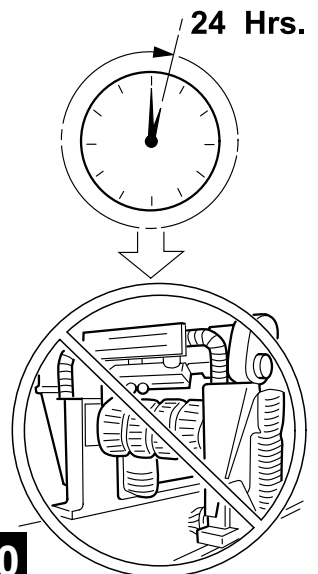

10

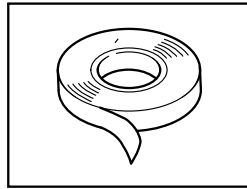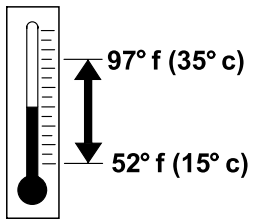


RAM

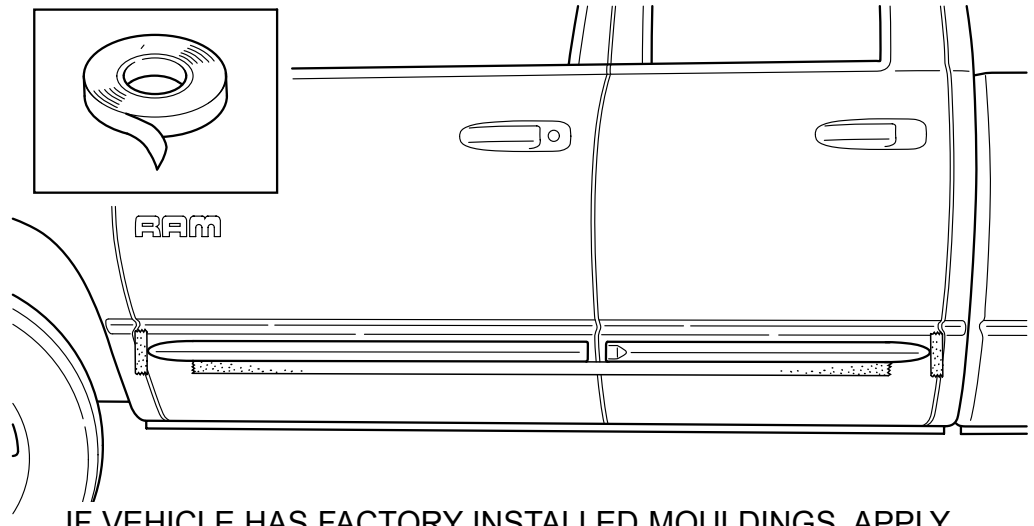


1

2

IF VEHICLE HAS FACTORY INSTALLED MOULDINGS, APPLY MASKING TAPE AS SHOWN.


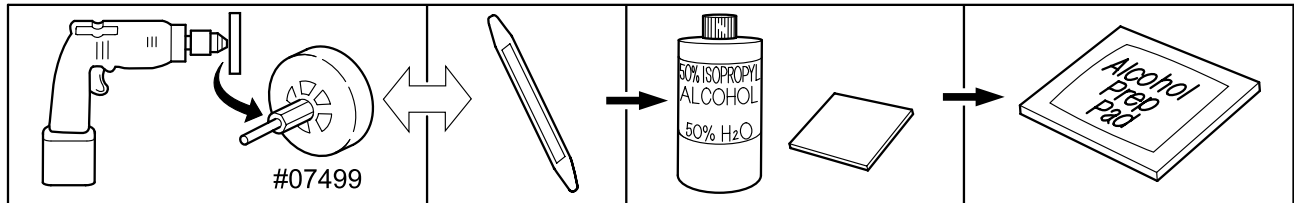


RAM

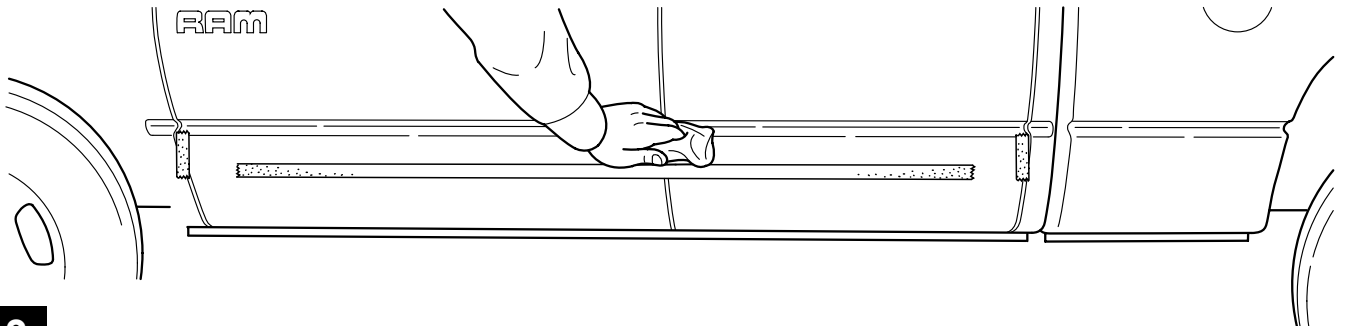


3

REMOVE EXISTING DOOR MOULDINGS AND ADHESIVE RESIDUE.

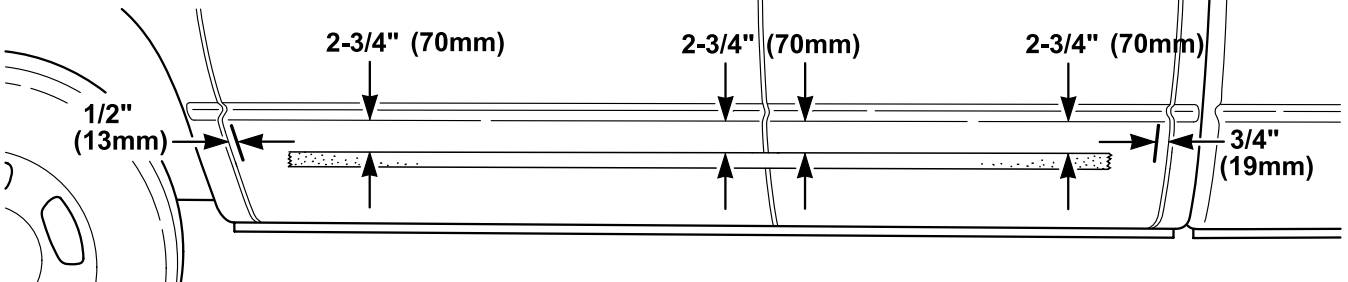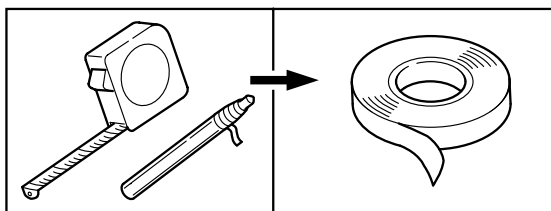


5


IF VEHICLE HAS NO MOULDINGS, MEASURE AS SHOWN AND APPLY MASKING TAPE.

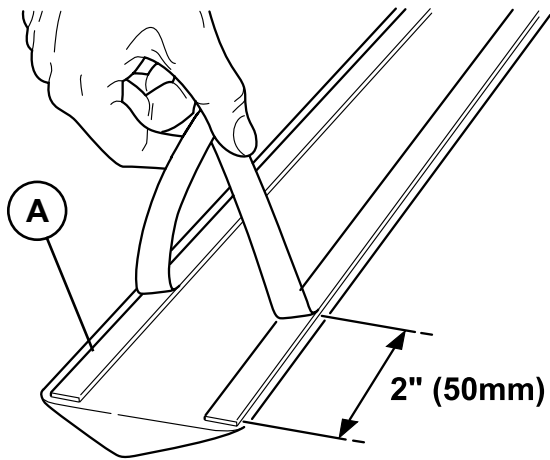


5

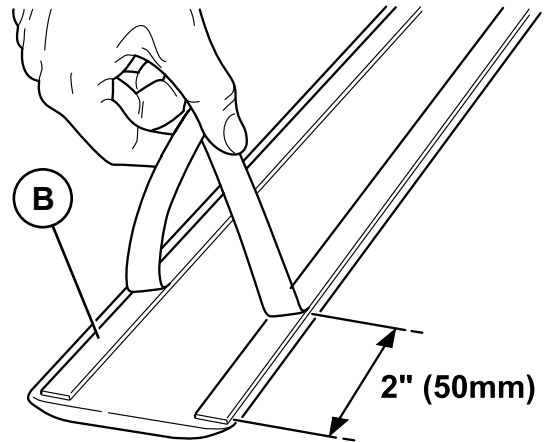


6

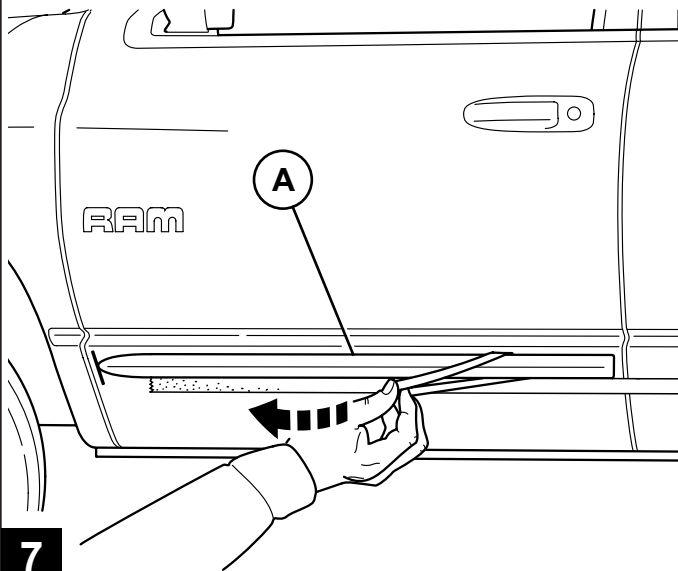

7

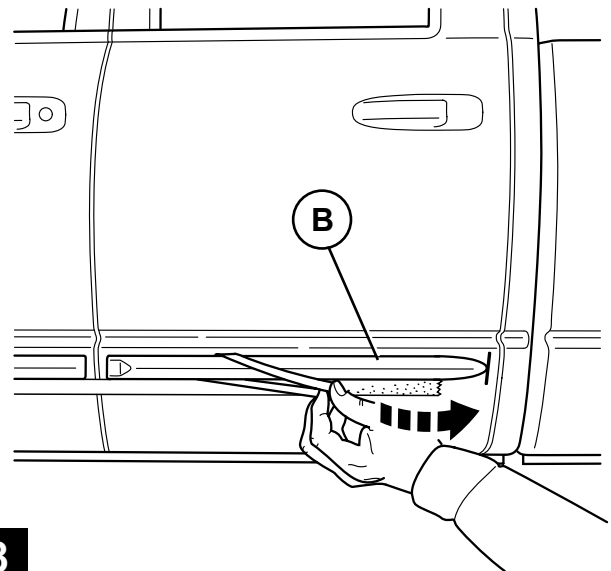


8

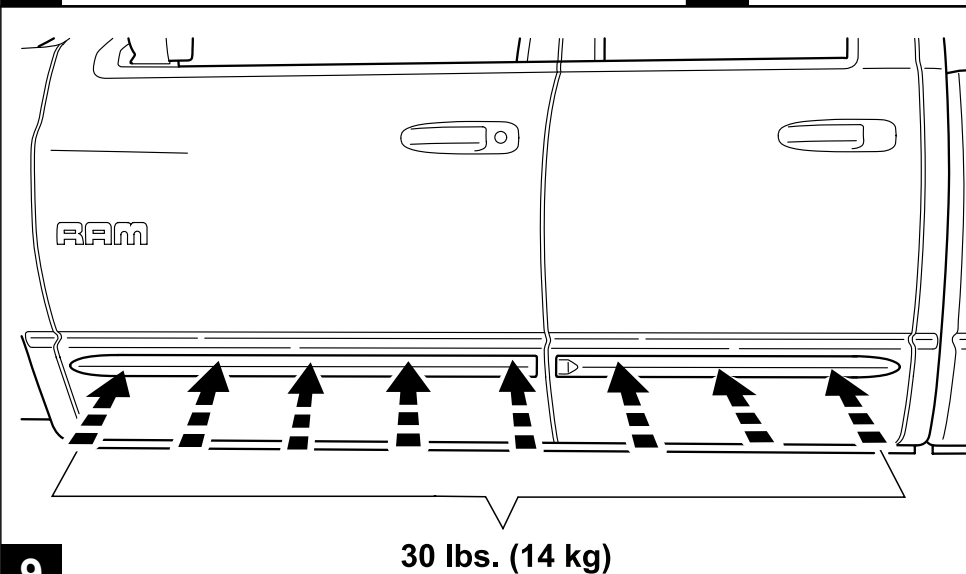

9

30 lbs. (14 kg)

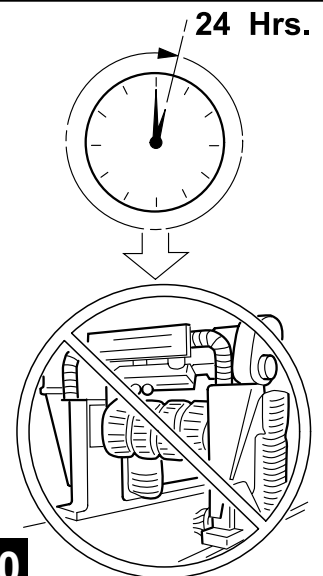

10