

Clean, Lint Free Cloth



Isopropyl Alcohol
(rubbing alcohol)



Plastic Squeegee
(included)




Sharp Needle or Pin



Soap/Water
(fill with clean water and 2 or 3
drops of Ivory dish detergent)



"Cut Out"

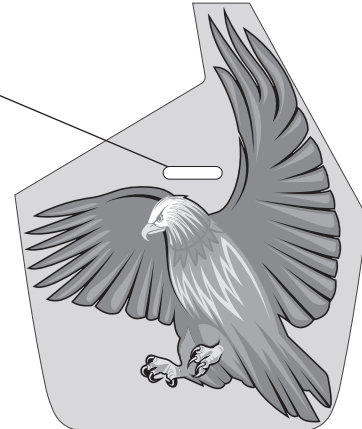

Decal- Golden Eagle Hood Part# 82209886

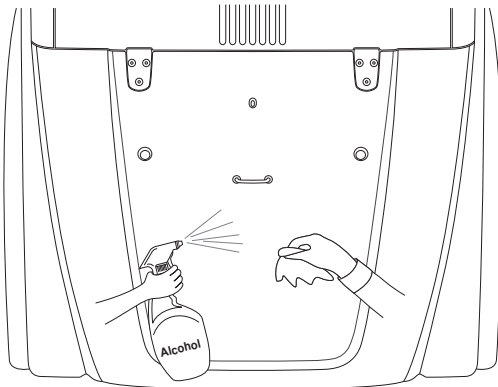


Fig.1

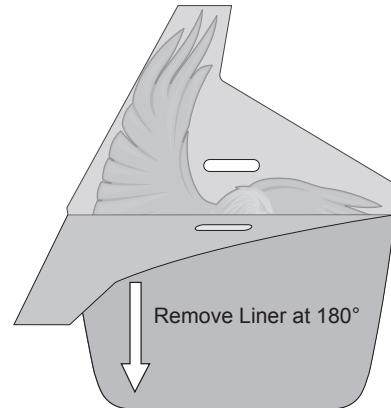


Fig.2


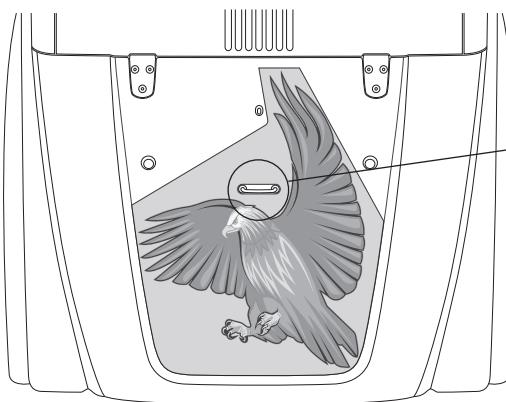


Fig.3

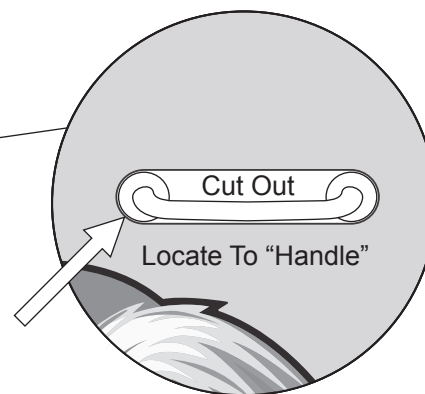

DECAL KIT - GOLDEN EAGLE HOOD

Subject to alteration without notice

DAIMLERCHRYSLER


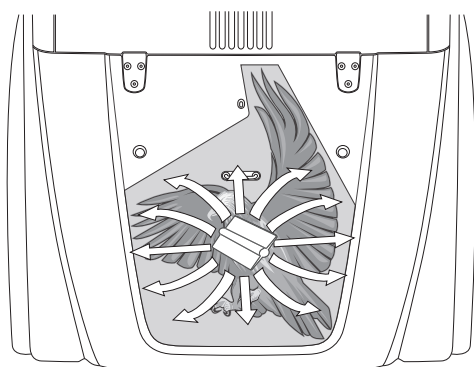


Fig.4

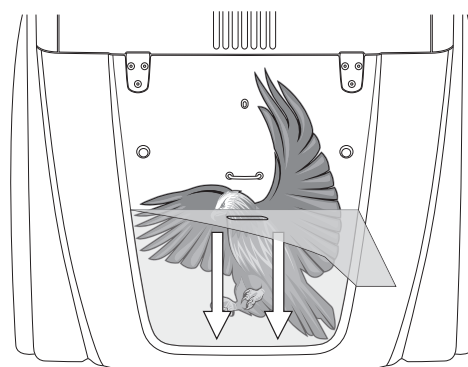

**Remove Premask at 180°
(back against itself)**

Fig.5

SURFACE PREPARATION:

1. Wash vehicle.
2. With clean lint-free cloth, wipe the paint surface with Isopropyl Alcohol just prior to installation. Wipe with dry cloth. The paint surface must be free of dirt, oil, dust and other material (Fig.1).
3. Body surface and decal must be between 70°F and 90°F for proper installation.

APPLICATION OF GOLDEN EAGLE HOOD DECAL:

1. Spray installation area with soap and water solution using a fine mist.
2. Lay decal face down on flat surface and remove paper liner from adhesive side at 180° (back against itself) (Fig.2). Spray adhesive side of decal with soap and water solution.
3. Do not touch adhesive of actual part. Locate the decal to the “handle” in the center of the hood using the “cut out” in the paper premask (Fig.3).
4. Starting at the center, use the plastic squeegee to thoroughly pressurize with firm overlapping strokes (Fig.4).
5. Carefully remove the paper premask by pulling it off at 180° (back against itself). Be extremely careful with the feathers of the eagle.
6. Pressurize again with plastic squeegee.
7. Maintain vehicle body temperature of 70° or higher for a minimum of 30 minutes after decal installation. Do not wash vehicle for 72 hours after installation.

DECAL KIT - GOLDEN EAGLE HOOD

Subject to alteration without notice

DAIMLERCHRYSLER