





CHRYSLER ASPEN

DOOR ENTRY SILLS

- A. 2 FRONTS
B. 2 REARS

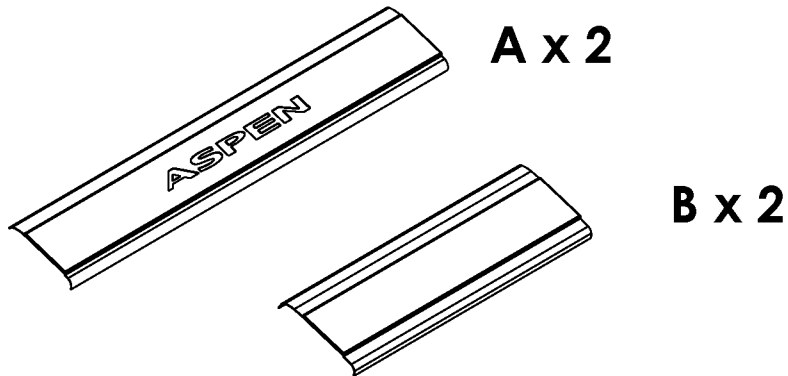

A

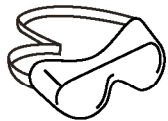

GOGGLES

B

EYE PROTECTION



ADHESION
PROMOTER



ALCOHOL PAD




CLEANING CLOTH




GLOVES

C

PREP KIT

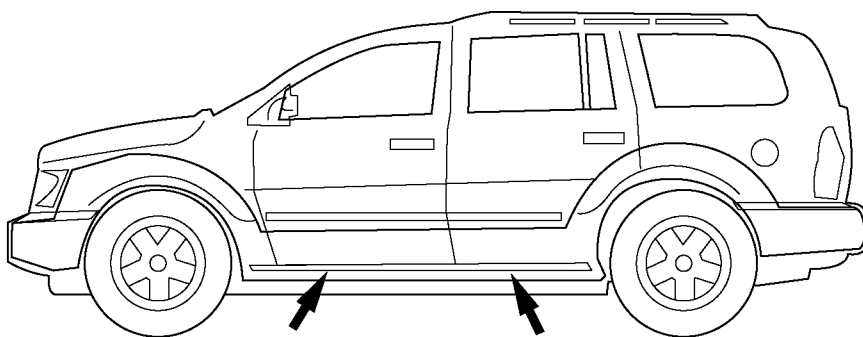


1





97°F
35°C
52°F
15°C

2




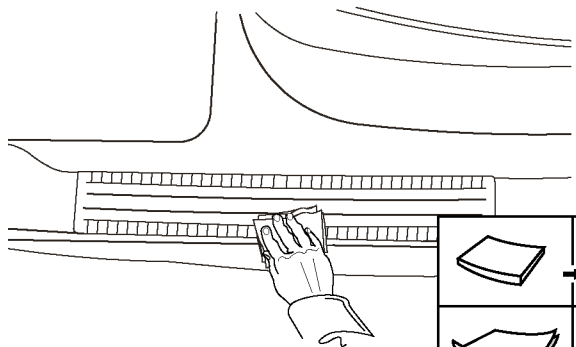


3 FRONT DRIVER SIDE

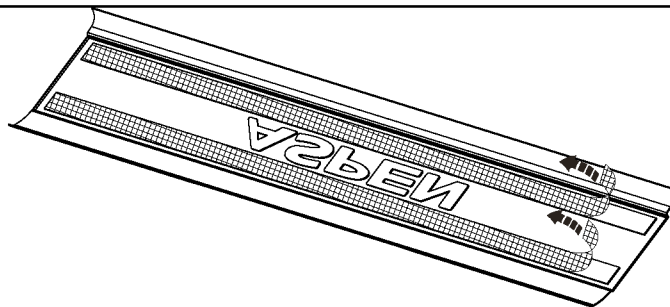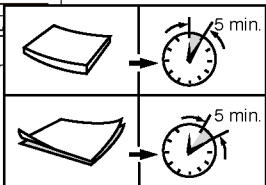



4 COMPLETELY REMOVE THE TAPE BACKING

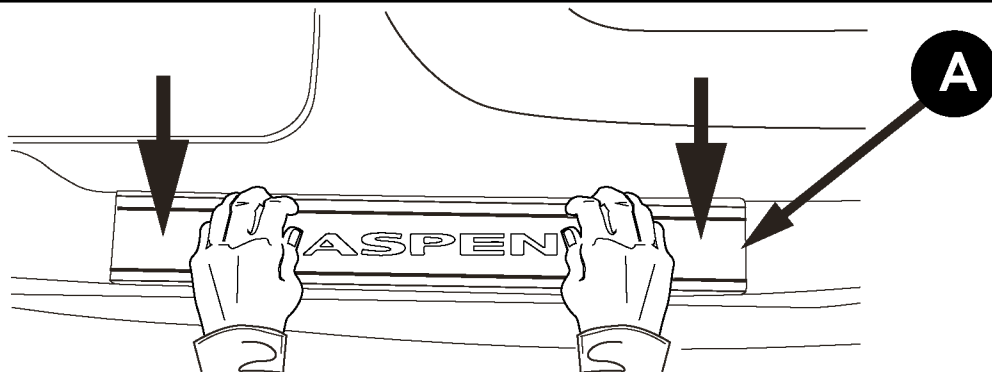


5 REPEAT STEPS 3-5 FOR OTHER SIDE

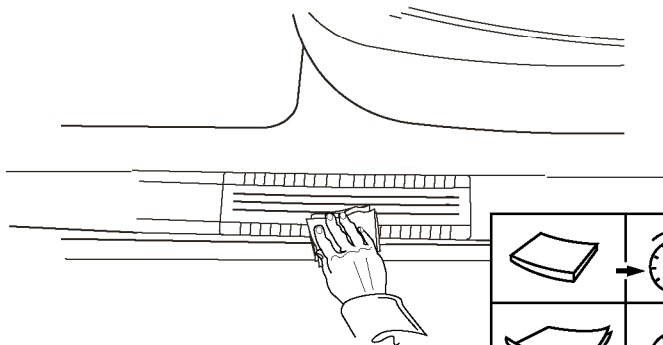

6 REAR DRIVER SIDE

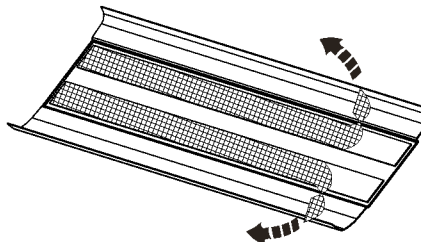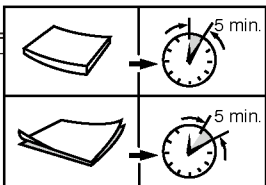

7 COMPLETELY REMOVE THE TAPE BACKING

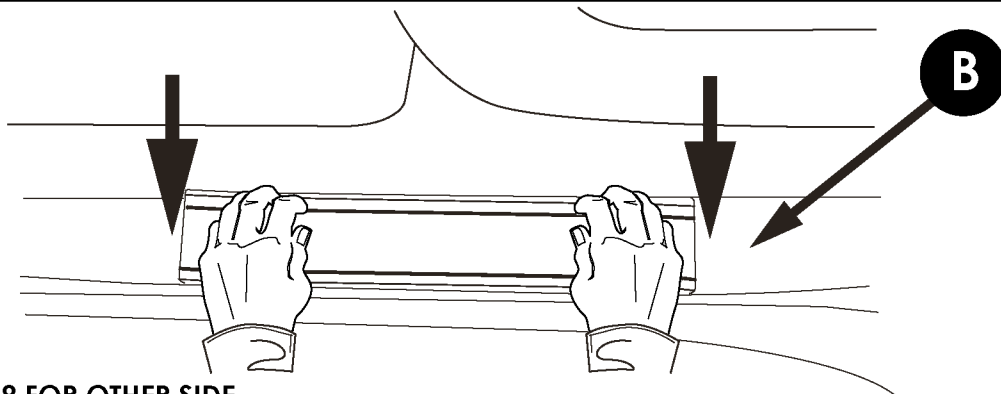

8 REPEAT STEPS 6-8 FOR OTHER SIDE