





MOPAR®

CHRYSLER ASPEN/DODGE DURANGO

Trailer Hitch



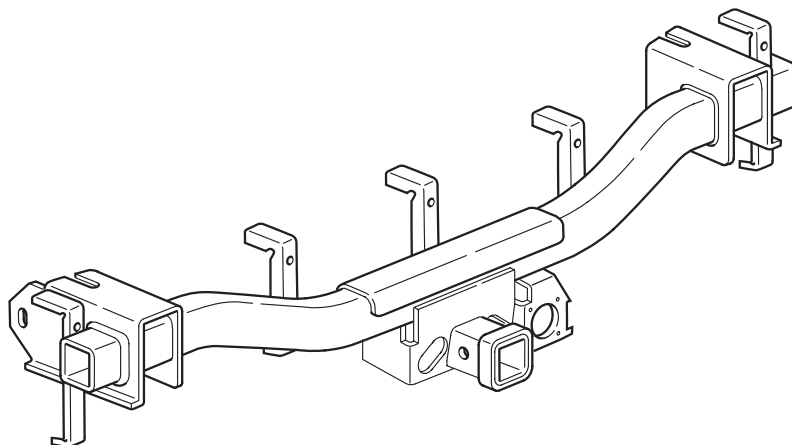


A



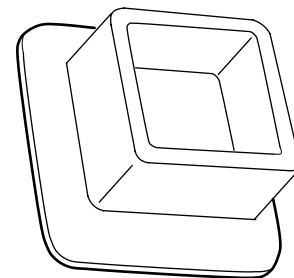


B

☆ T25

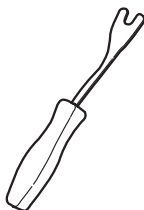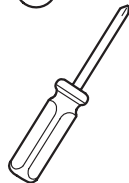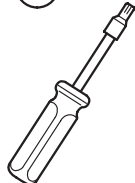


10mm
19mm
21mm

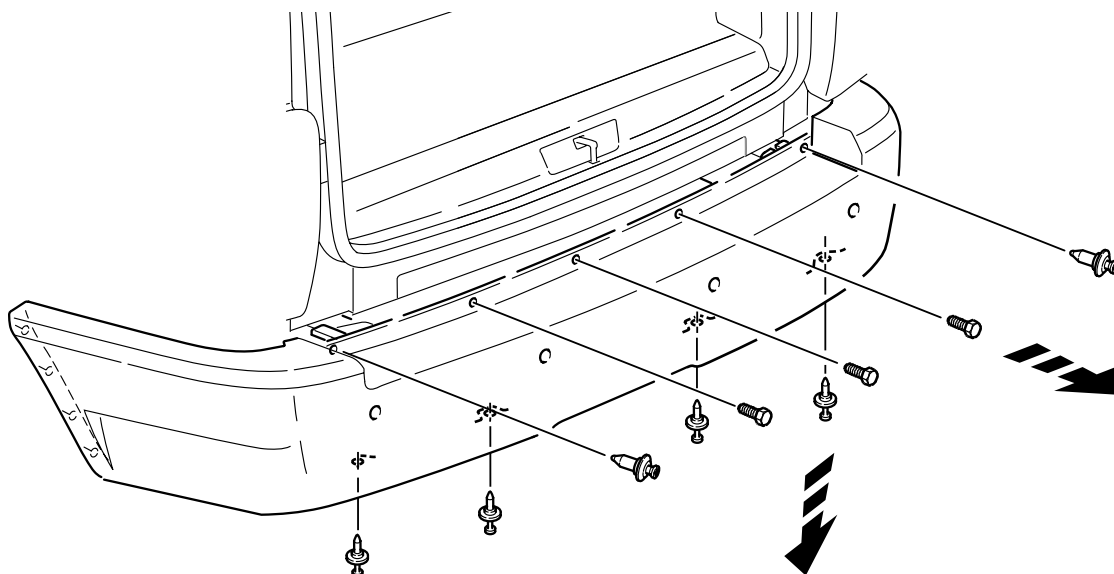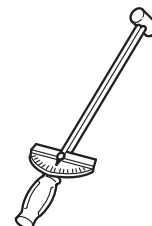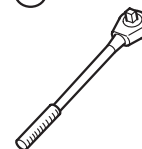

1

2007 Aspen Models


Repeat for other side

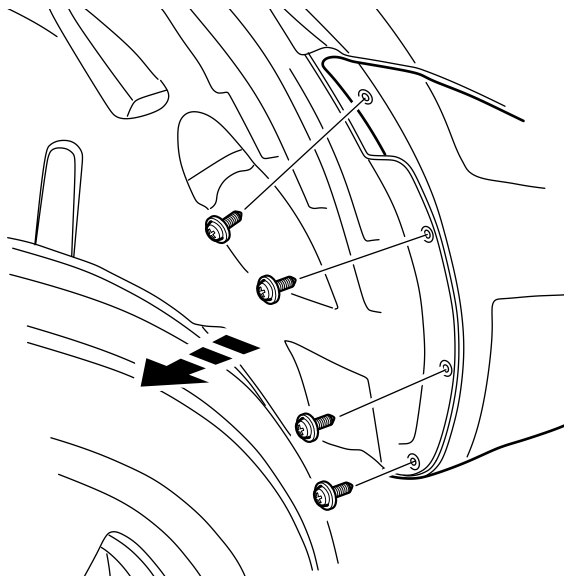

2

2007 Durango Models


Repeat for other side

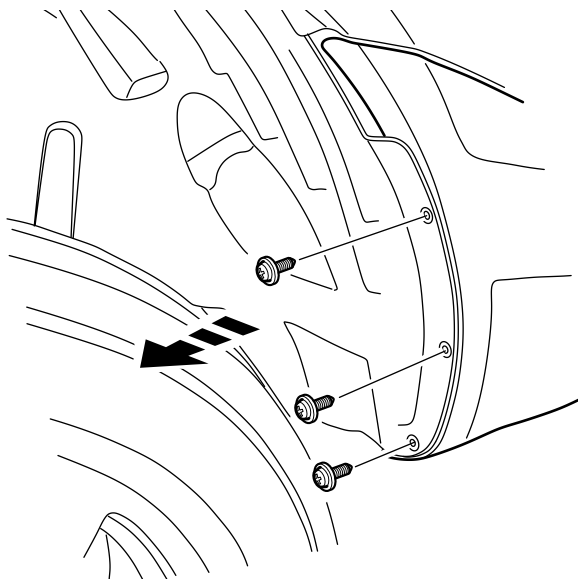


3

2007 Aspen Models



Repeat for other side

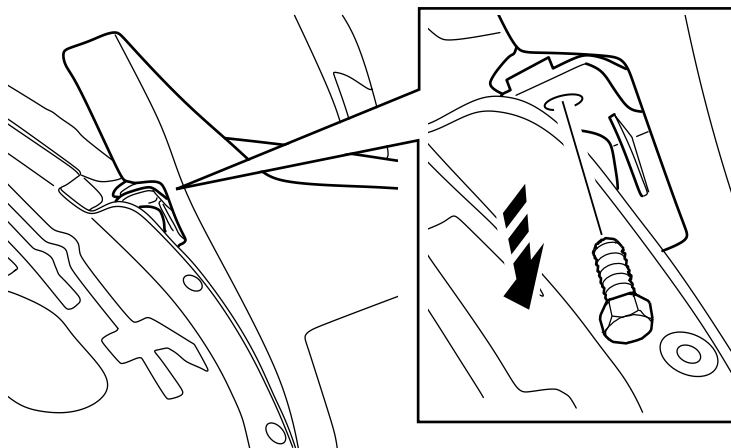



4

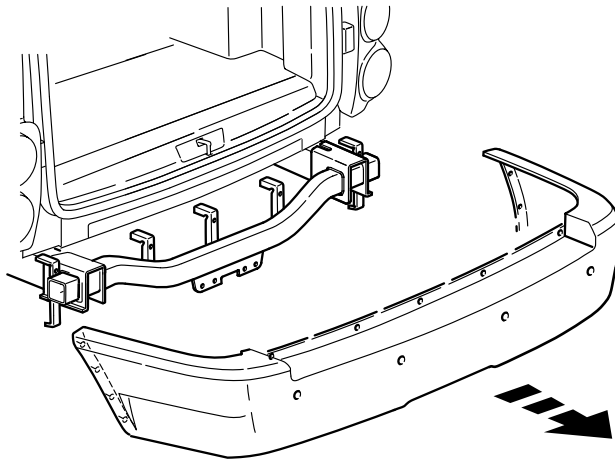

5


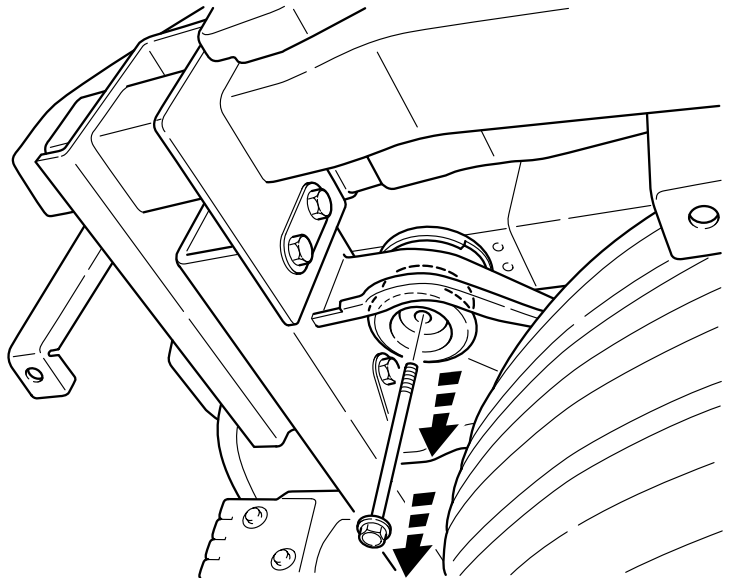
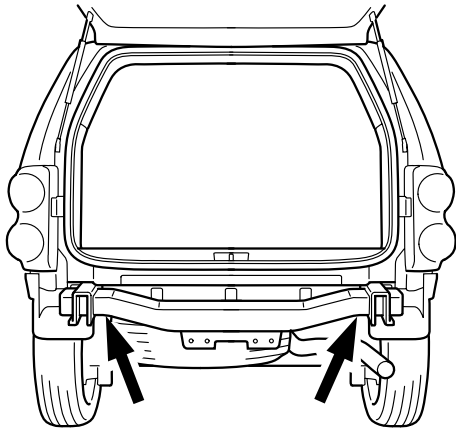



6

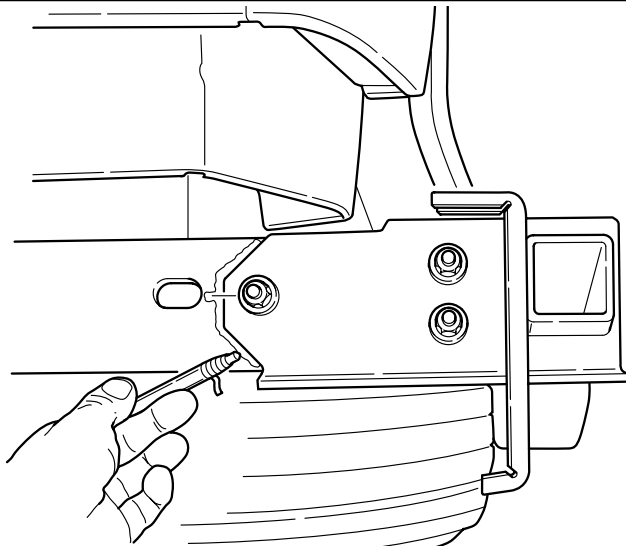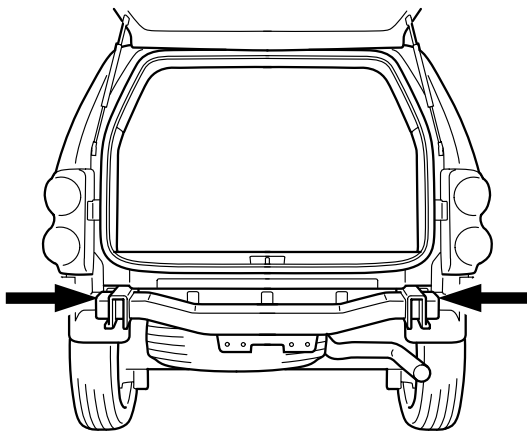

7


MARK THE SIDE RAILS AS SHOWN TO AIDE IN ALIGNMENT DURING TRAILER HITCH INSTALLATION.

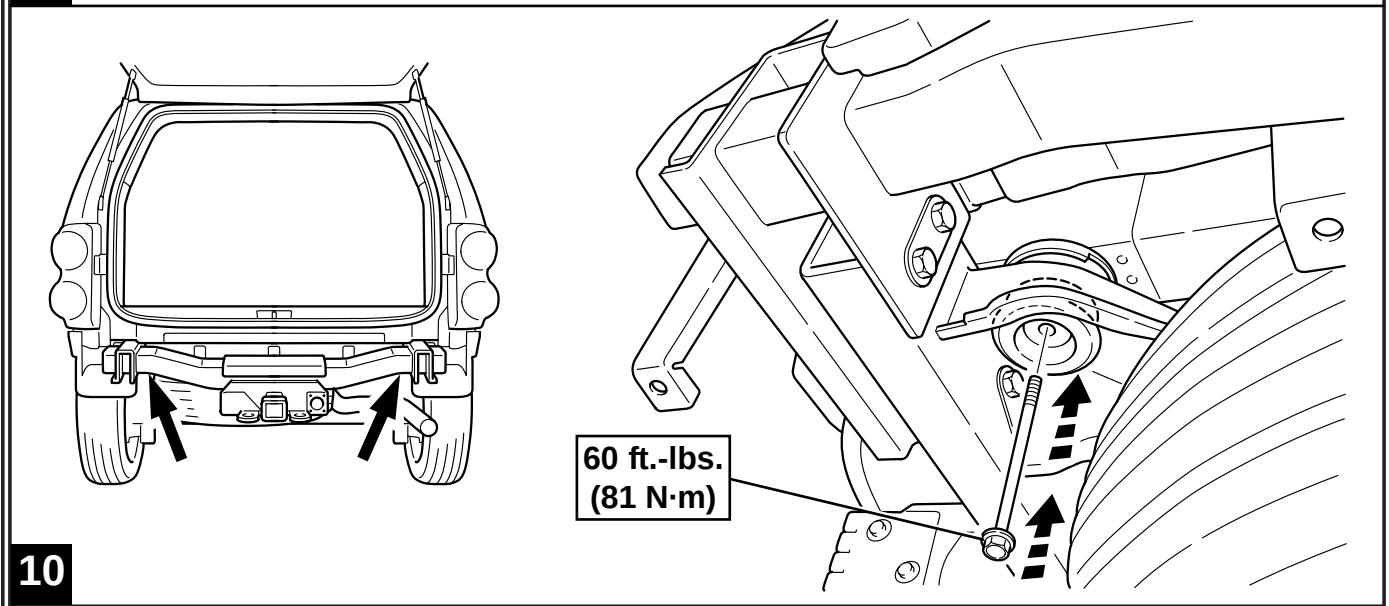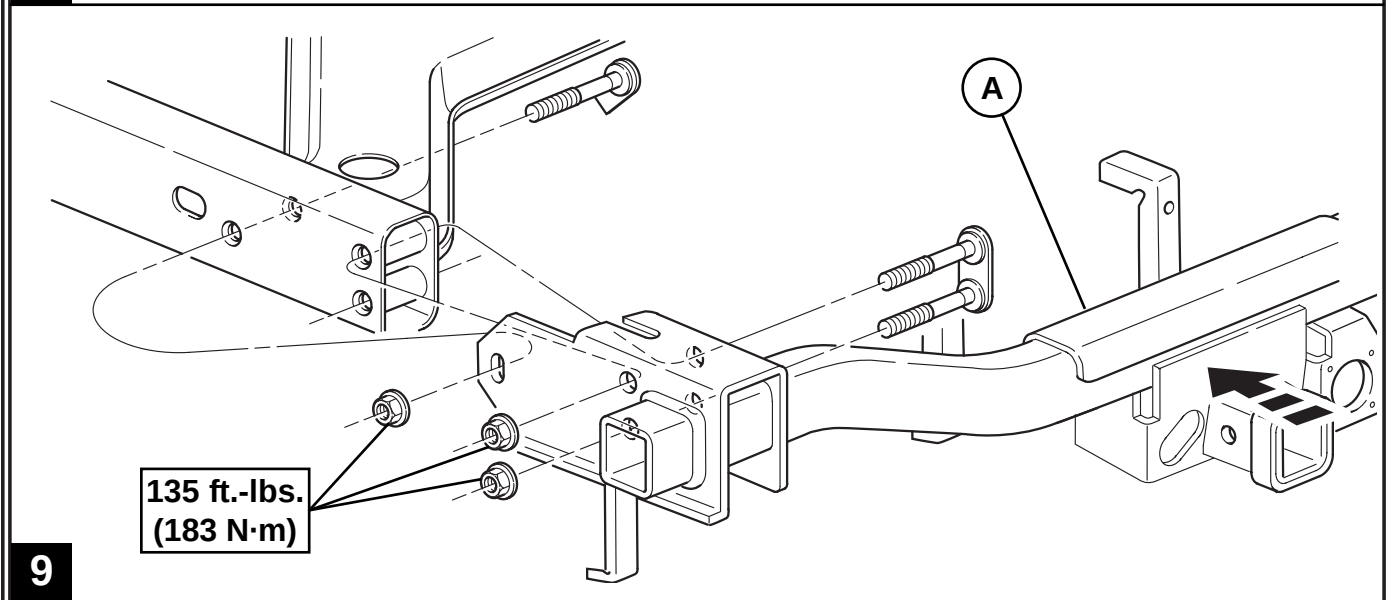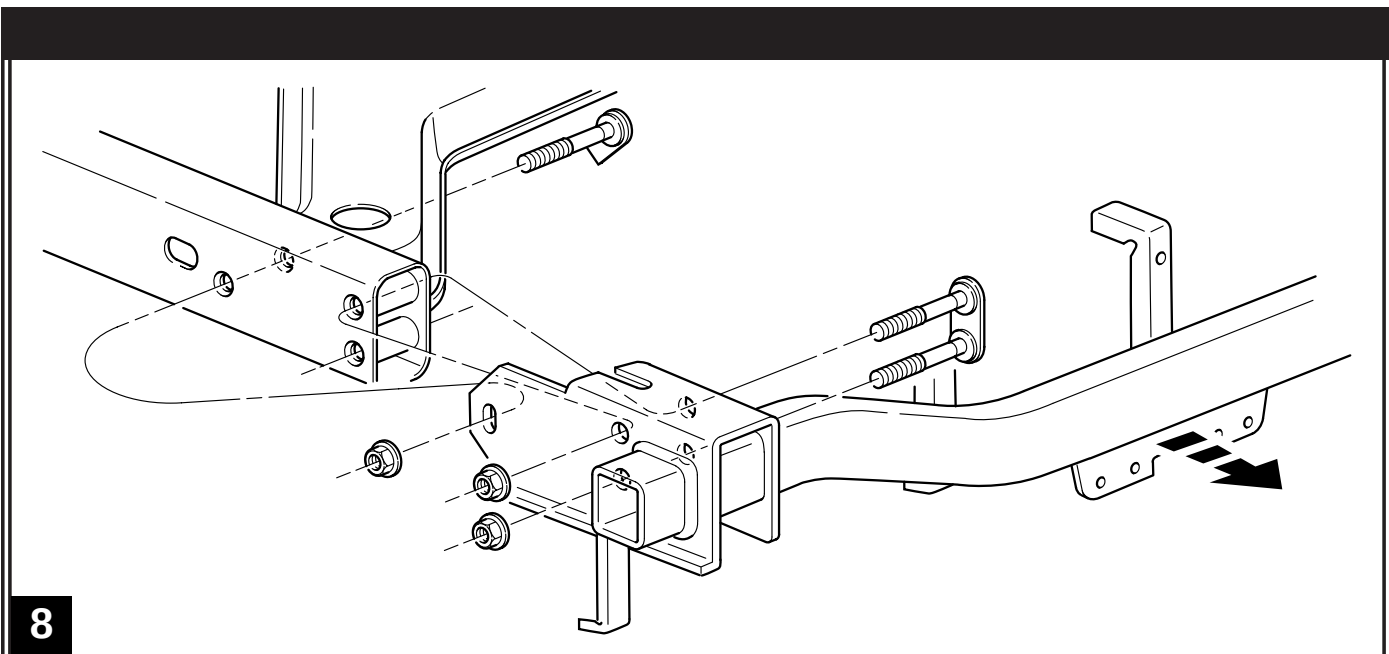

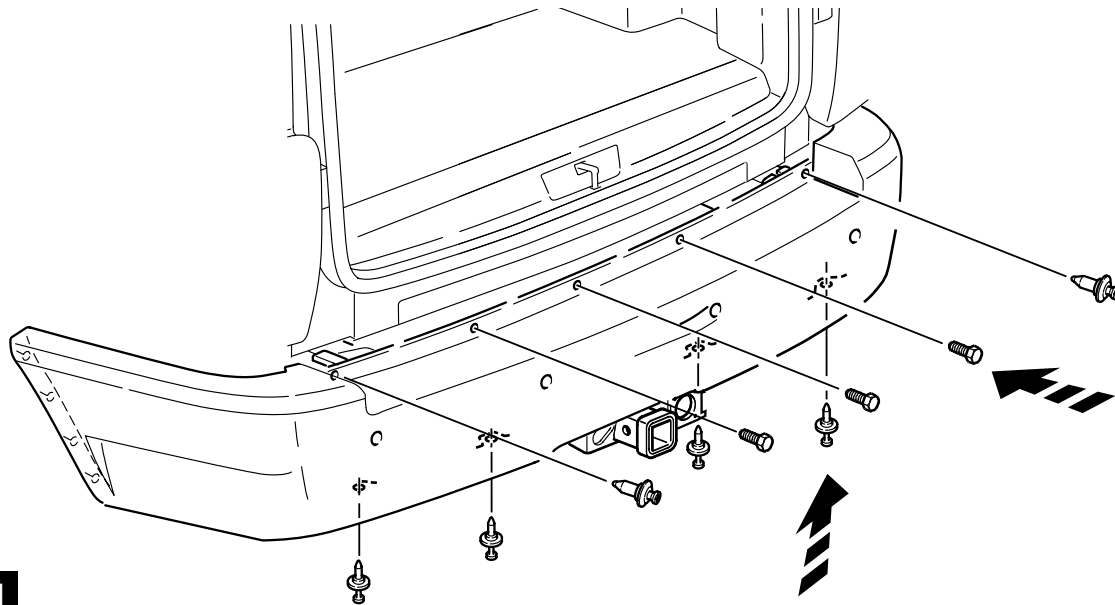

11


2007 Aspen Models

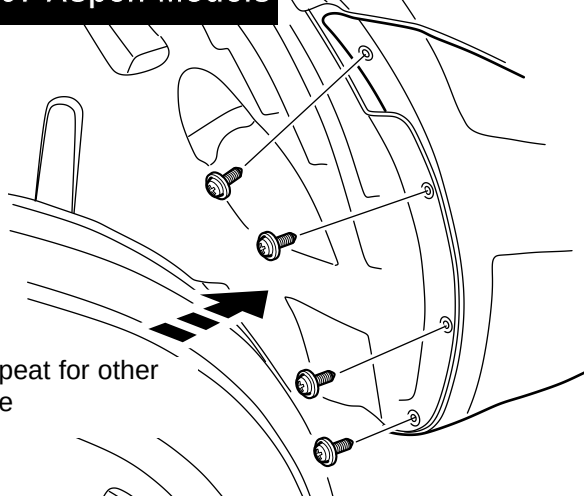

Repeat for other side

12


2007 Durango Models

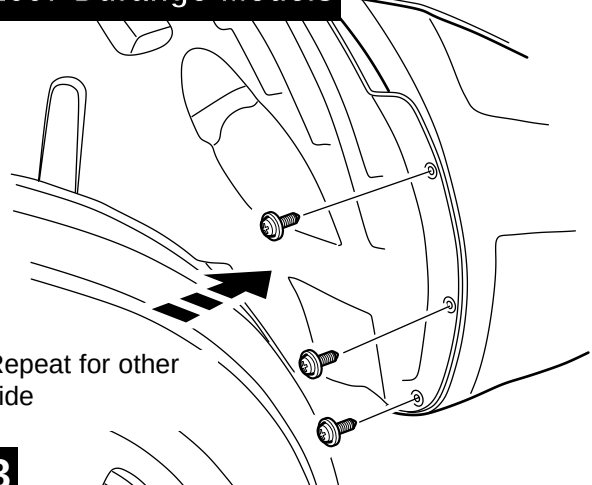

Repeat for other side


13

2007 Aspen Models

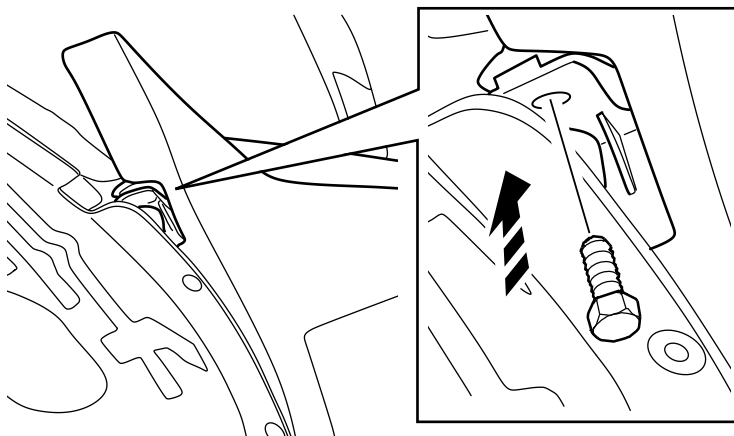

Repeat for other side

14

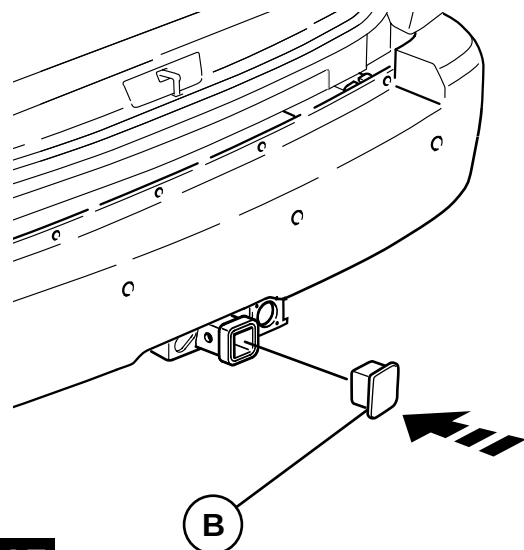

15