



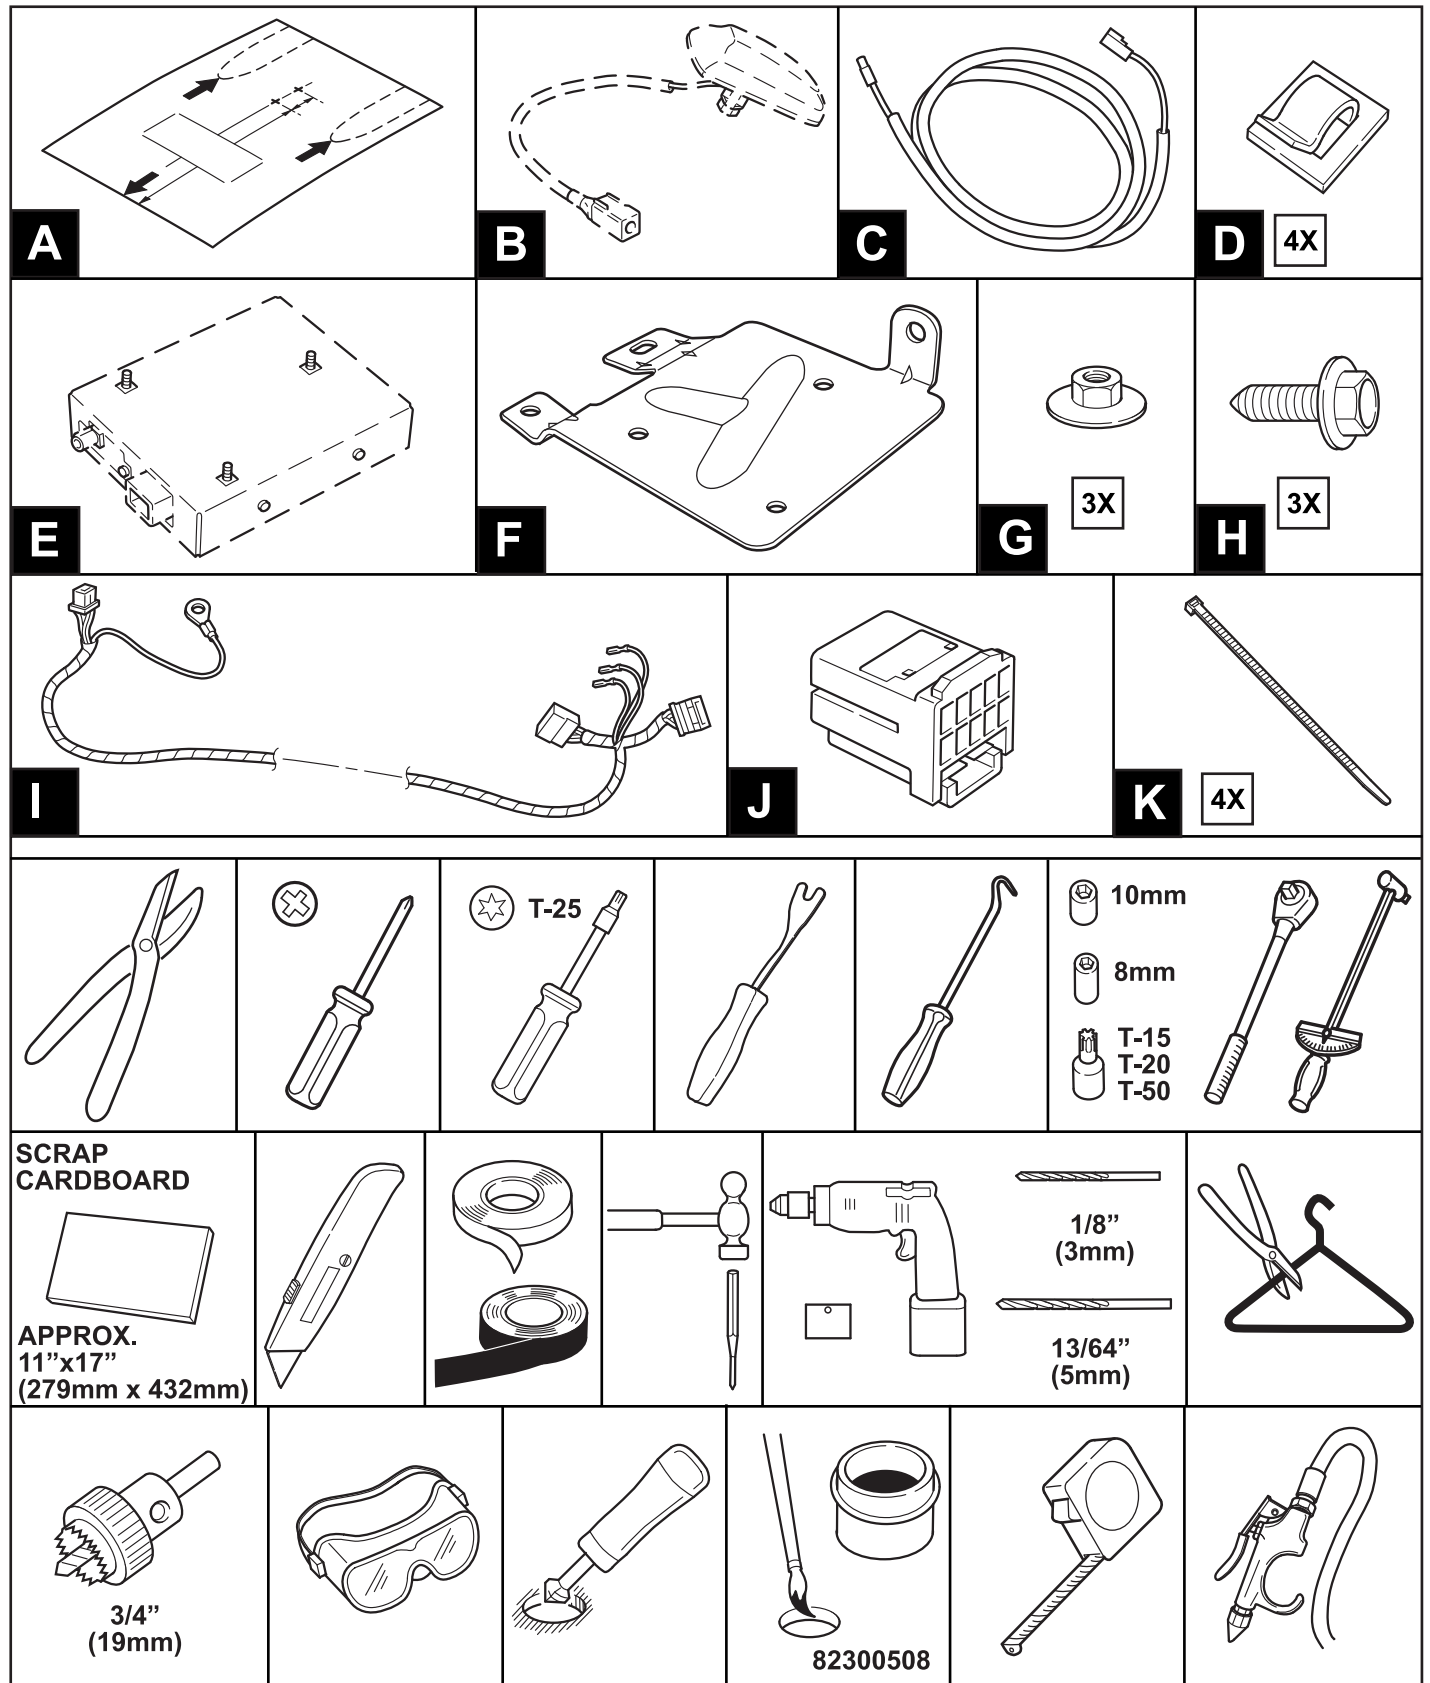


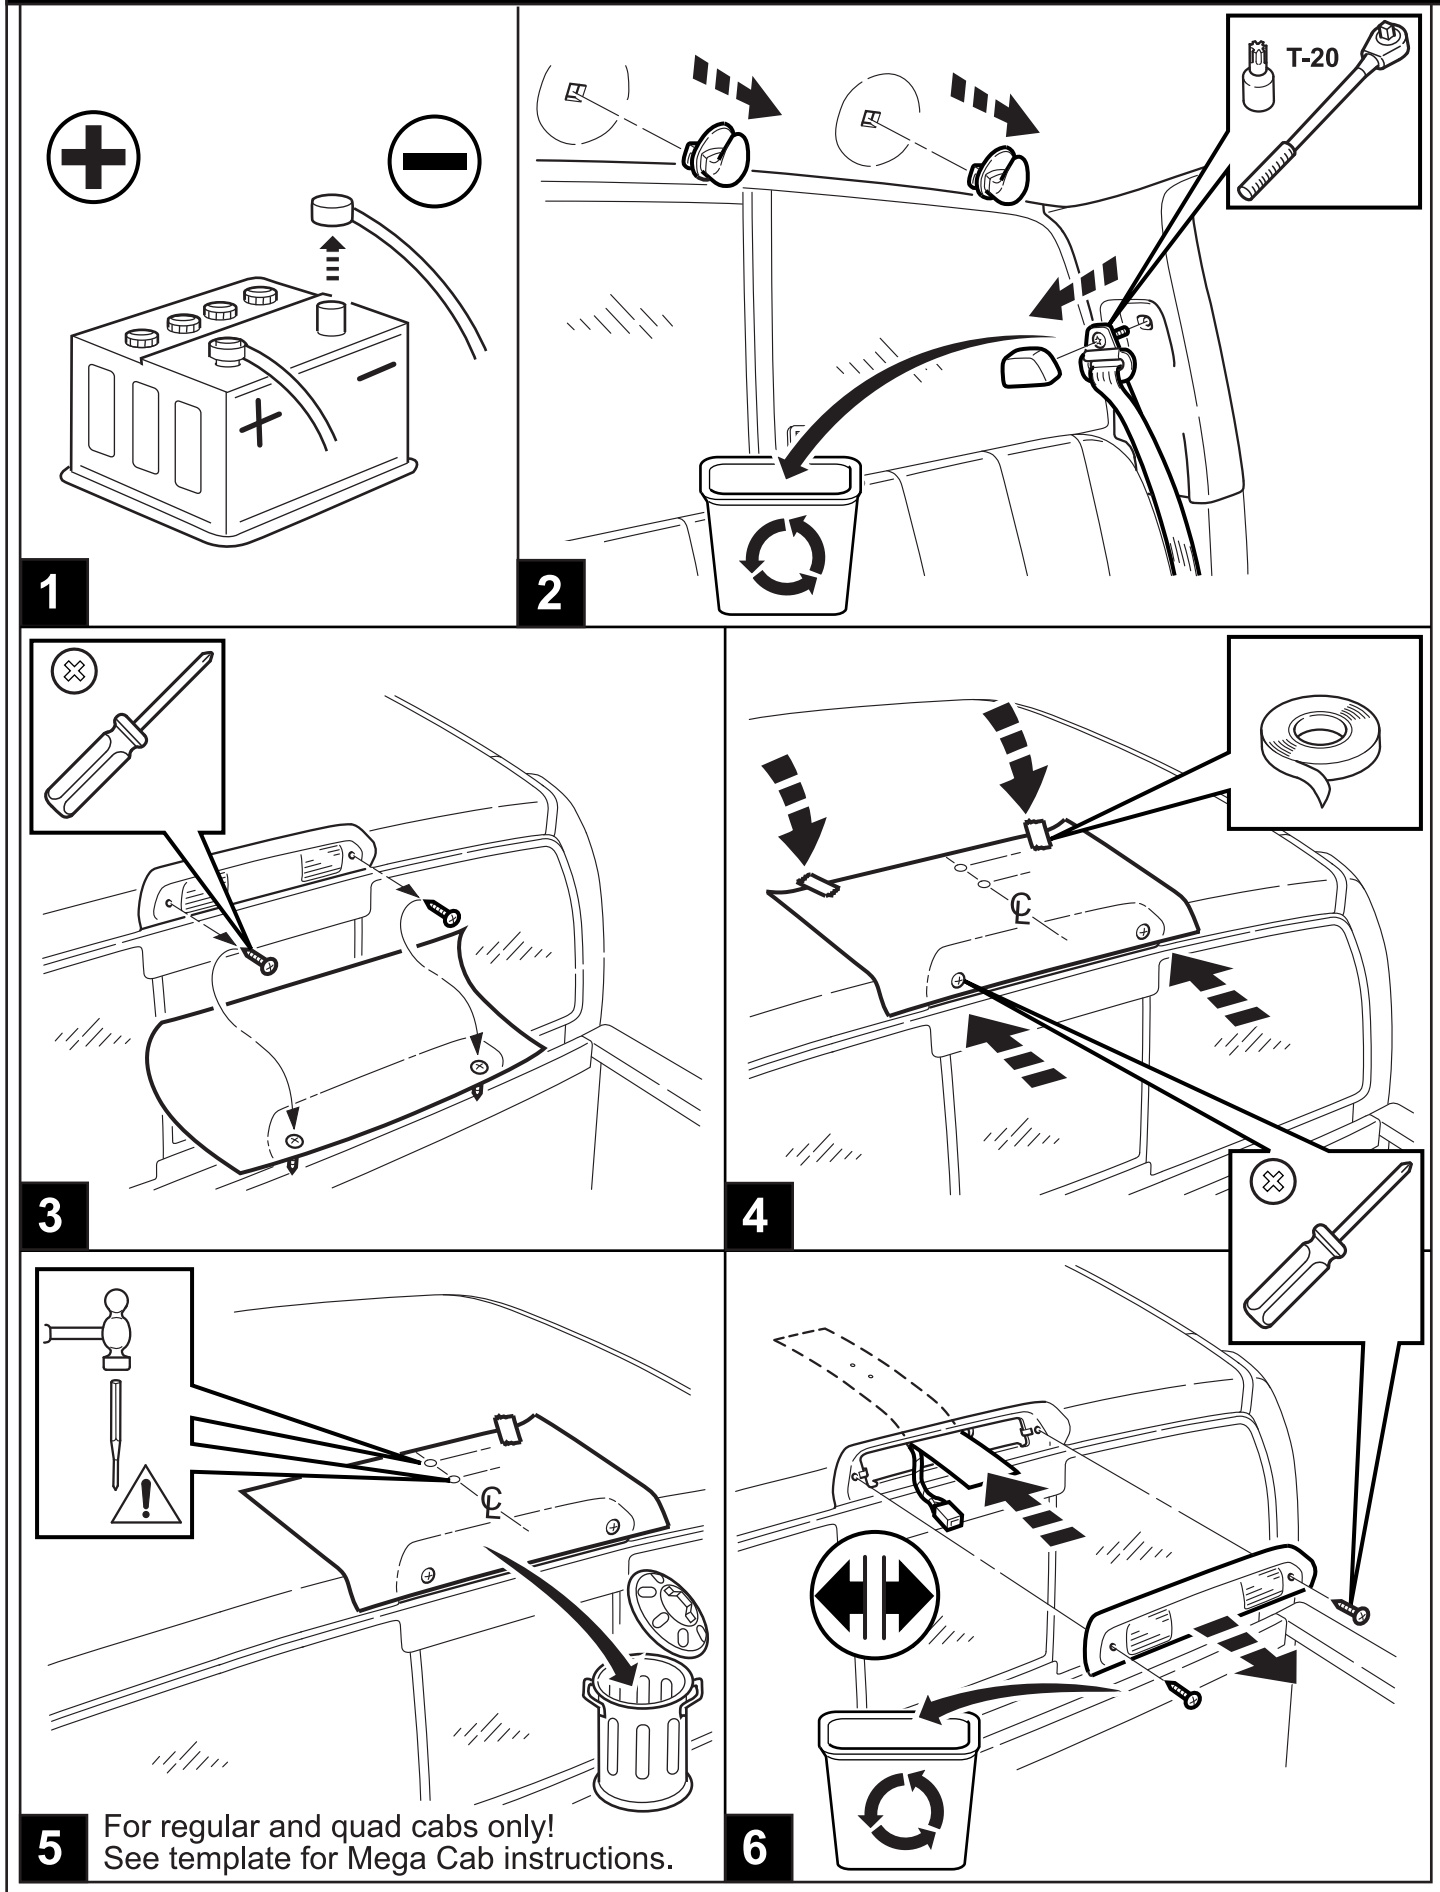

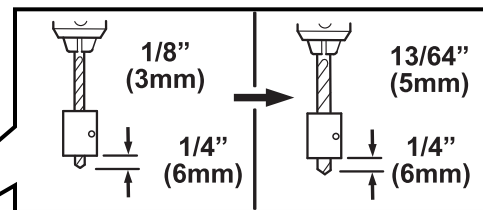


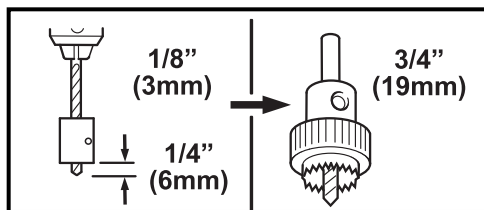


7 Drill antenna mounting holes through the roof.

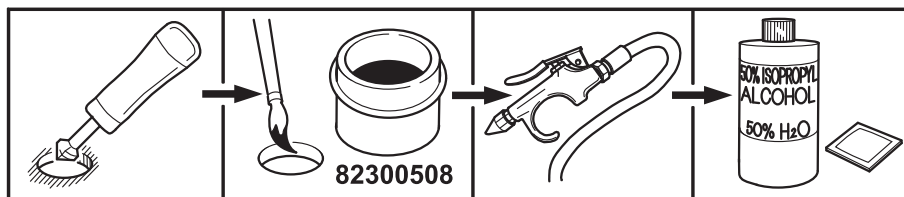


8 Prep, prime, and clean the drilled holes. Remove scrap cardboard.

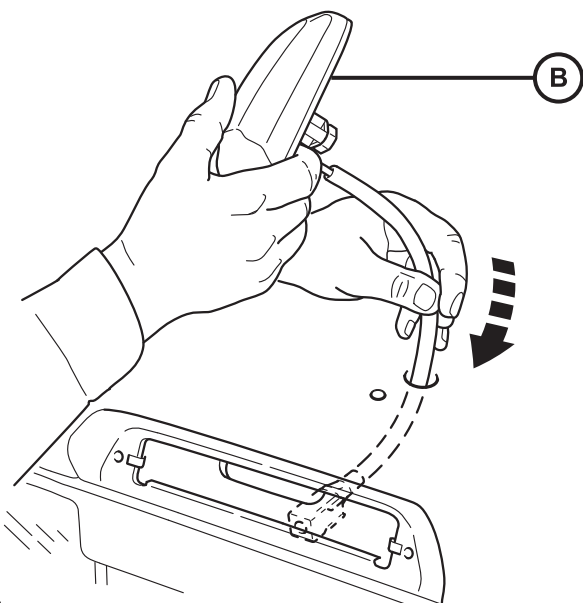


9 Route antenna connector through holes.

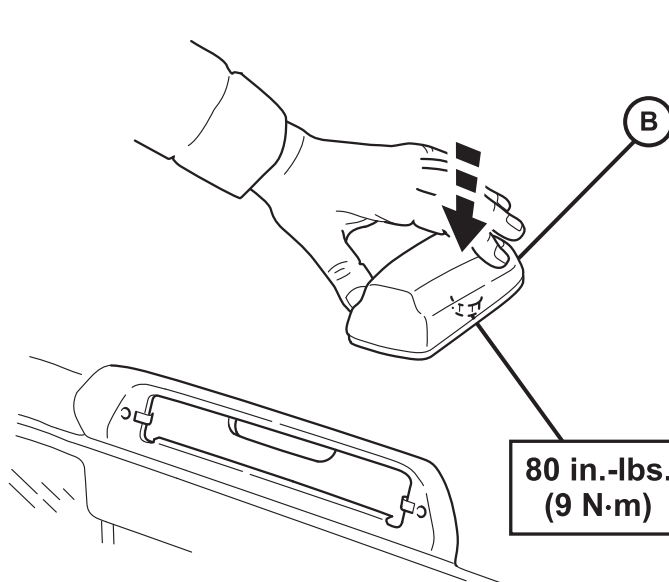


10 Seat antenna to roof. Tighten mounting bolt to 80 in.-lbs. (9 N·m).

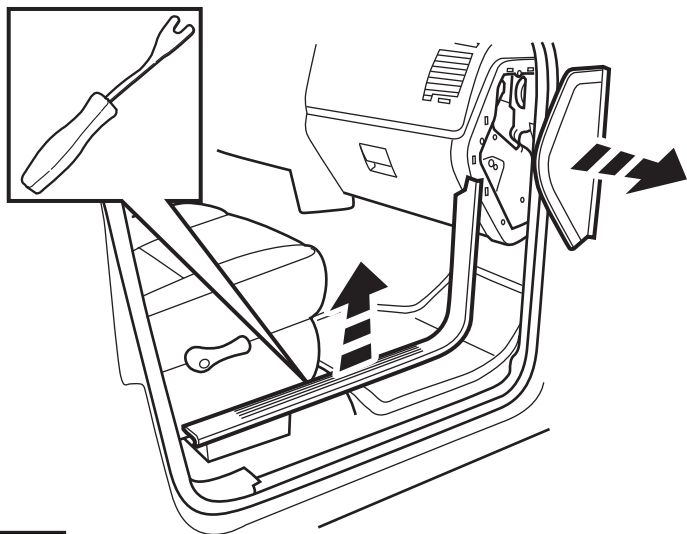

11

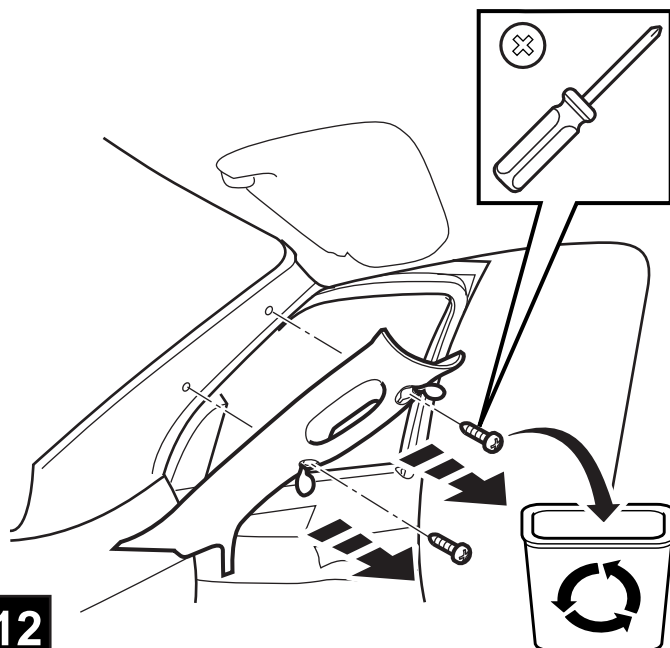

12

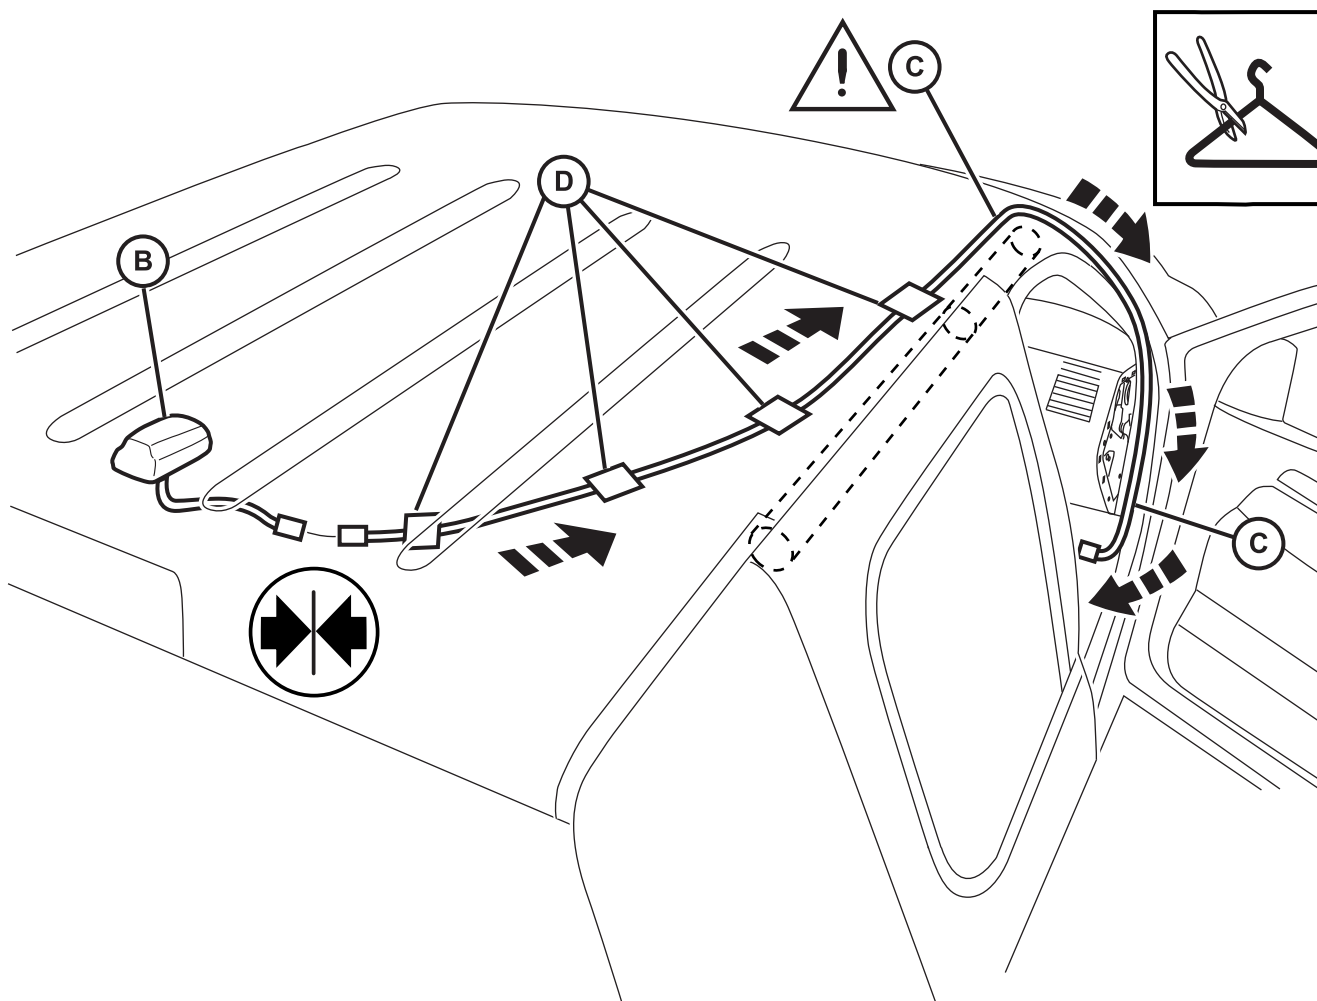


13




Route cable behind airbag deployment pathway.


14

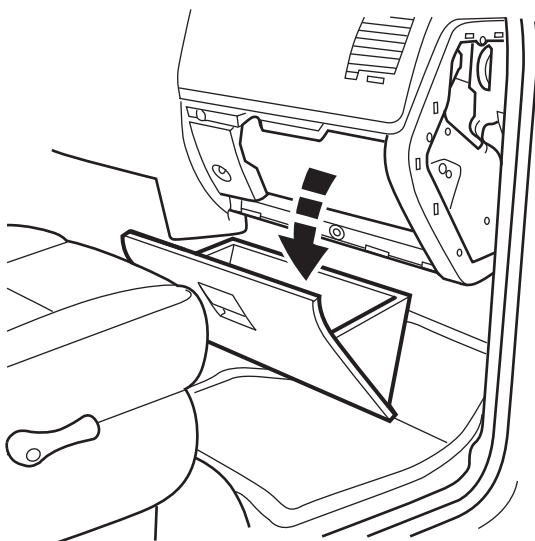


15

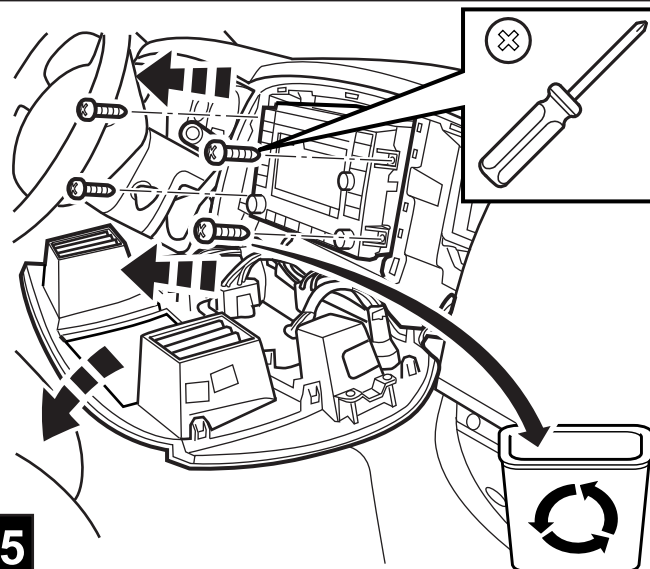


16

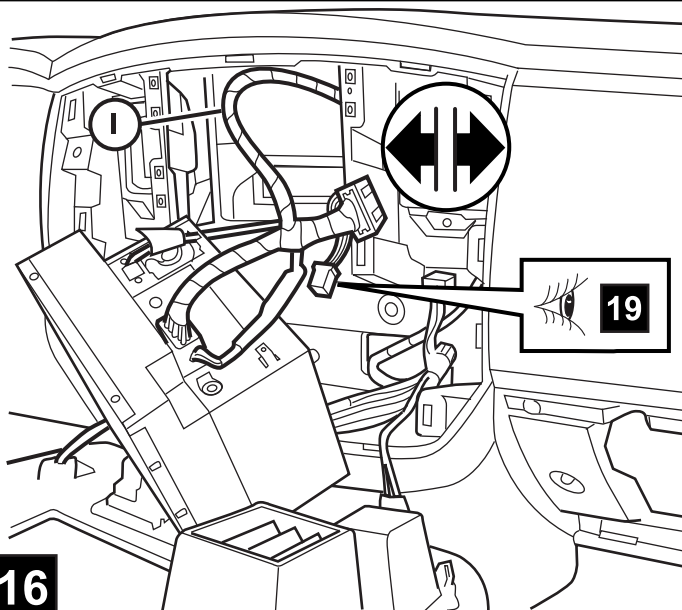


17


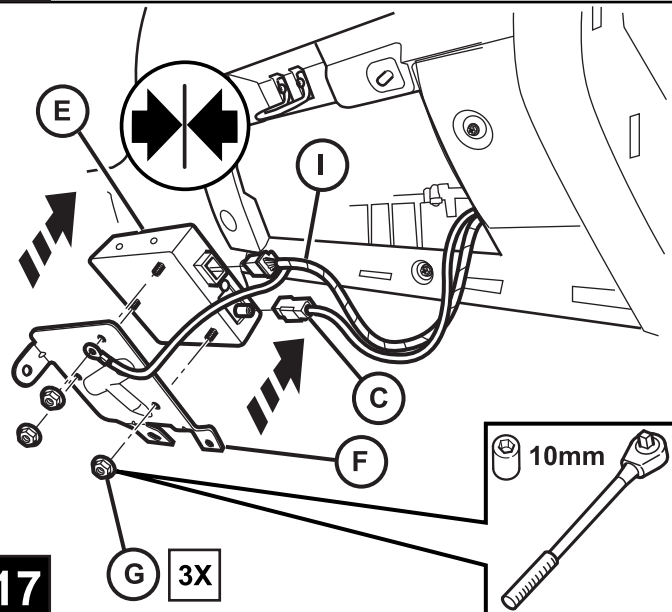


18

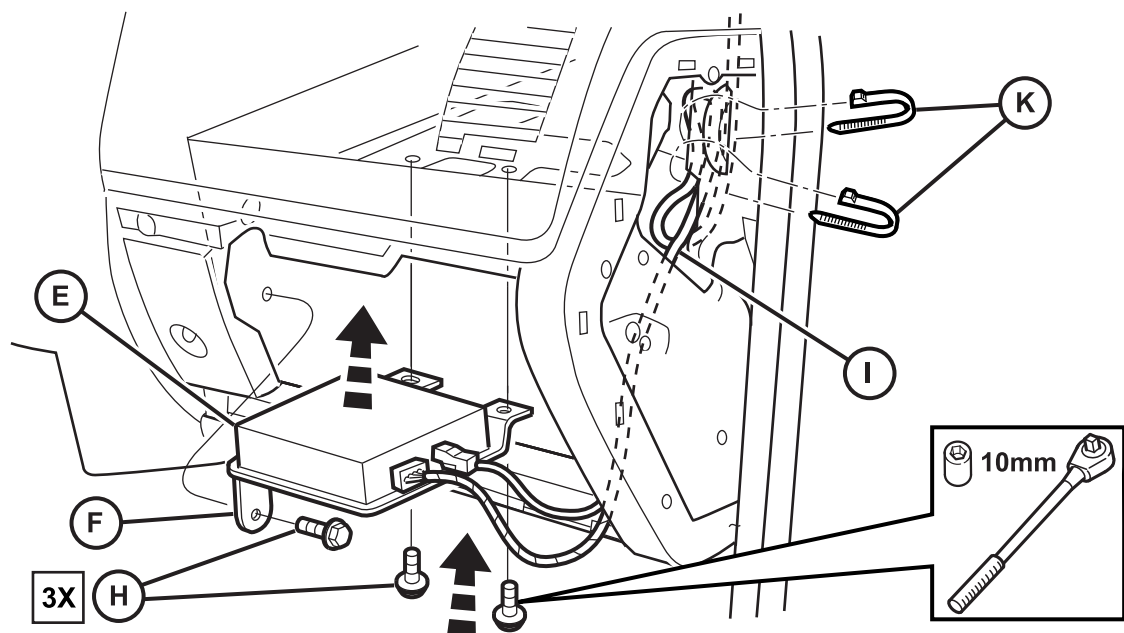

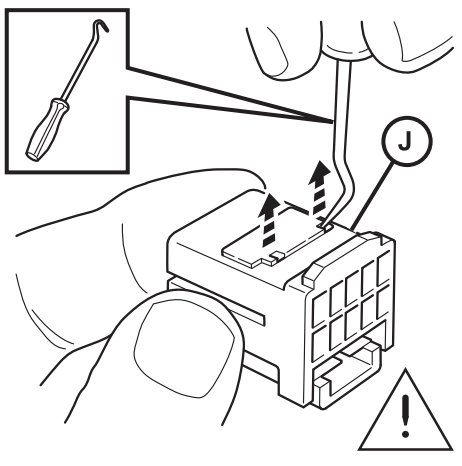

Lift up Only, Do Not Remove.

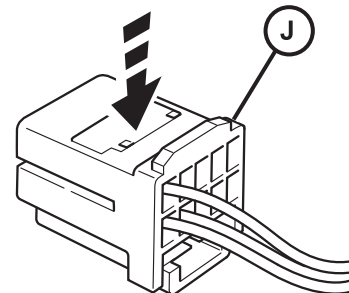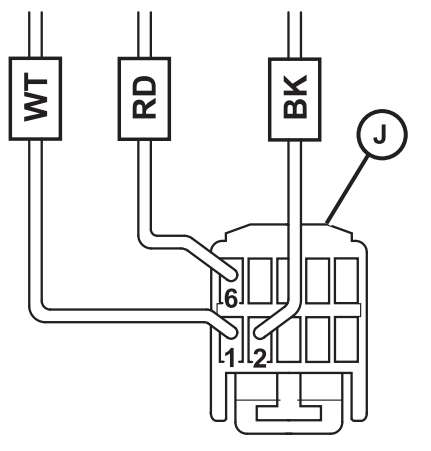

Plug and lock (3) harness wires into 10-way connector as shown. If radio does not have existing 10-way connector, use the one supplied in kit (Item J). In some vehicles there will be wires present in pins 1, 2, and 6 of the 10-way connector. See Step 20

19

* If Pins 1, 2, and 6 are the only pins present in the original 10-way connector, the connector can be unplugged and taped back. Insert the 3 wires on the Satellite Radio overlay harness into the appropriate cavities of the 10-way connector that is supplied with the installation kit. Then plug in the 10-way connector into the radio.

** If the Vehicle has Rear Seat Entertainment, Pins 1, 2, and 6, must be extracted from the original 10 way connector, taped back / insulate; then the 3 wires from the Satellite Radio overlay harness can be inserted into the appropriate cavities of the original 10-way connector.

20

- Tie strap harness away from any sharp edges, heated, or moving parts.
- Re-install all previously removed panels, fasteners, and components.
- Ensure that cables are not pinched under trim panels.
- Tighten shoulder belt turning loop to 29ft.-lbs. (39 N.m)
- Re-connect battery.

IMPORTANT: Please affix ESN stickers to Owner's Manual, mirror tag and orange tag. Install mirror tag and attach orange card to invoice. (These items contained in receiver kit).

21

Reconfigure the Front Control Module (FCM) by use of the STARSCAN diagnostic tool.

FCM Reconfiguration Procedure

IN THE INITIAL START UP SCREEN


- PRESS -----
- TOGGLE DOWN AND HIGHLIGHT -----
- PRESS -----
- PRESS -----
- TOGGLE DOWN AND HIGHLIGHT -----
- PRESS -----

FOLLOW ON SCREEN PROMPTS (I.E. CYCLE IGNITION KEY)

- PRESS -----
- PRESS -----

22

- Drive vehicle outside to allow for a clear satellite signal to the antenna.

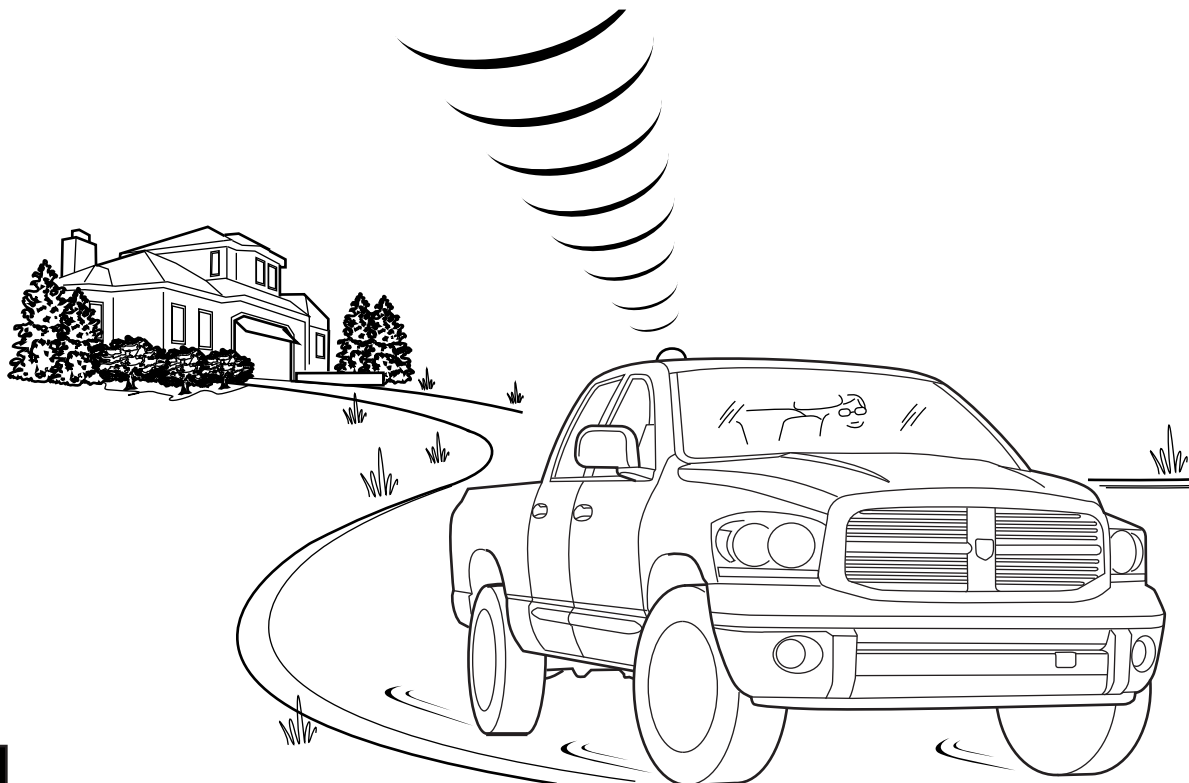

23