





CHRYSLER SEBRING

INTERIOR TRIM APPLIQUÉS


FRONT DRIVER DOOR




FRONT PASSENGER DOOR



REAR DRIVER DOOR



REAR PASSENGER DOOR

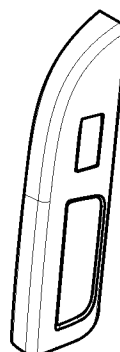


*FOUR DOOR EQUIPPED
VEHICLES ONLY



*FOUR DOOR EQUIPPED
VEHICLES ONLY

A

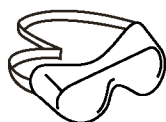

GOGGLES

B

EYE PROTECTION



ALCOHOL PAD

C


PREP KIT




CLEANING CLOTH



GLOVES

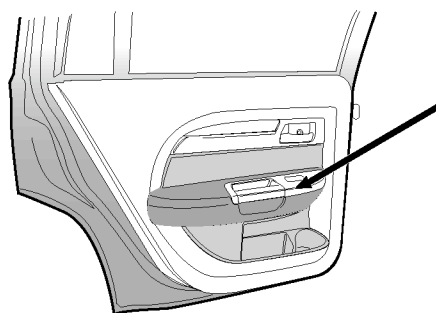

1

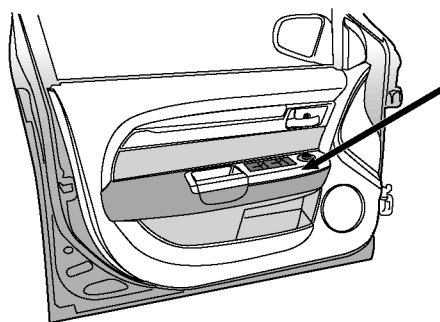

2



97°F

35°C

52°F

15°C



APPLICATION:


- Clean areas to be covered with interior trim using Isopropyl Alcohol Swab & allow to dry for 2 minutes.
- When cleaning, constantly use a new section of towel as you move from area to area.
- **Warning:** Cleaning solvents may cause discoloration to vinyl. Be careful to clean only those areas which will be covered by interior trim kit.

IMPORTANT NOTICE


Prior to installation, check the entire kit for possible damage or defects.
If damage is found, contact Vendor for a replacement.

DO NOT INSTALL ANY PARTS. YOU MUST RETURN THE COMPLETE KIT IF YOU WISH TO MAKE A WARRANTY CLAIM.


3

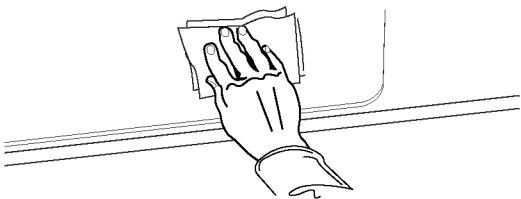



4 CLEAN ALL APPLICABLE SURFACES

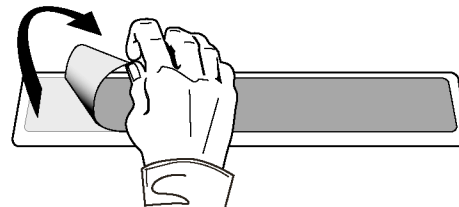


5 REMOVE TAPE LINER PRIOR TO APPLICATION

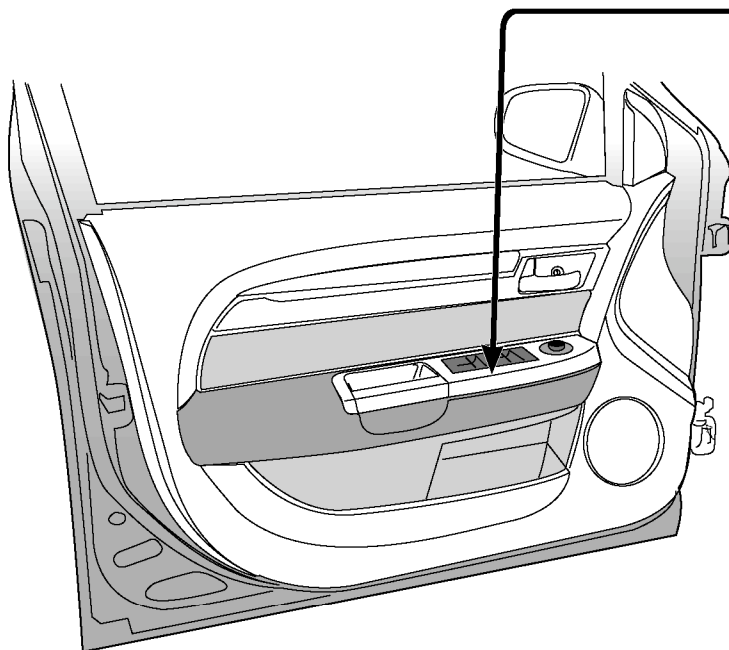



6 FRONT DRIVER DOOR

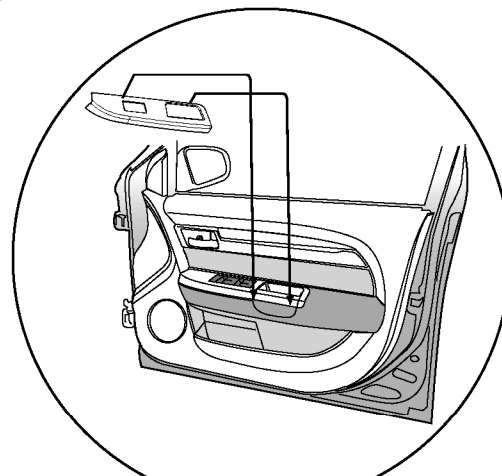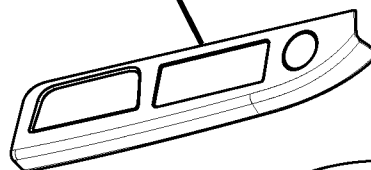

REPEAT OTHER SIDE

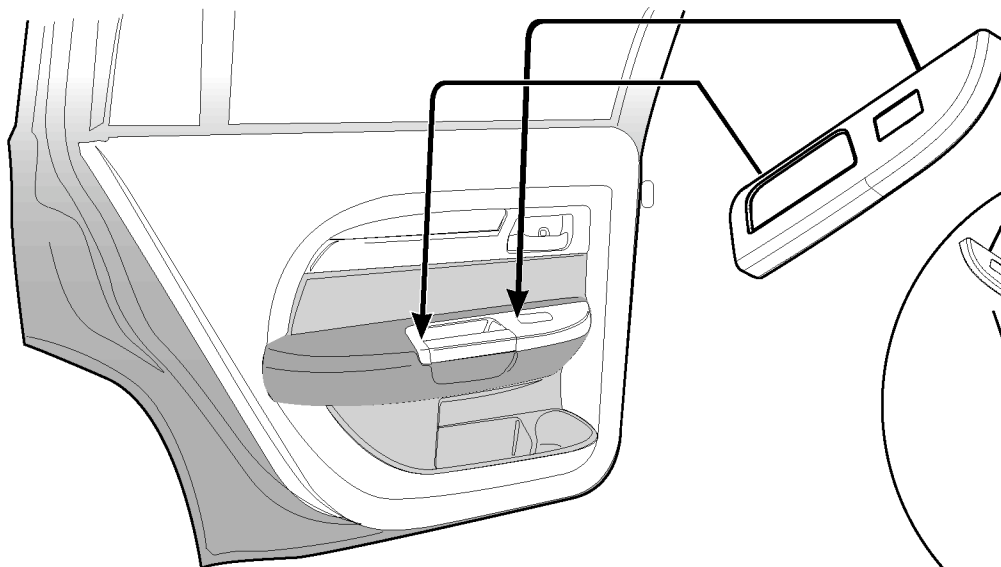

7 REAR DRIVER DOOR

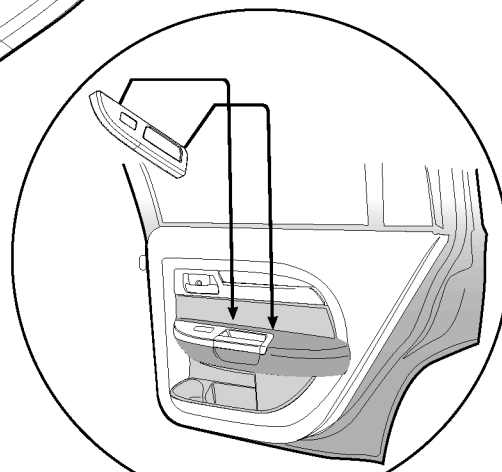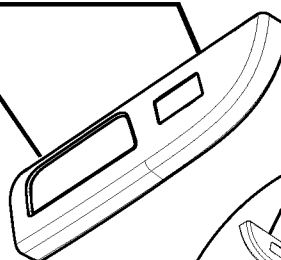

REPEAT OTHER SIDE