




MOPAR®



LX GRAPHIC KIT

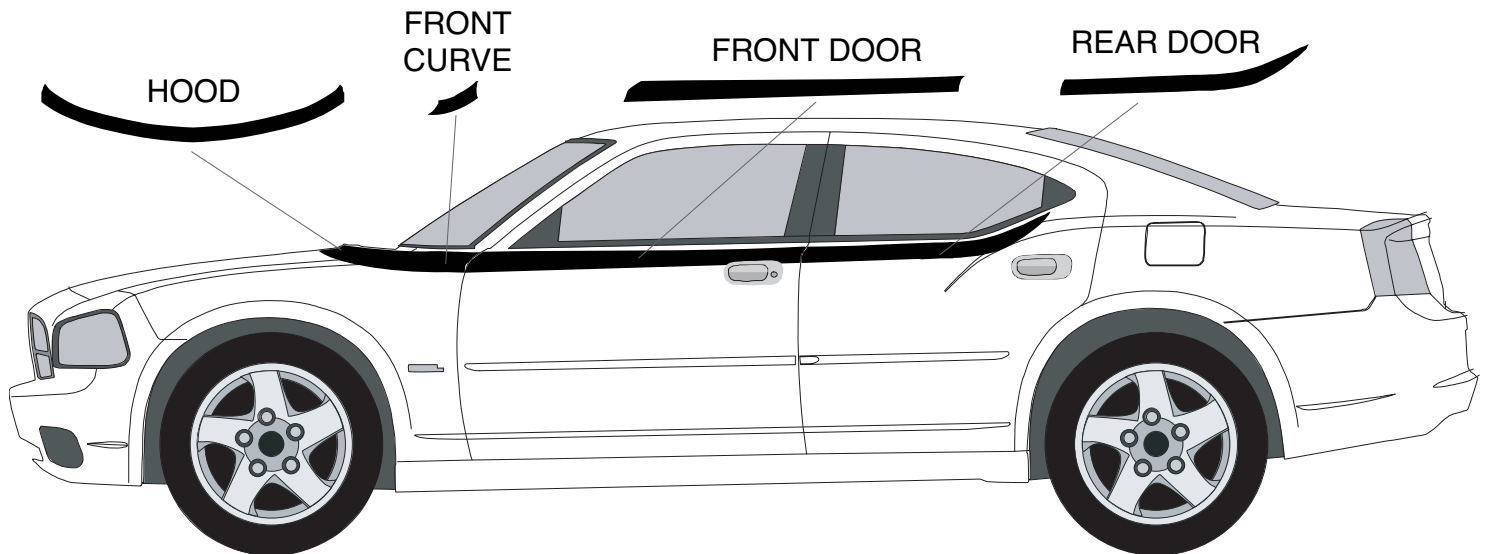

GRAPHIC APPLICATION INSTRUCTIONS

QUESTIONS?

Tel: 1-800-930-9508

Fax: 1-888-565-7771

email: moparhq@mgrp.com

Thank you for purchasing this quality decal kit.
If you need assistance please call us at the number above.

Note:


- Wash hands prior to installation or use alcohol wipe.
- Leave vehicle in warm facility for 5 hours after application.
- DO NOT wash car for 5 days after installation.
- DO NOT apply in direct sunlight.
- Apply in a dust-free environment.
- Use a generous amount of soap/water solution.
- Bubbles must be pricked with a pin and smoothed out - use finger pressure to smooth.

Soap/Water Solution:

In a spray atomizer, mix the following:

- 5 ml (1 tsp) liquid soap*
- 1 litre (1 qt) of water


*Use "lanolin-free" soap.
Too much soap will result in a difficult installation.

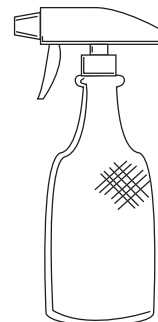


TOOLS REQUIRED




Sharp
Knife

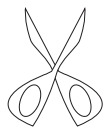

Scissors

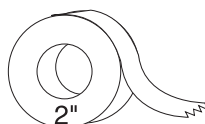

2" Masking
Tape

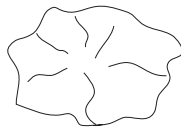


Clean Lint-Free
Cloth



Pin



Commercial
Grade Degreaser

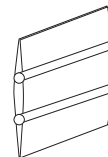

Squeegee



Spray
Bottle

YOUR KIT CONTAINS

DRIVER FRONT DOOR

PASS. FRONT DOOR

DRIVER REAR DOOR

PASS. REAR DOOR

HOOD

PASS. FRONT CURVE

DRIVER FRONT CURVE




SHADED AREAS WILL BE FOLDED INTO BODY SEAM DURING INSTALL




GRAPHIC APPLICATION INSTRUCTIONS

STEP 1

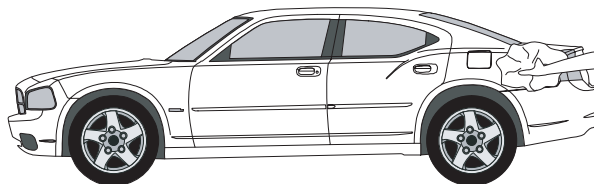


Using a bodyshop grade wax & grease remover, prep the vehicle surface. Make sure to buff off any residue or cloudy areas.

STEP 2

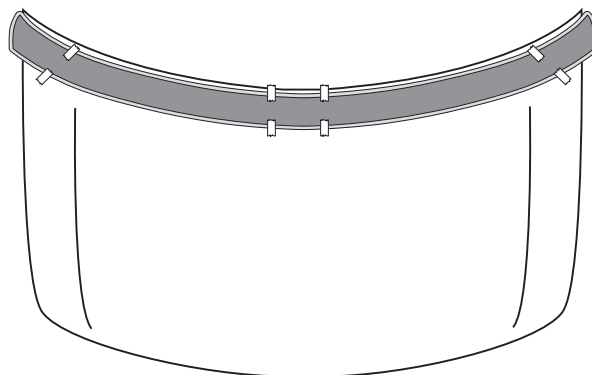


Tape **all** decals with backing paper in the **exact** position you want them. Assure all sections line up with body seams, and each other before going on to the next step.

STEP 3

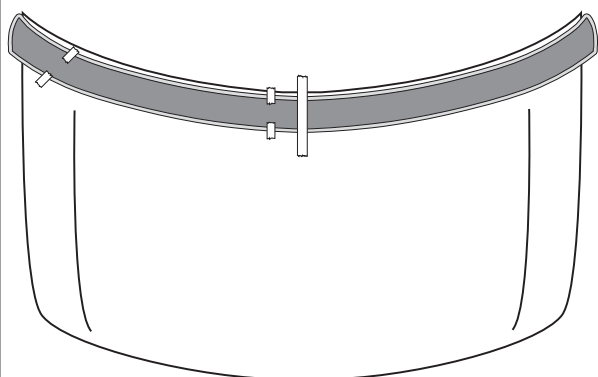

Begin installation with the hood, then the fender curve, followed by the front and rear doors. Place a tape strip across the decal onto body, approximately halfway along each decal.

STEP 4

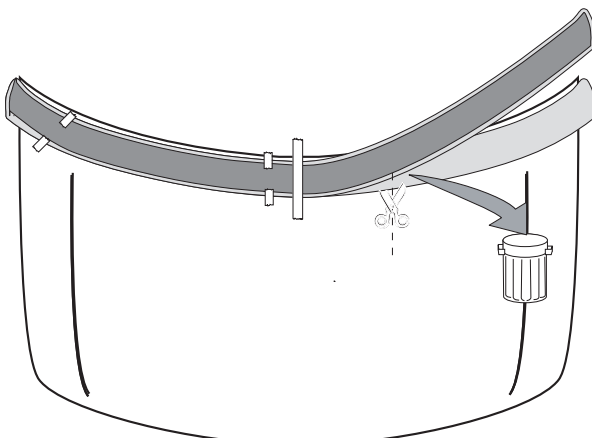


Peel decal away from the backing paper. While holding the decal off the paper, cut a clean line (do not tear) across the backing paper. Discard backing paper.




GRAPHIC APPLICATION INSTRUCTIONS

STEP 5

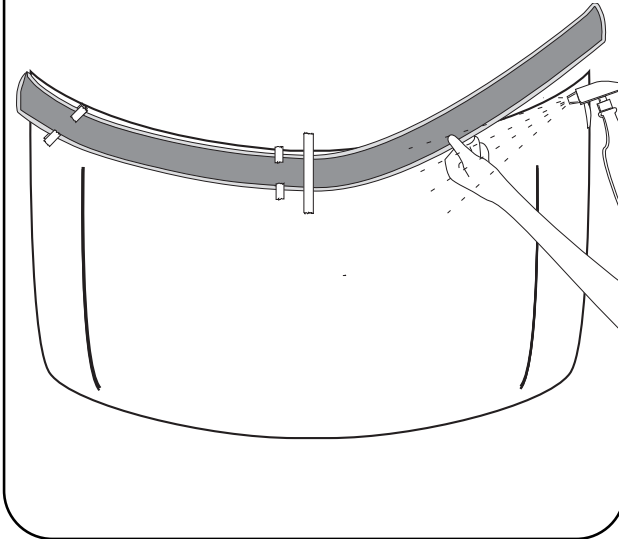


While holding the decal away from the vehicle and avoiding over-spray on pre-masked area, spray soap/water solution over application area.

STEP 6

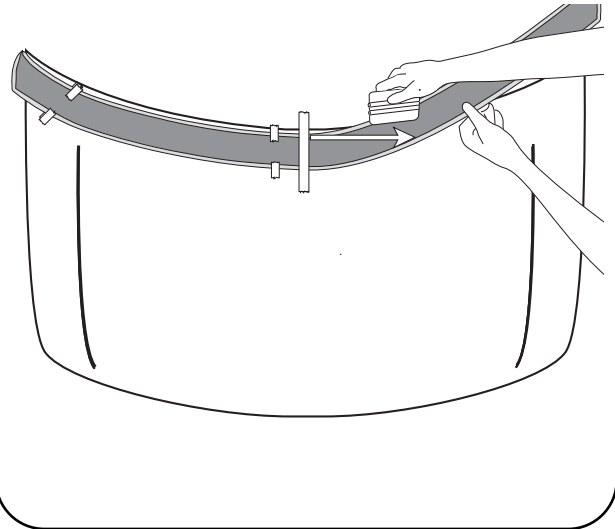

Hold the decal out slightly from the vehicle, and starting from the center, squeegee out the soap/water solution.


STEP 7

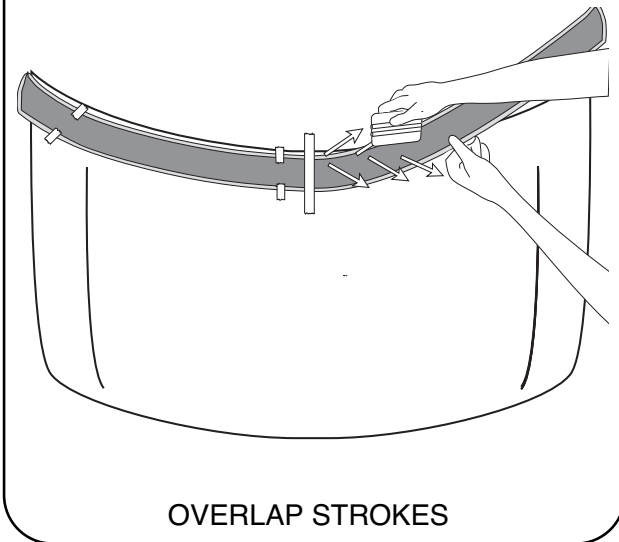

OVERLAP STROKES

Use overlapping strokes from the center out, alternating to each side.

STEP 8

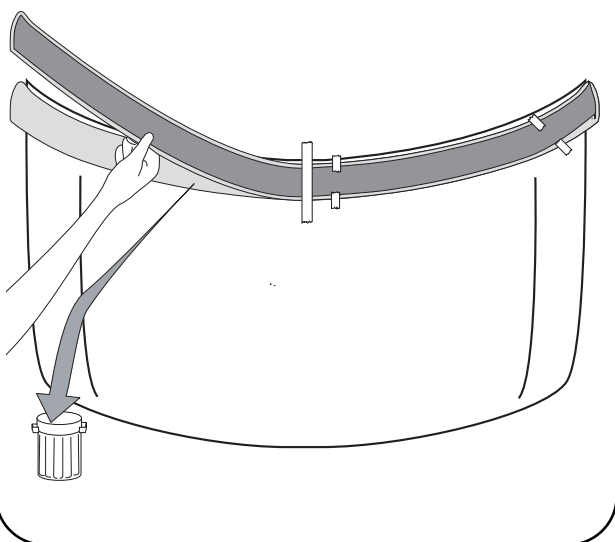


Remove remaining masking tape and backing paper from decal, being careful not to tear the paper. Discard backing paper.




GRAPHIC APPLICATION INSTRUCTIONS

STEP 9

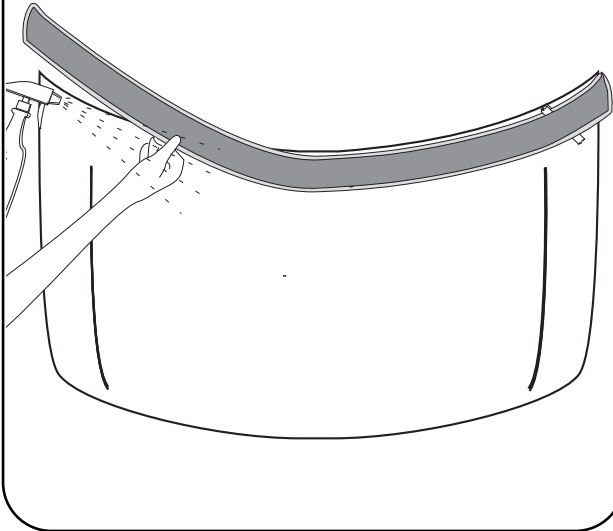


While holding the decal away from the vehicle, spray soap/water solution over decal and application area.

STEP 10

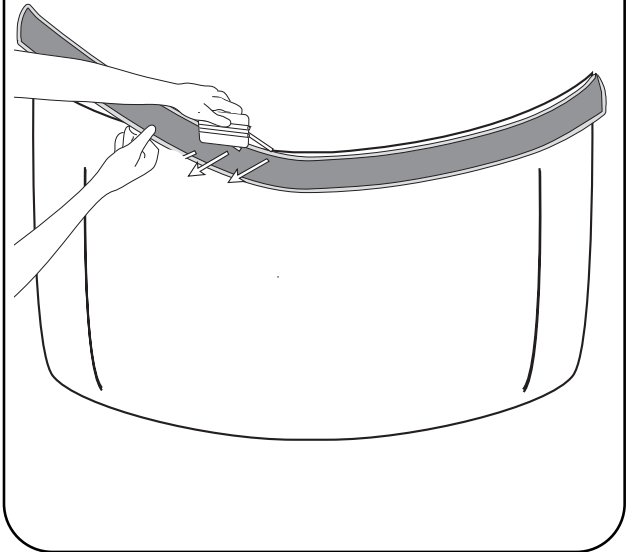


Squeegee the remaining part of the decal starting from the center, working out, using overlapping strokes. Squeegee over the complete decal to ensure adhesion. Look for bubbles you can squeegee out.

STEP 11

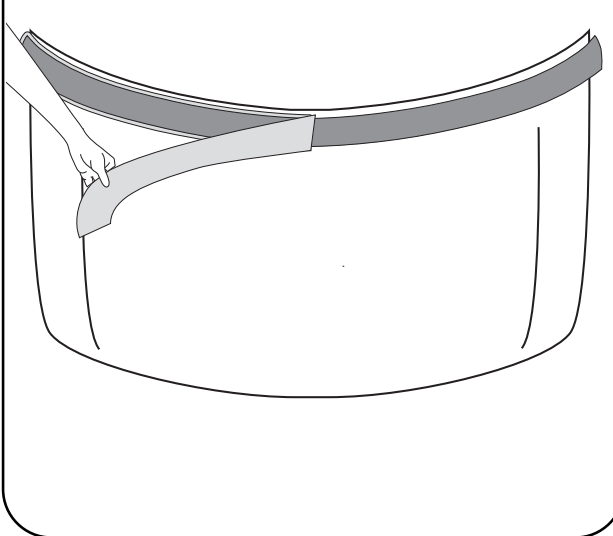

Spray a light mist of water over the pre-mask and slowly peel away at a 180° angle (flat against the surface). Look for lifting and squeegee down.
Fold remaining material around hood edge.

STEP 12

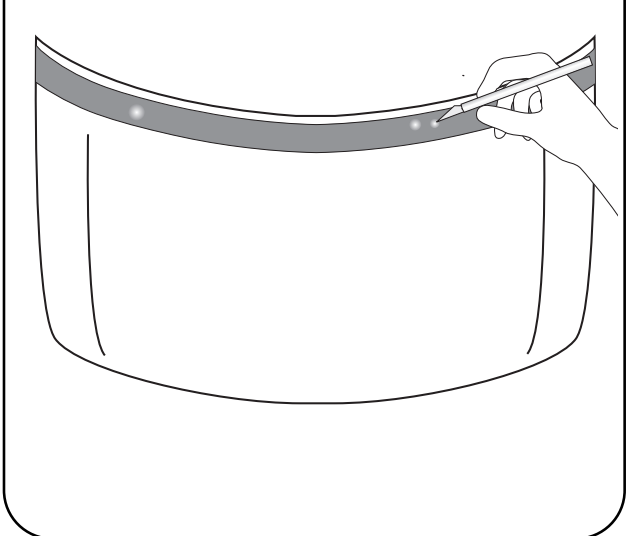

Locate any small air pockets and prick using a pin or sharp x-acto knife near the bottom of the air pocket. Using your finger, and medium pressure, squeeze out any air. Repeat process for all decals.