
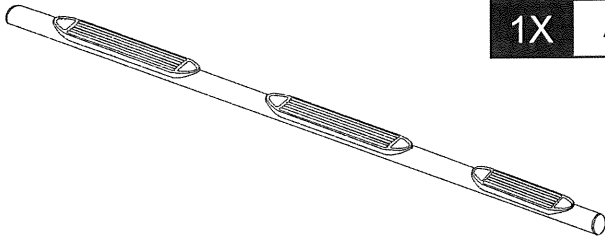
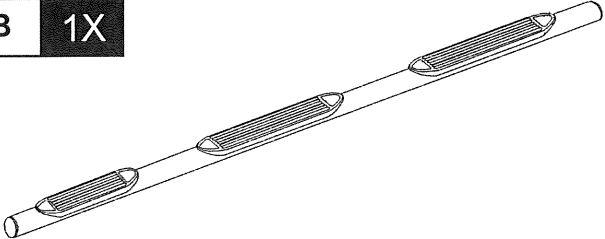
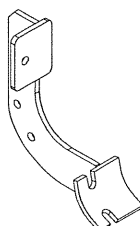
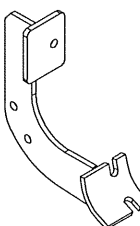
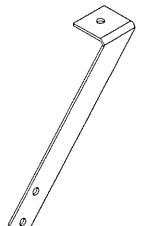
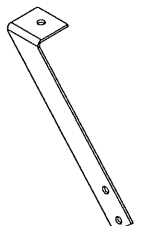
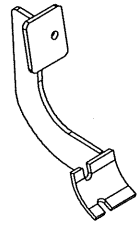
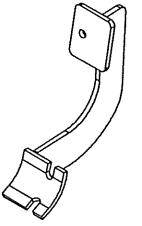
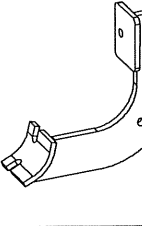
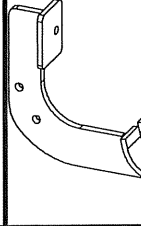
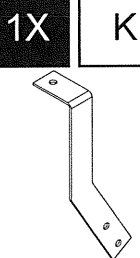
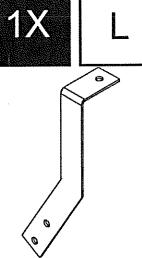
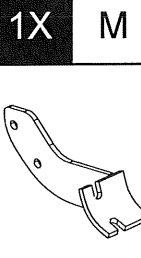
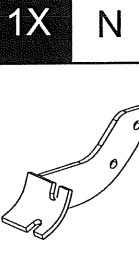
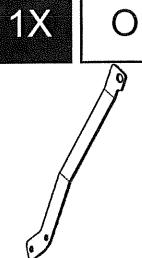



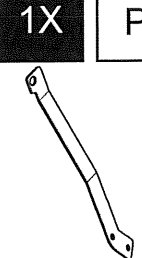




DODGE RAM MEGA CAB WHEEL TO WHEEL SIDE STEP
 ESTRIBO DODGE RAM MEGACAB
 ESQUIVER LE mémoire RAM MEGA ROUE DE TAXI POUR POUSSER L'ETAPE LATERALE

MOPAR®

	
---	--


1X	C	1X	D	1X	E	1X	F	1X	G	1X	H	1X	I	1X	J
															
DRIVER FRONT		PASSENGER FRONT		DRIVER FRONT		PASSENGER FRONT		DRIVER REAR		PASSENGER REAR		DRIVER REAR		PASSENGER REAR	
		1X	K	1X	L	1X	M	1X	N	1X	O	1X	P		
															
		DRIVER REAR		PASSENGER REAR		BOX DRIVER REAR		BOX PASSENGER REAR		BOX DRIVER REAR		BOX PASSENGER REAR			

12X	Q	16X	R	22X	S	22X	T	8X	U	10X	V	2X	W	2X	X
															
M8 FLANGE NUT	M10 FLANGE NUT	M8 X 30mm HEX HEAD BOLT	M8 FLAT WASHER	M10 W-BOLT	M8 T-NUT	M12 FLANGE NUT	M12 X 35mm HEX HEAD BOLT								

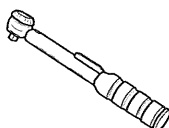
		
---	---	--




PASSENGER SIDE SHOWN
EI LADO del PASAJERO MOSTRADO
LE PASSAGER PREND PARTI MONTRE

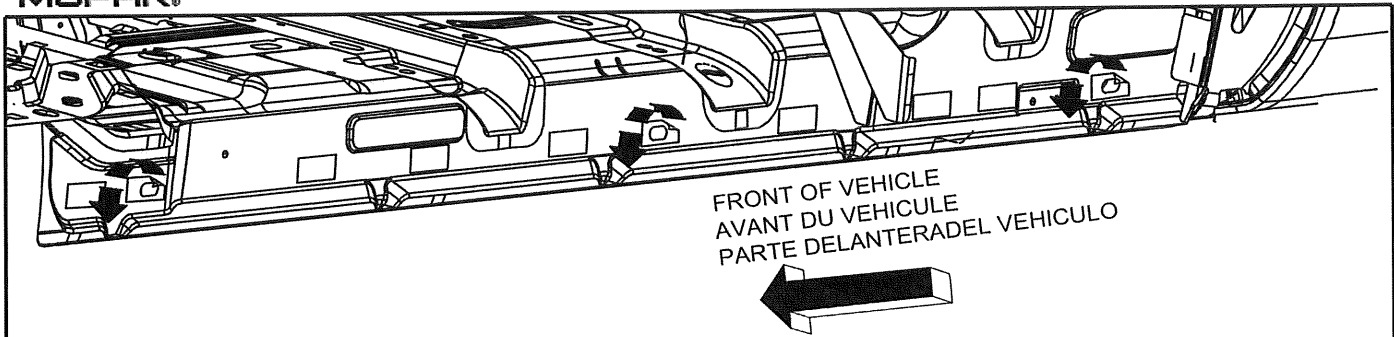

1

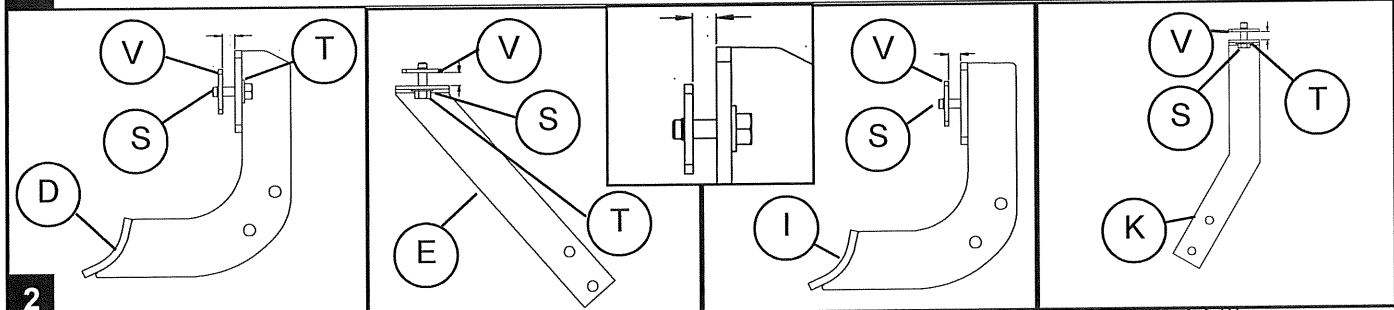


2

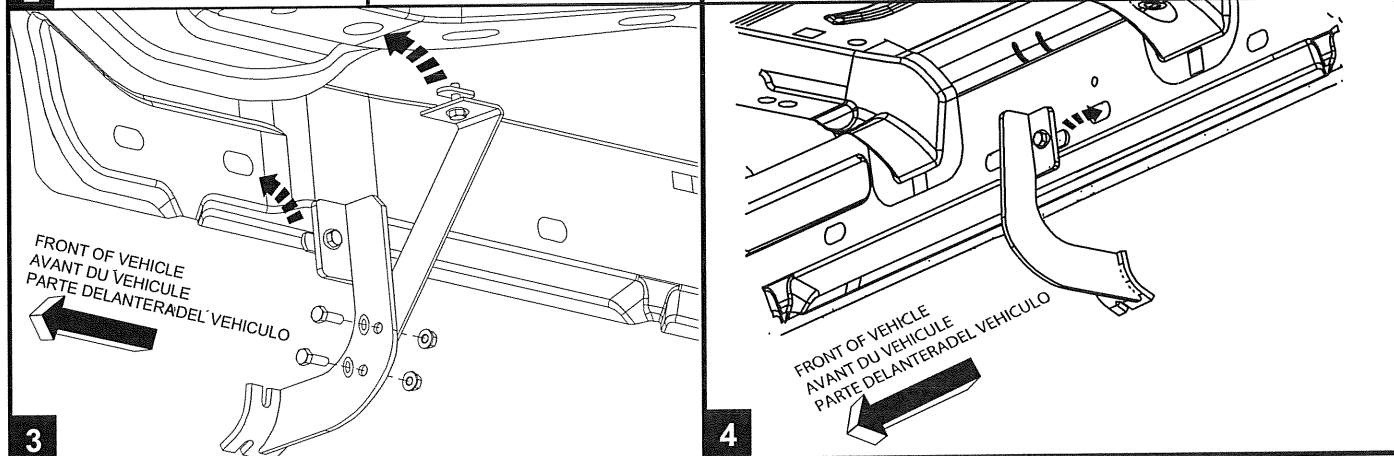


3

4


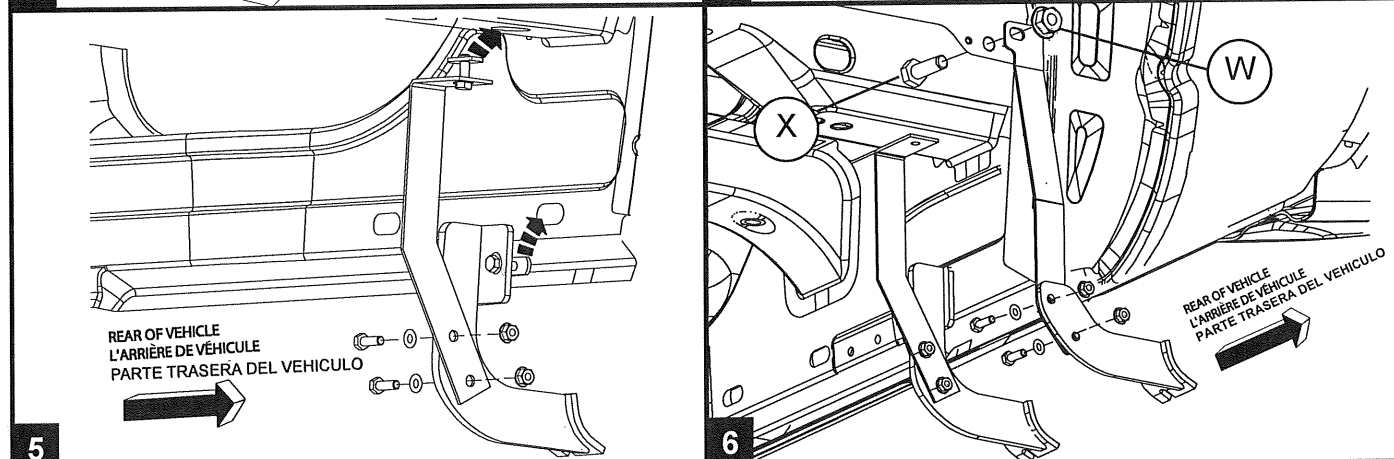


5

6

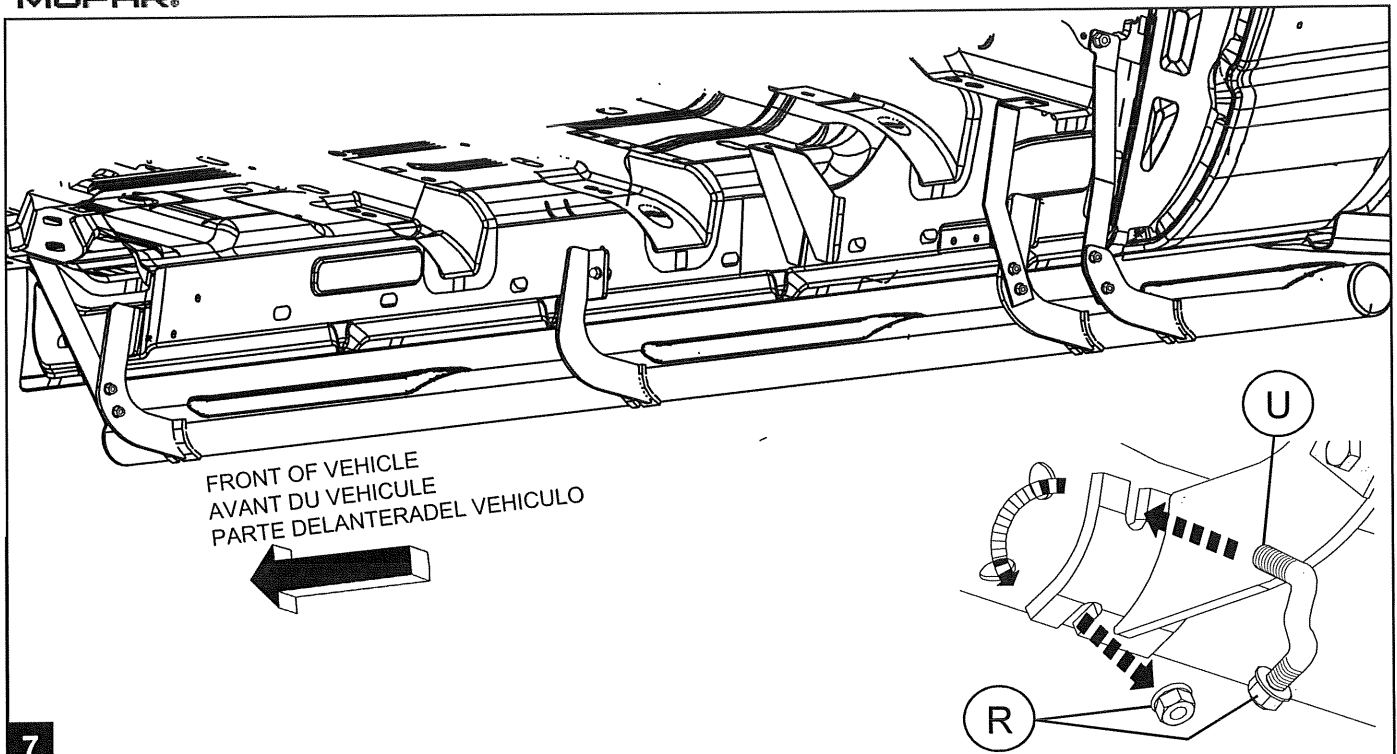

FRONT OF VEHICLE
AVANT DU VEHICULE
PARTE DELANTERA DEL VEHICULO

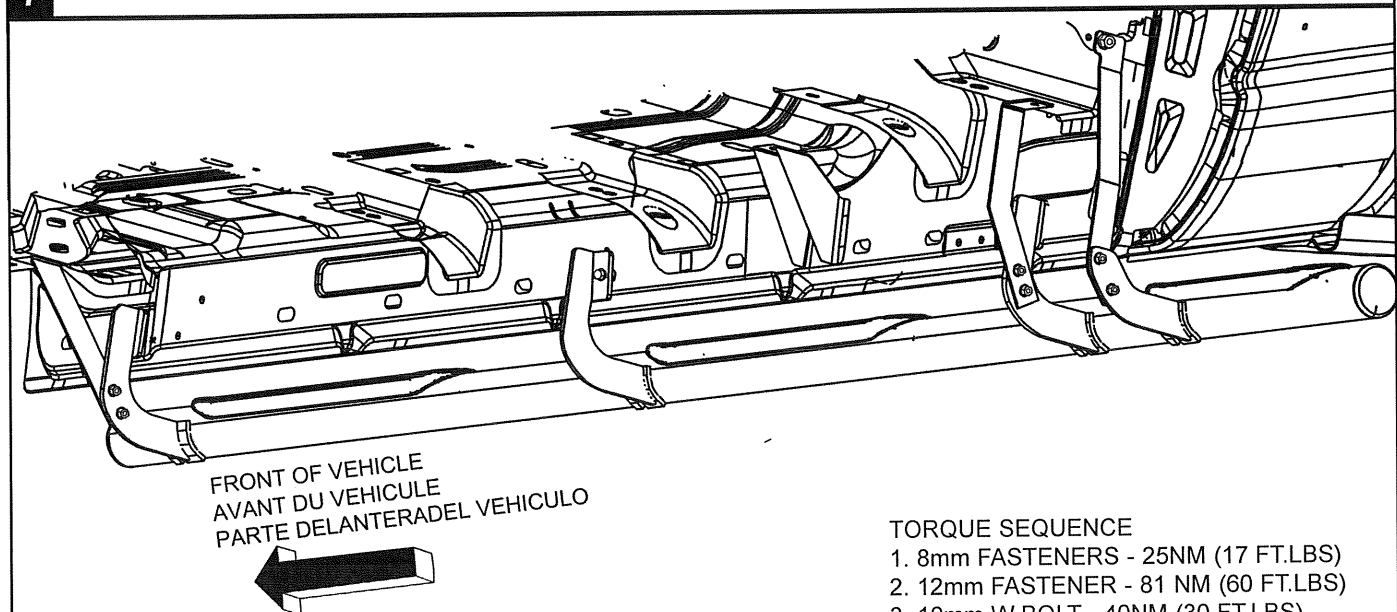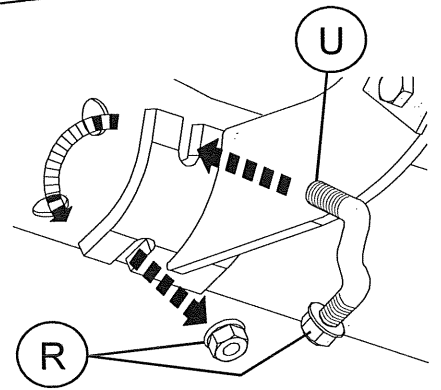

FRONT OF VEHICLE
AVANT DU VEHICULE
PARTE DELANTERA DEL VEHICULO

TORQUE SEQUENCE

1. 8mm FASTENERS - 25NM (17 FT.LBS)
2. 12mm FASTENER - 81 NM (60 FT.LBS)
3. 10mm W-BOLT - 40NM (30 FT.LBS)

REPEAT FOR DRIVER SIDE
REPITA PARA el LADO de CONDUCTOR
REPETE POUR LE COTE DE CHAUFFEUR