



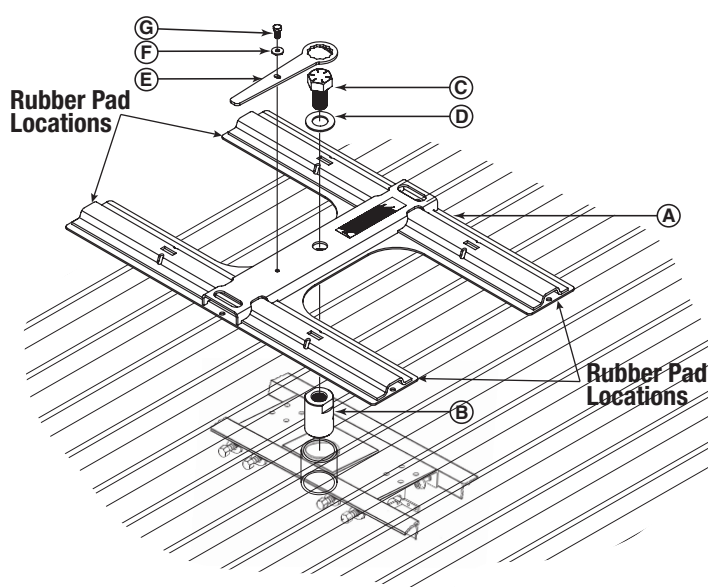

5th Wheel Adapter Plate (For Stow A Ball Gooseneck Hitch)

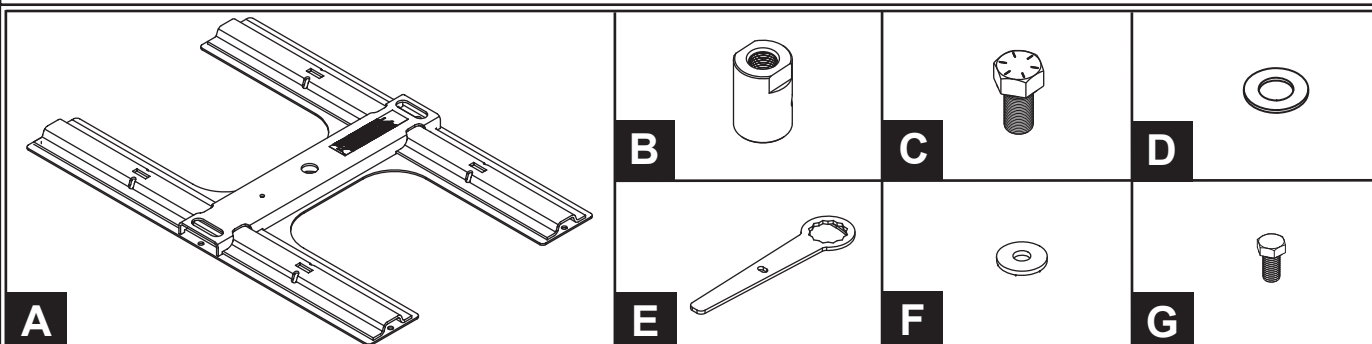

NOTE:

The 5th Wheel Adapter Plate allows you to change from Gooseneck Trailer towing to 5th Wheel Trailer towing.

NOTE:

If the vehicle is equipped with a bed liner, removal of the (4) rubber pads at bottom of the Hitch Adapter Plate #A may be required to ensure key line up and locking of the Plug #B.

NOTE:

(BEFORE BEGINNING INSTALLATION OF ADAPTER PLATE):

This 5th Wheel Adapter Plate 82212036 must be installed after the Stow A Ball Hitch Head Assembly 82212235 is installed. This must be done because the Adapter Plate is installed directly into the Hitch Head Ball Tube Assembly.

1 Place Plug #B into hitch head ball tube assembly with the two flat sides facing up and parallel to length of truck.

2 Turn handle on hitch head assembly to lock into hitch.

3 Place 5th Wheel Hitch Adapter Plate #A over plug and mount down to Plug #B with 1-1/2 - 12 x 2-3/8" Hex Cap Screw #C and 1-1/2" Flatwasher #D. Hand tighten until Adapter Plate is snug. Use Wrench #E and turn bolt an extra 1/2 turn or 180 degrees. Now check to see if hitch head can rotate. If the handle rotates, use wrench to tighten Plug Screw #B another 1/4 turn or 90 degrees and again try and rotate the hitch head handle.

4 Before tightening Hex Head Cap Screw #C, ensure that the 5th Wheel Hitch Adapter Plate #A is parallel to the length of the truck. Measure each end of the plate to the end of the truck bed. Make sure each measurement dimension matches.

5 Once the handle can not be rotated, place wrench on bolt #C and line up mounting hole in wrench and mounting hole on Adapter Plate. Mount wrench to Adapter Plate with 3/8 - 16 x 1" Hex Bolt #G and 3/8" Conical Tooth Washer #F. Torque 3/8 - 16 X 1" Hex Bolt #G to 30 Ft. Lbs.

6 You are now ready to install 5th Wheel Hitch assembly to the Adapter Plate.

For information or Technical Support regarding this product call: 1-800-344-3230