



CONTENTS

Rear Backup Camera Kit


- 1) Chrysler / Dodge Minivan (2008+ RT)
- 2) Jeep Liberty (2008+ KK)
- 3) Dodge Journey (2009+ JC)




MINIVAN


Rear Backup Camera Kit

			7mm 13/16" 10mm T-30 T-45			 PN 82300508
						 PN 82300508
					5/32" (4mm) 3/8" (9mm)	 1/2" (12mm)

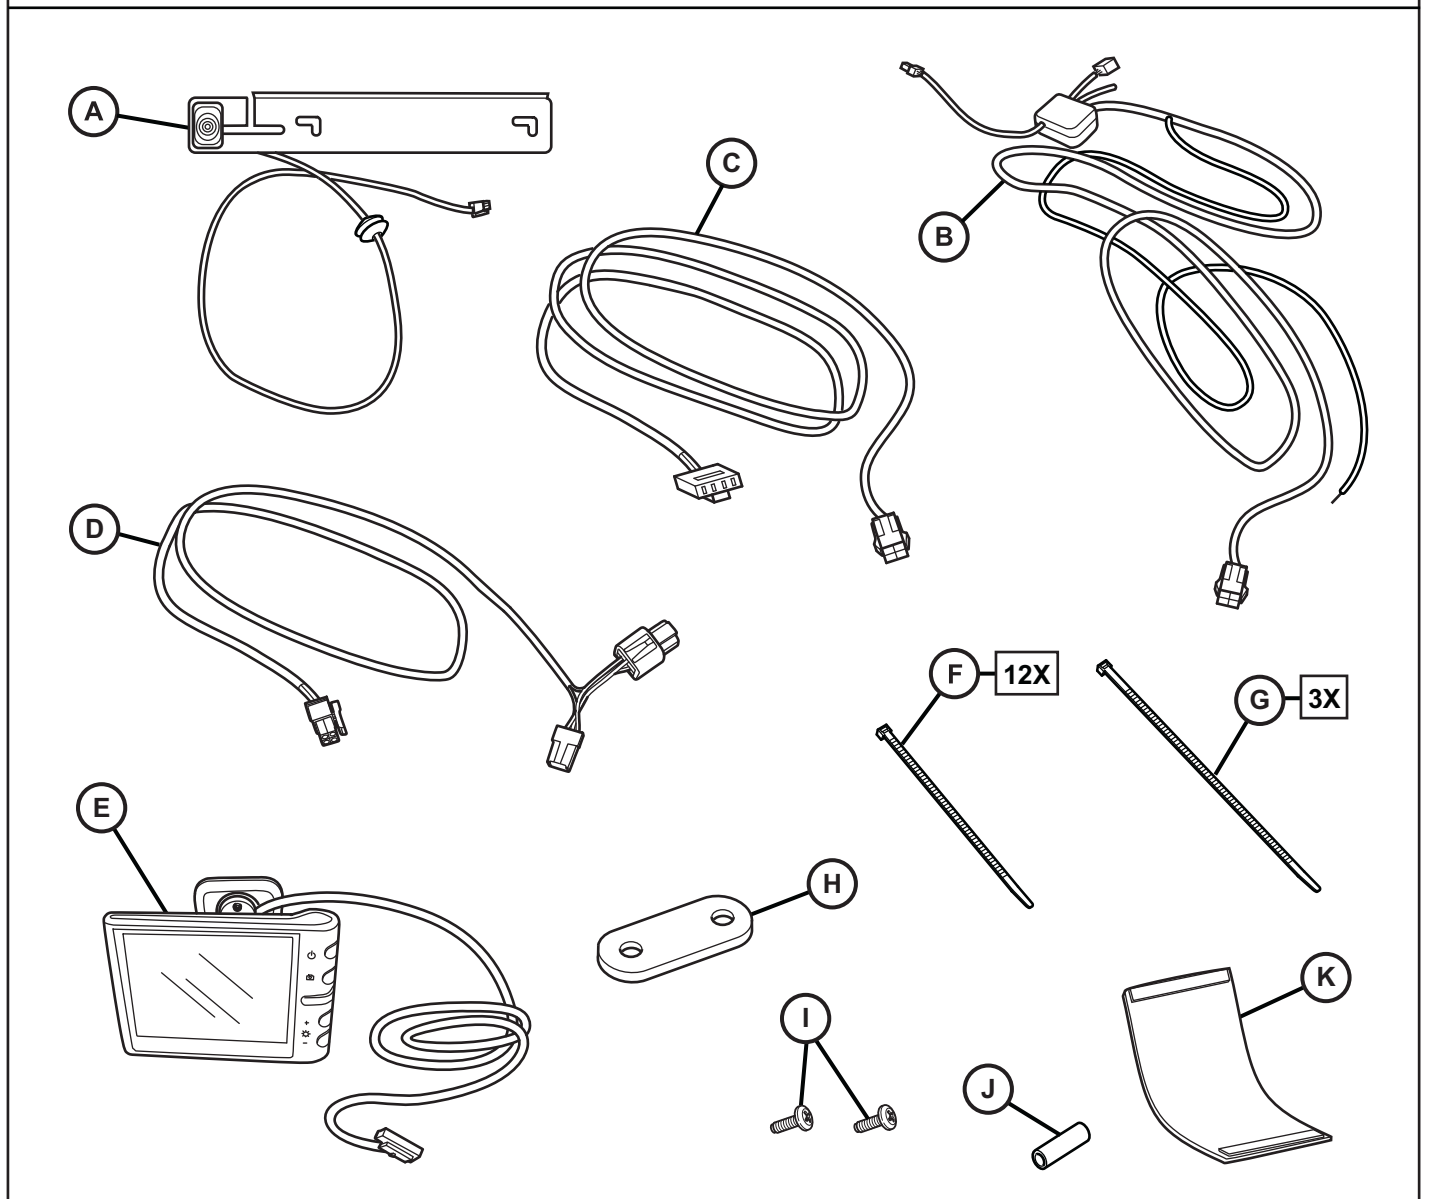


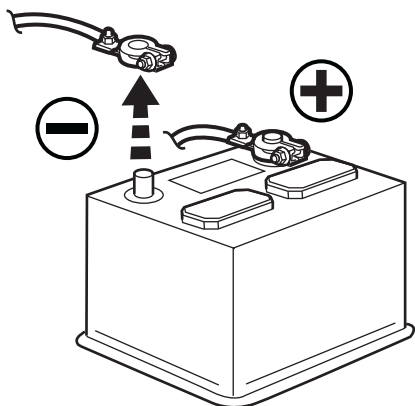


1

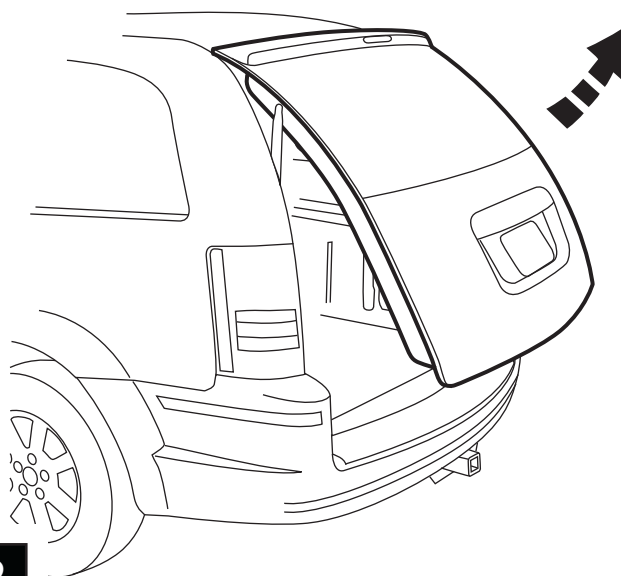


2

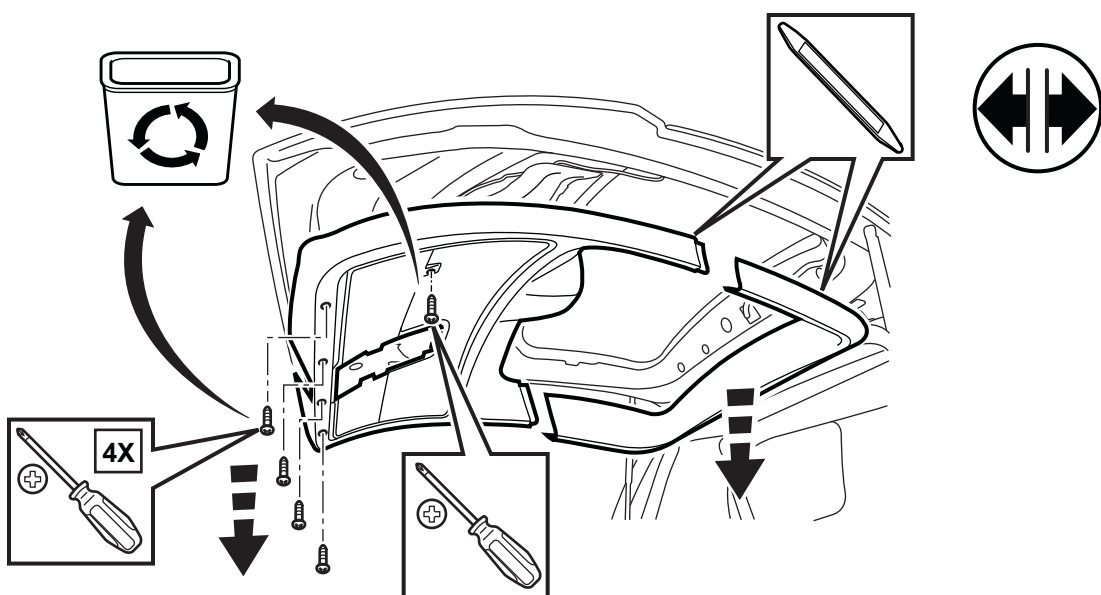





3

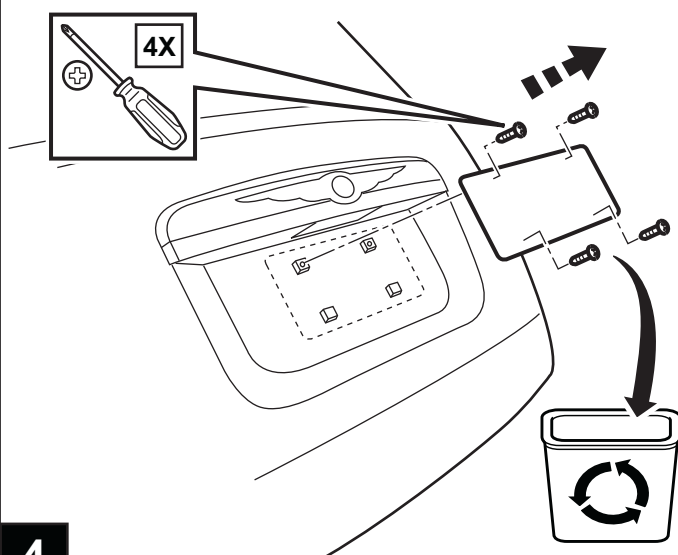


4

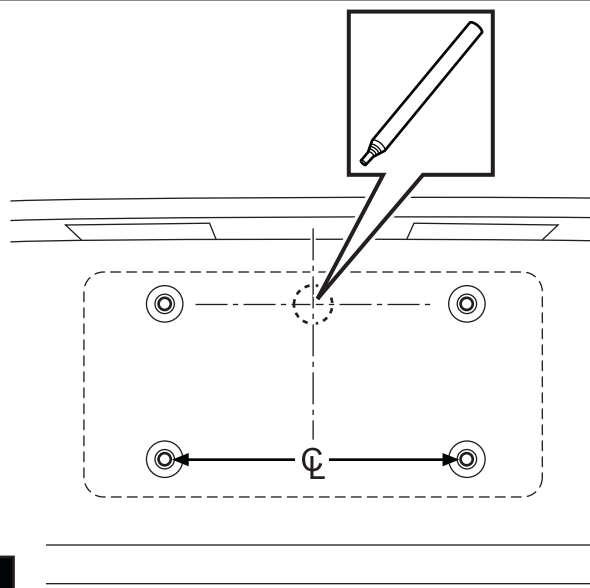


5

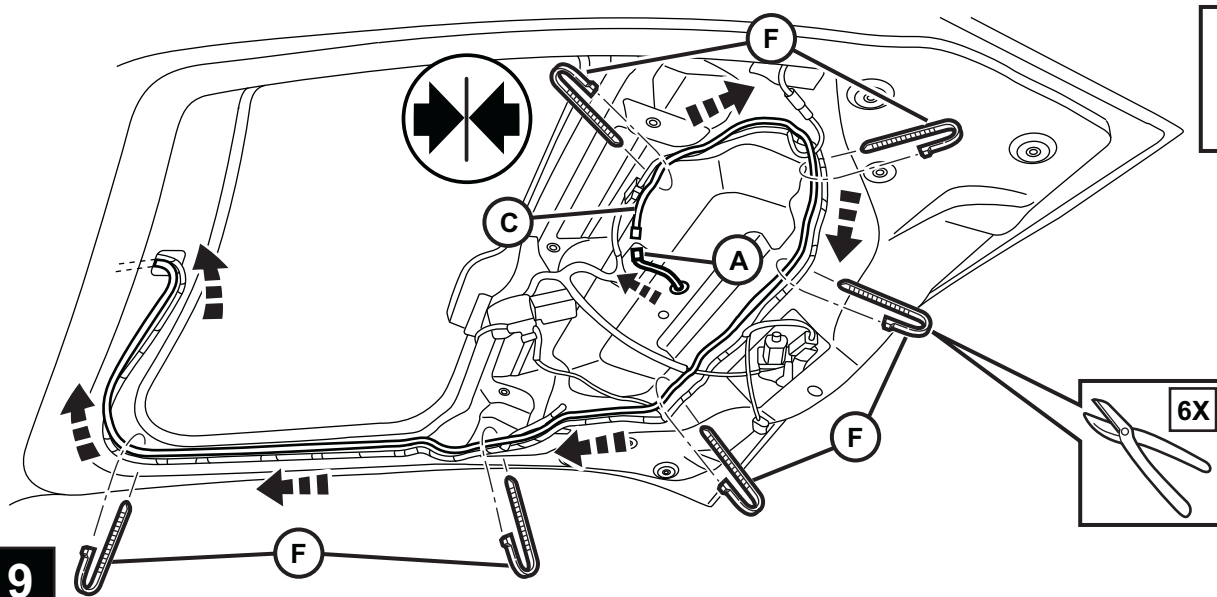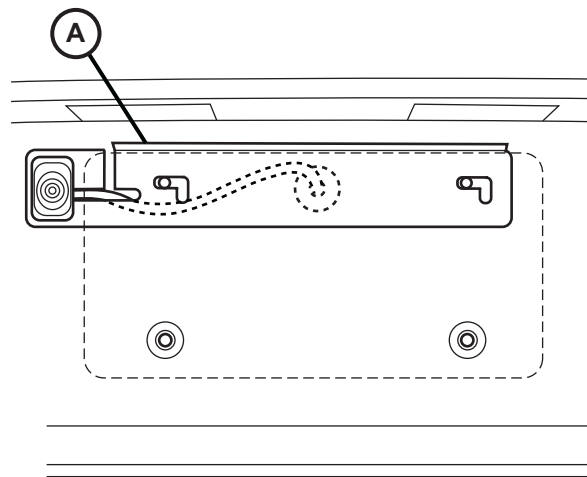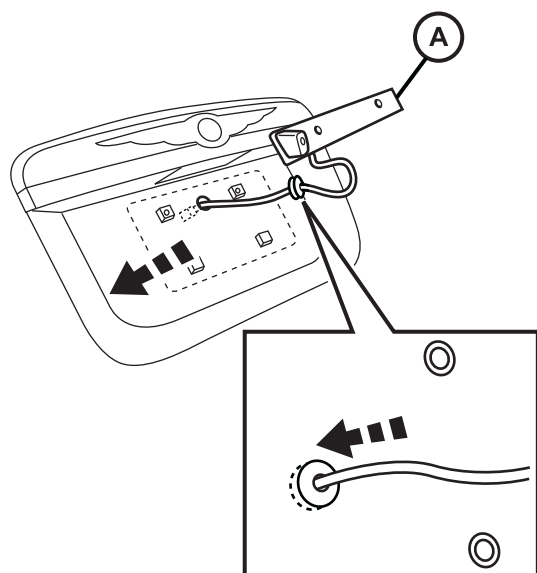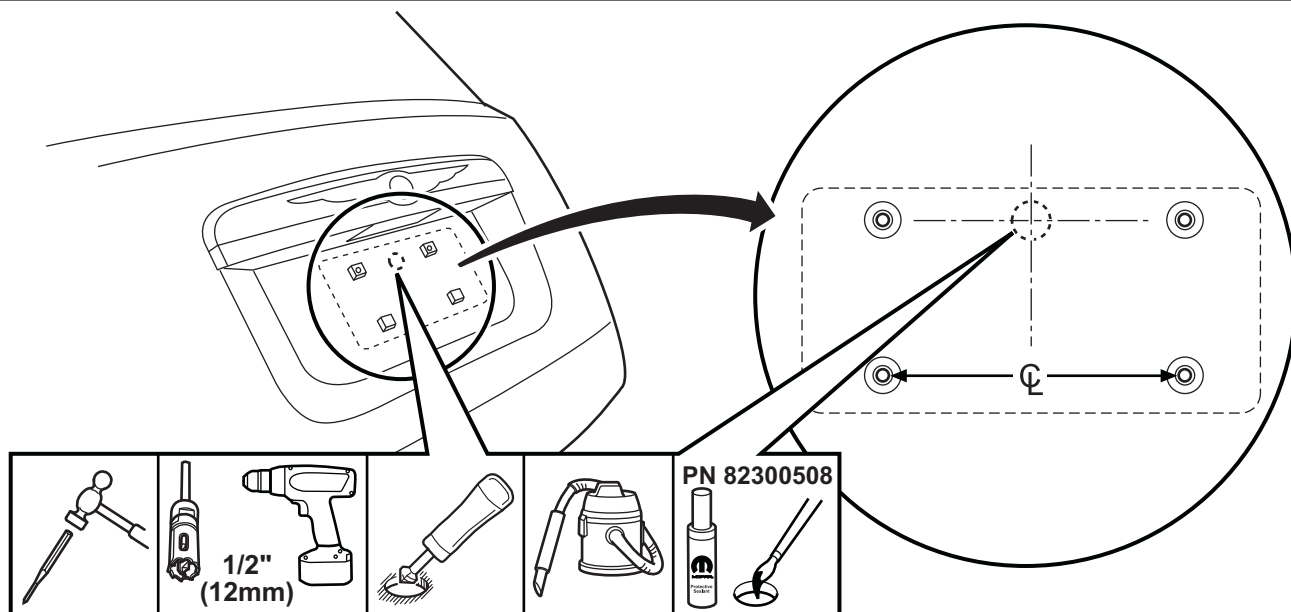


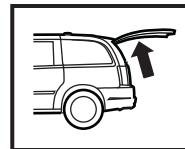


10

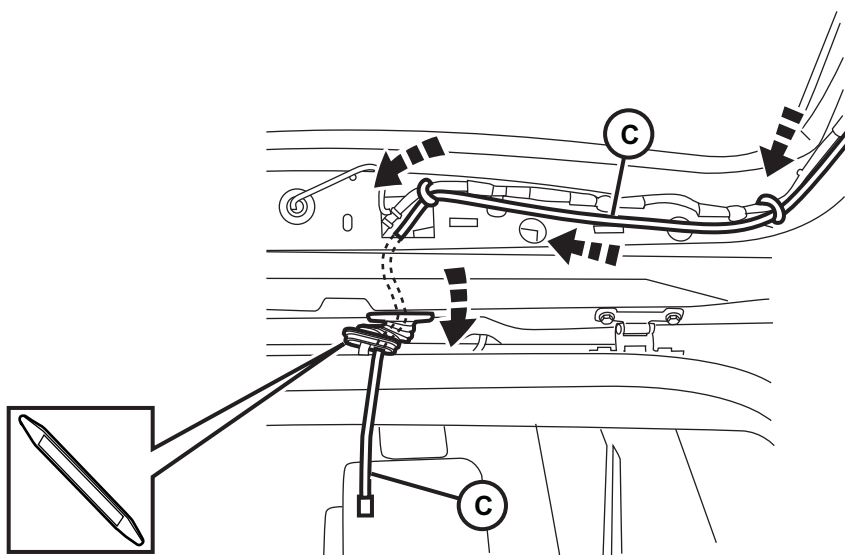

11

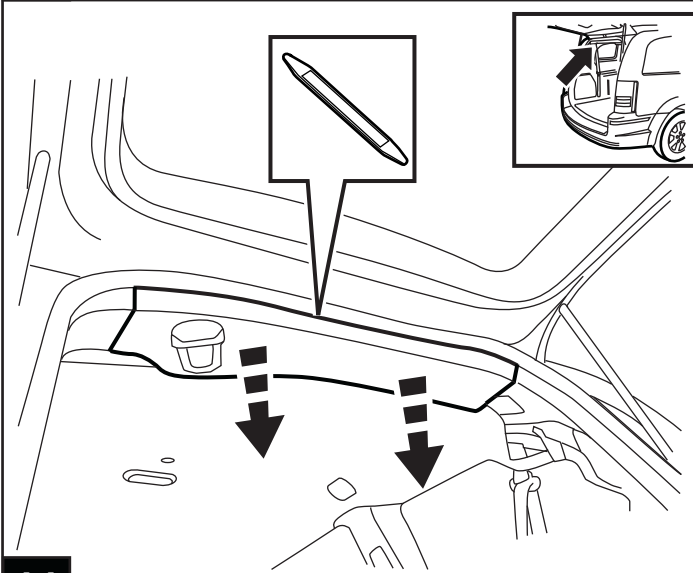


12

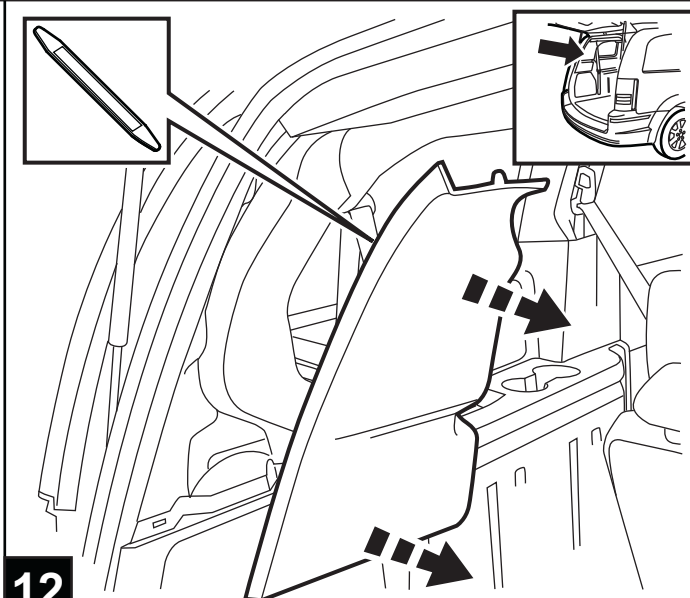








13


OPTIONAL POWER LIFTGATE

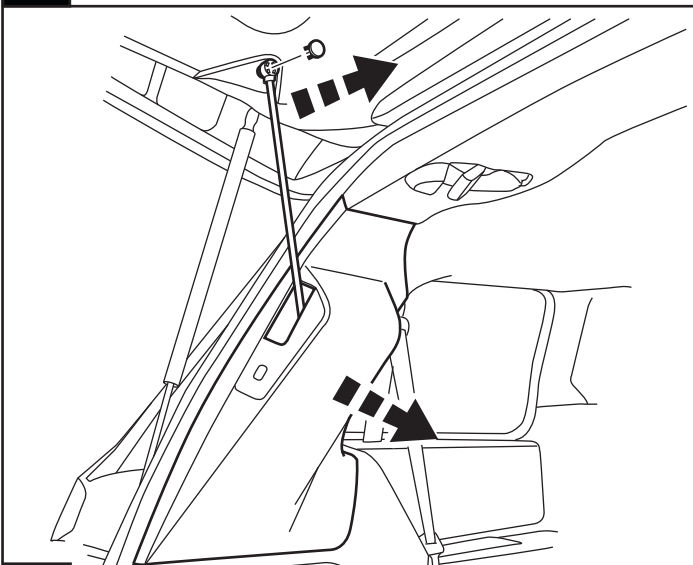


14

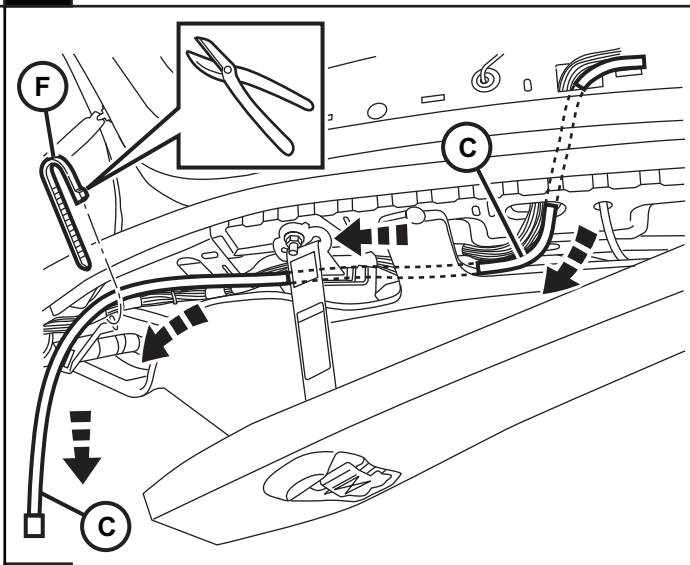

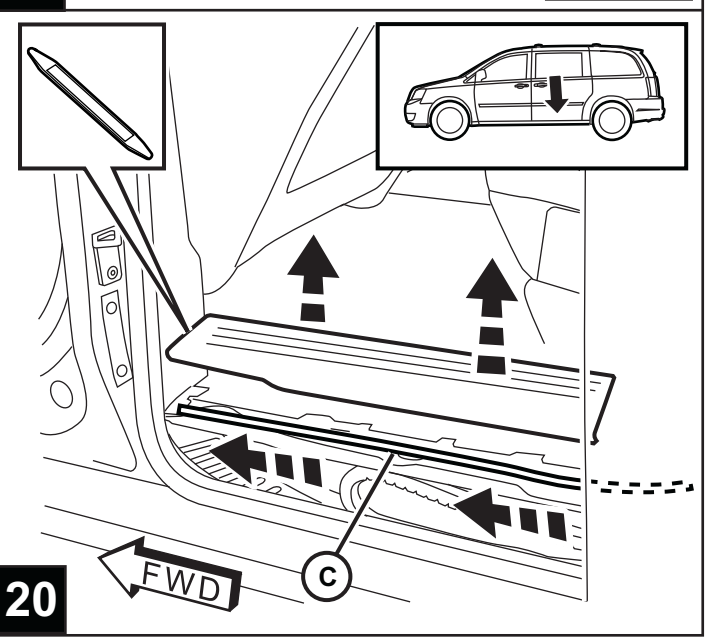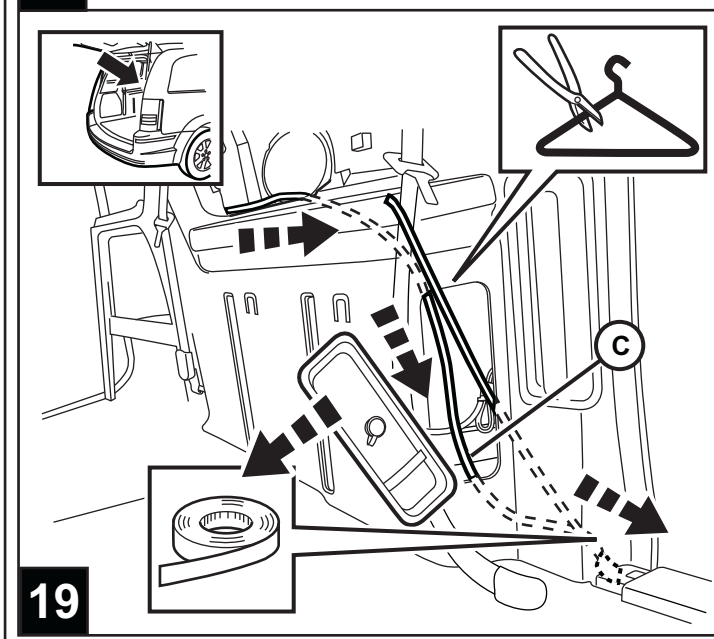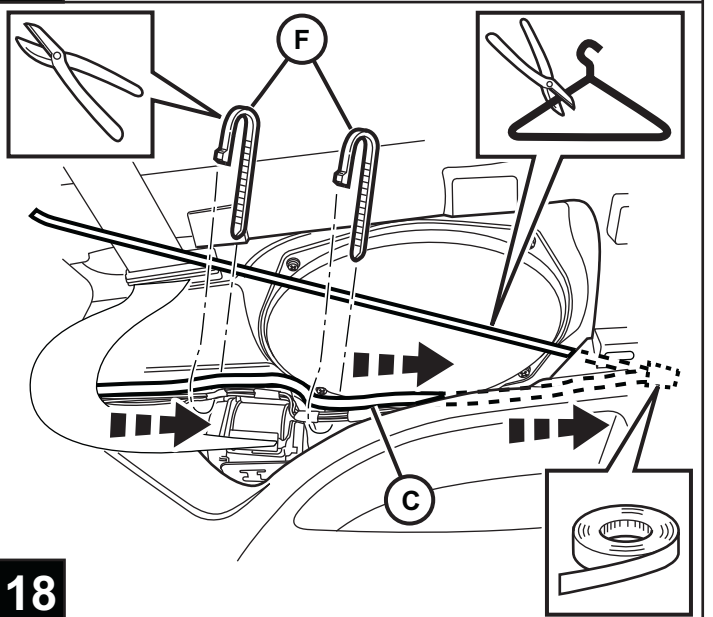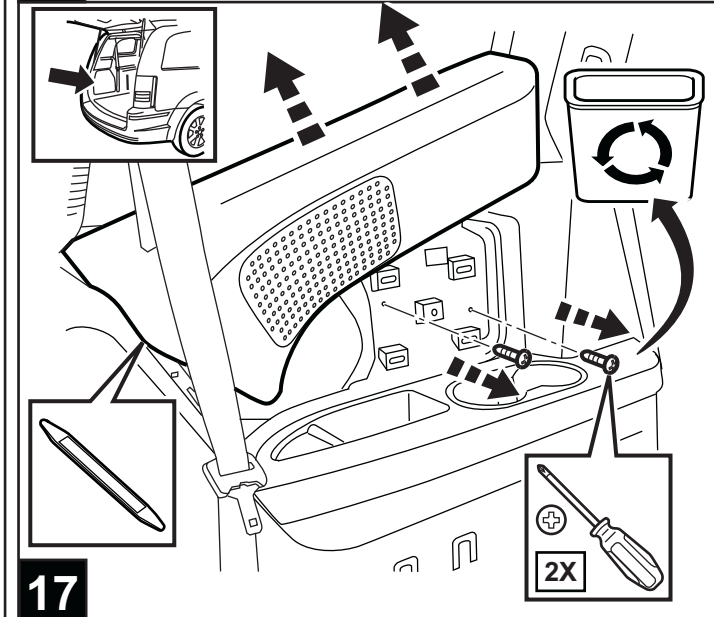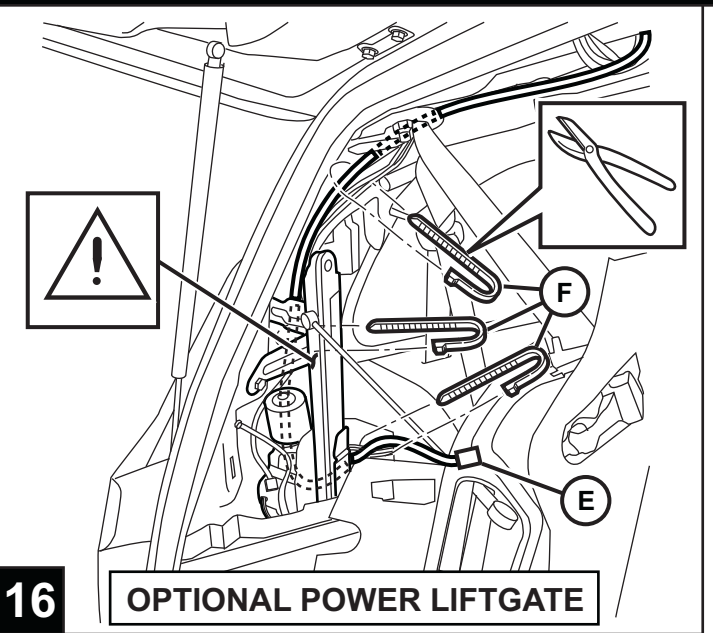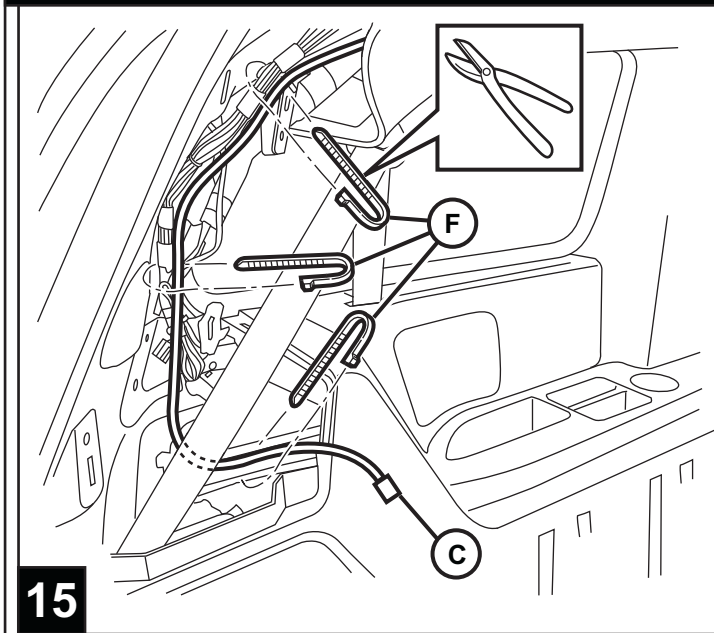


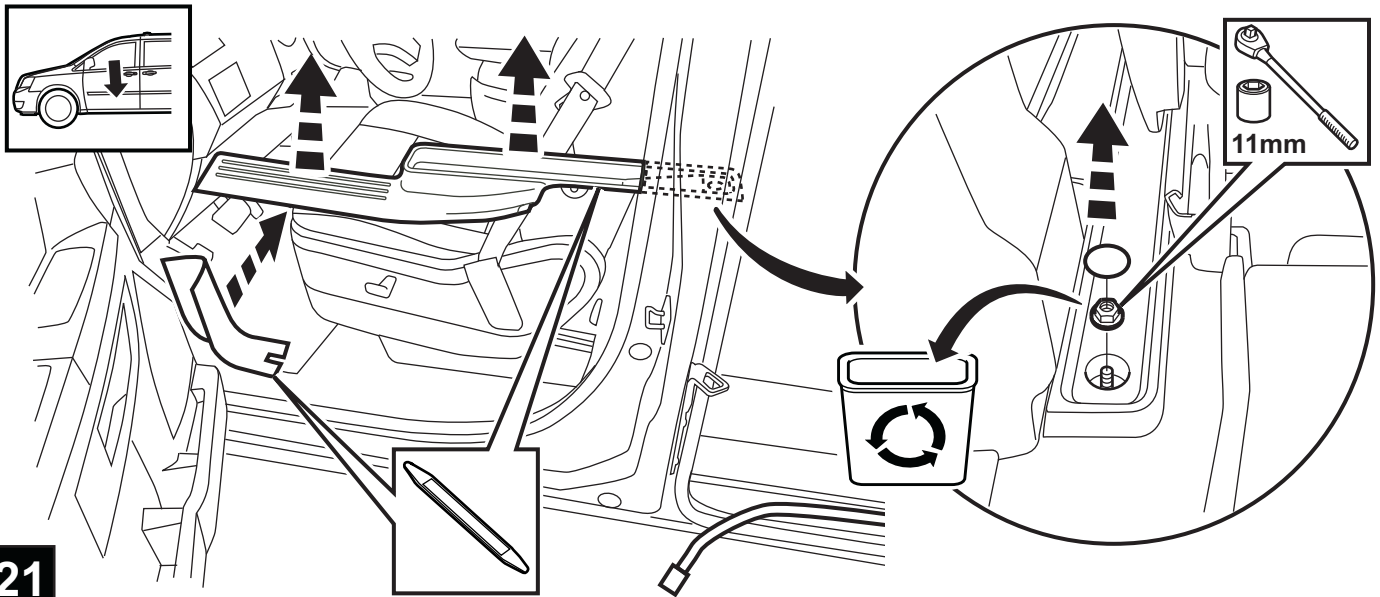


21

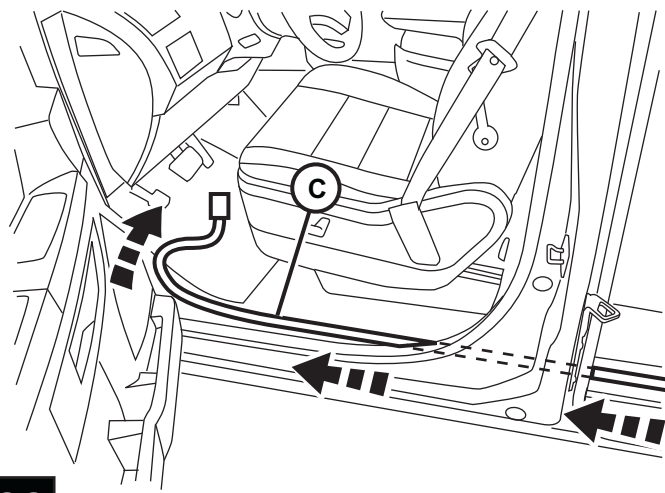


22

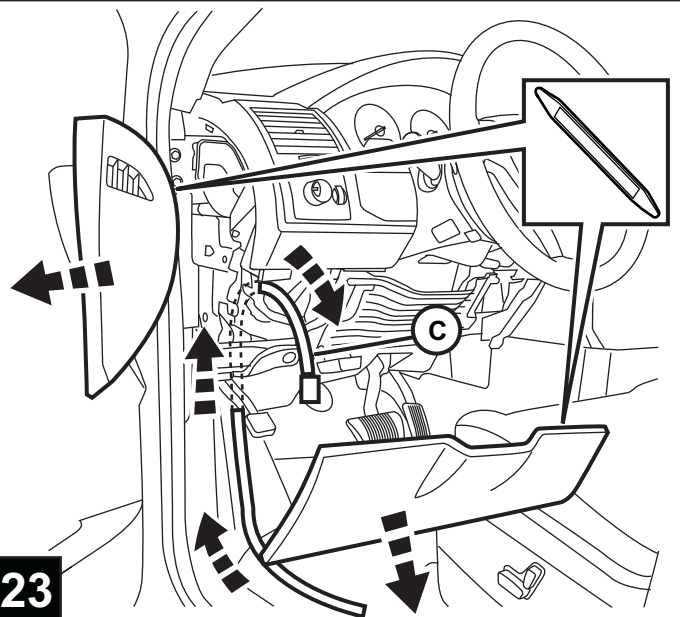






23

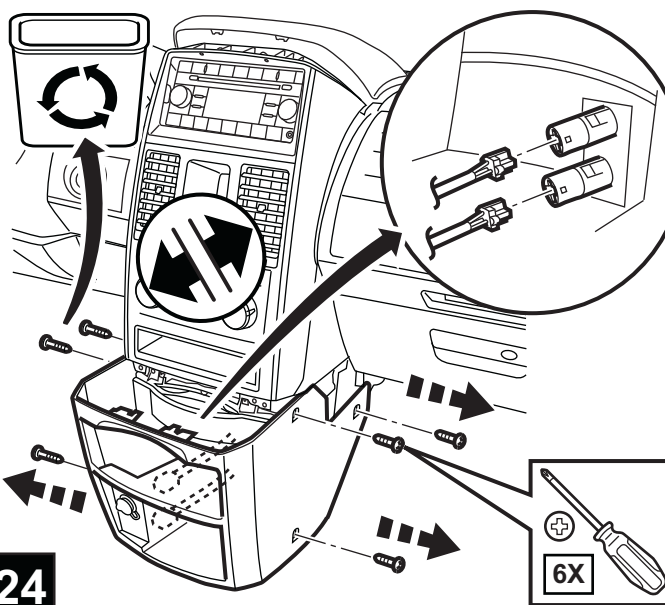


24

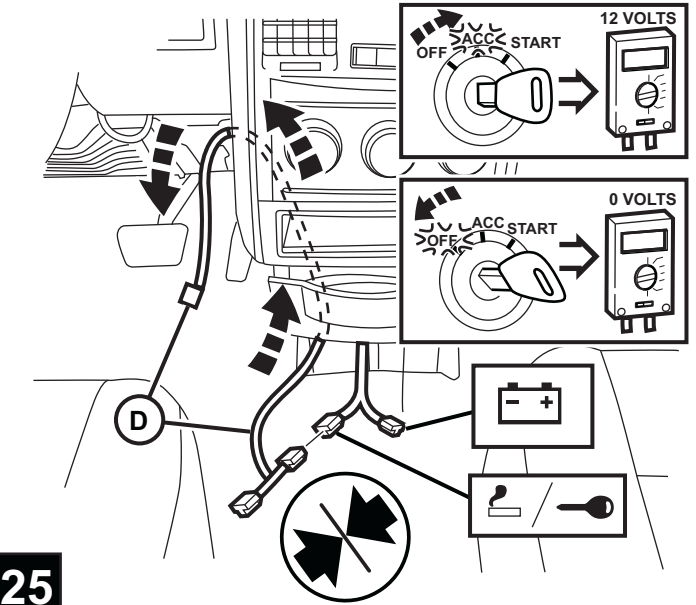


25

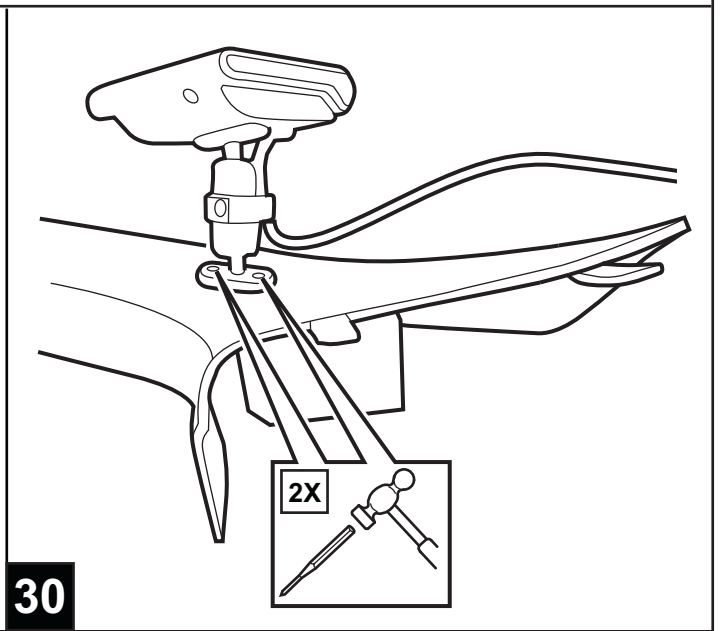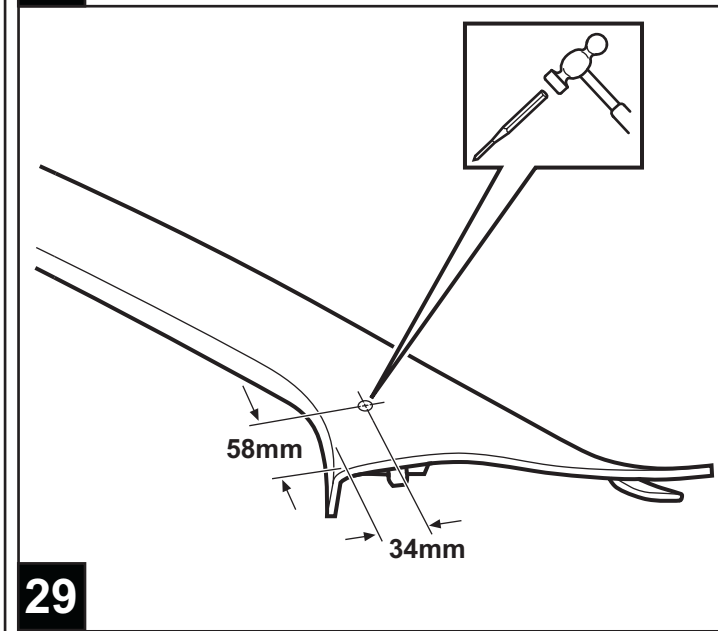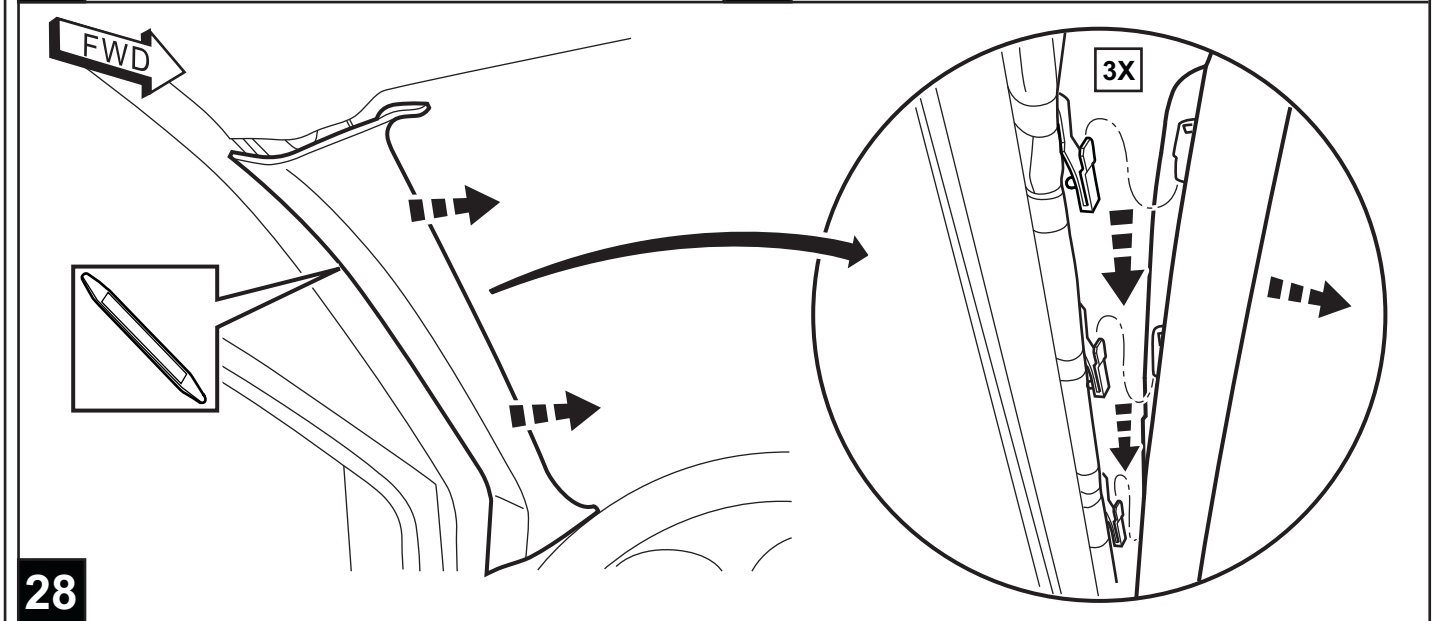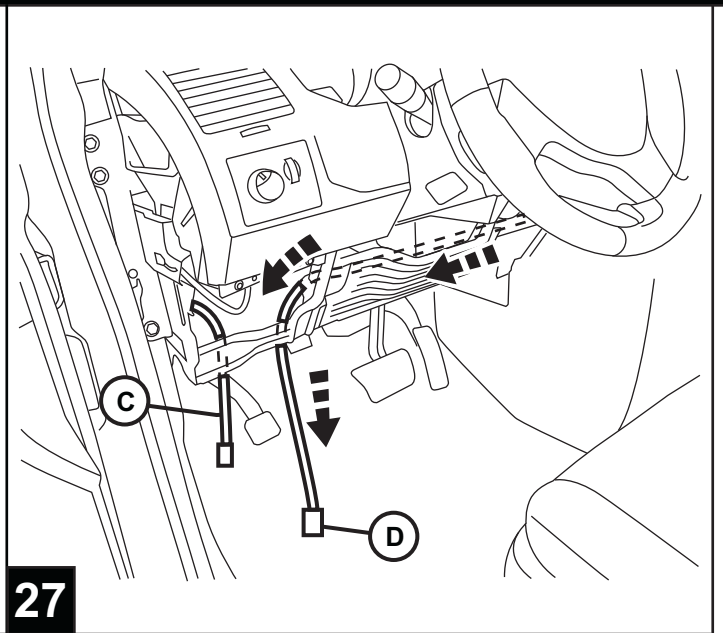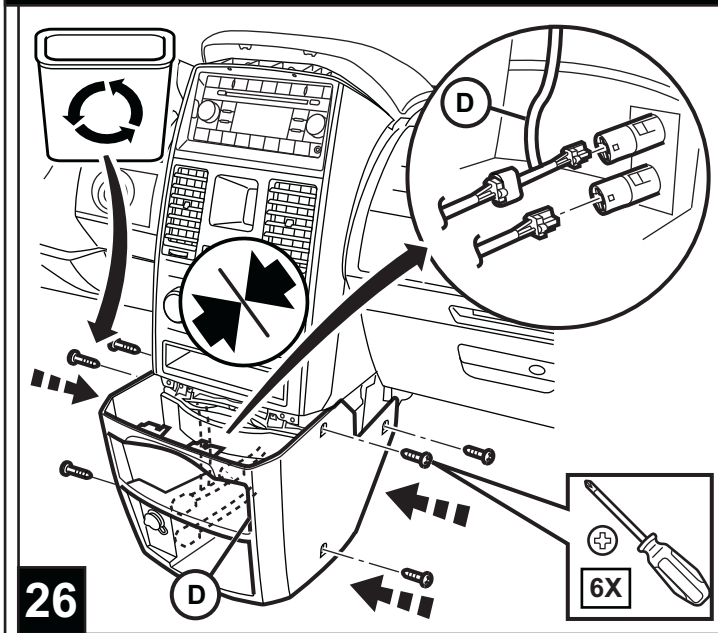


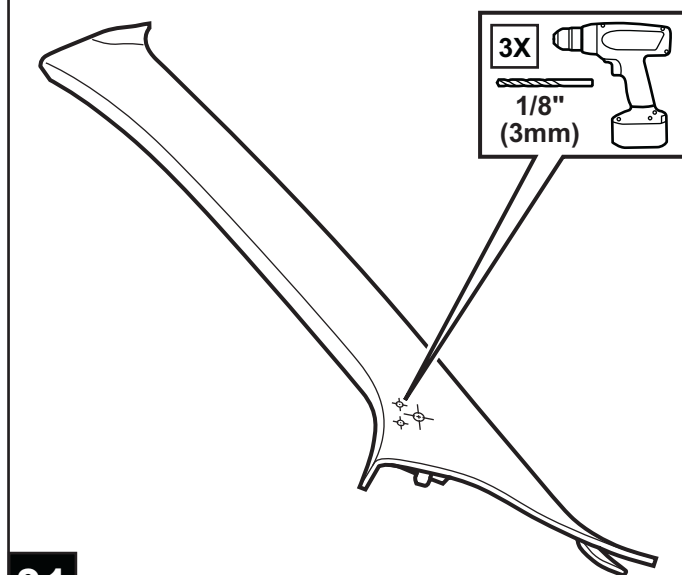


31

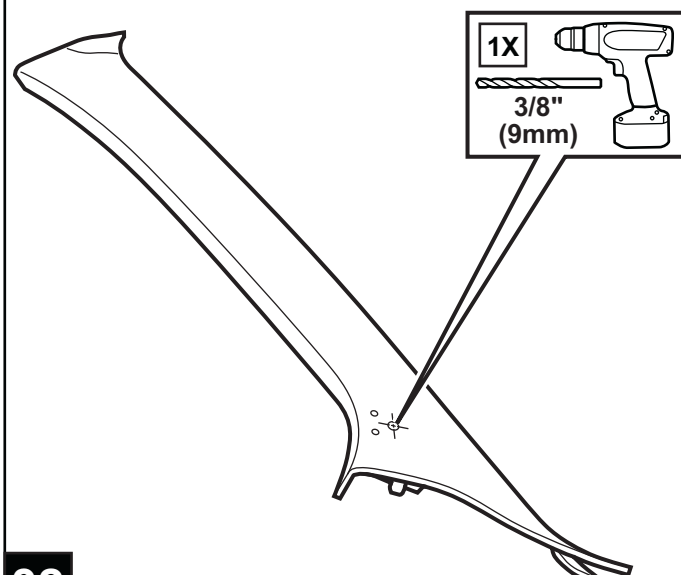


32

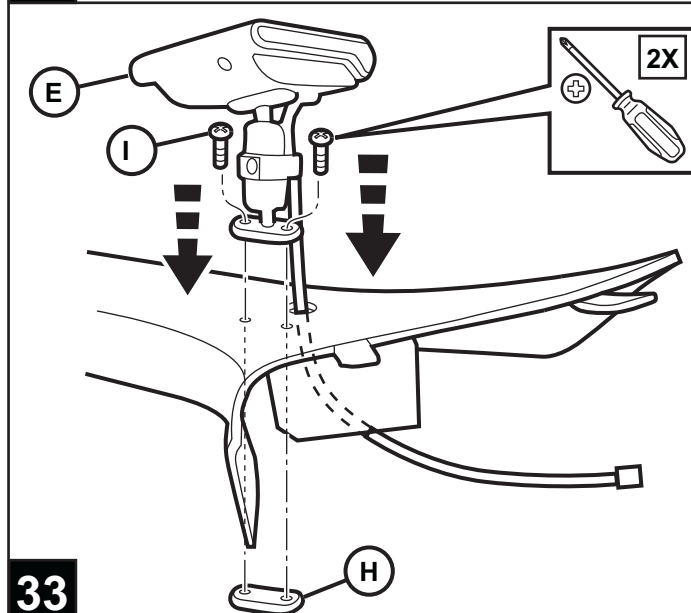





33

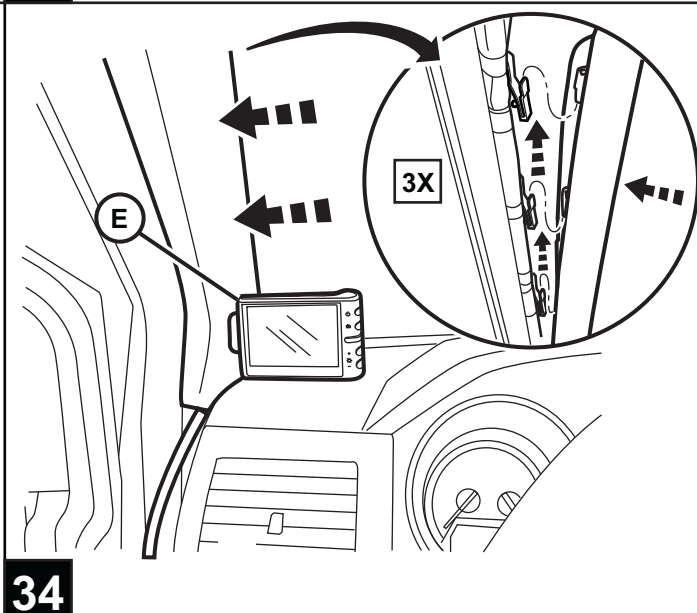


34

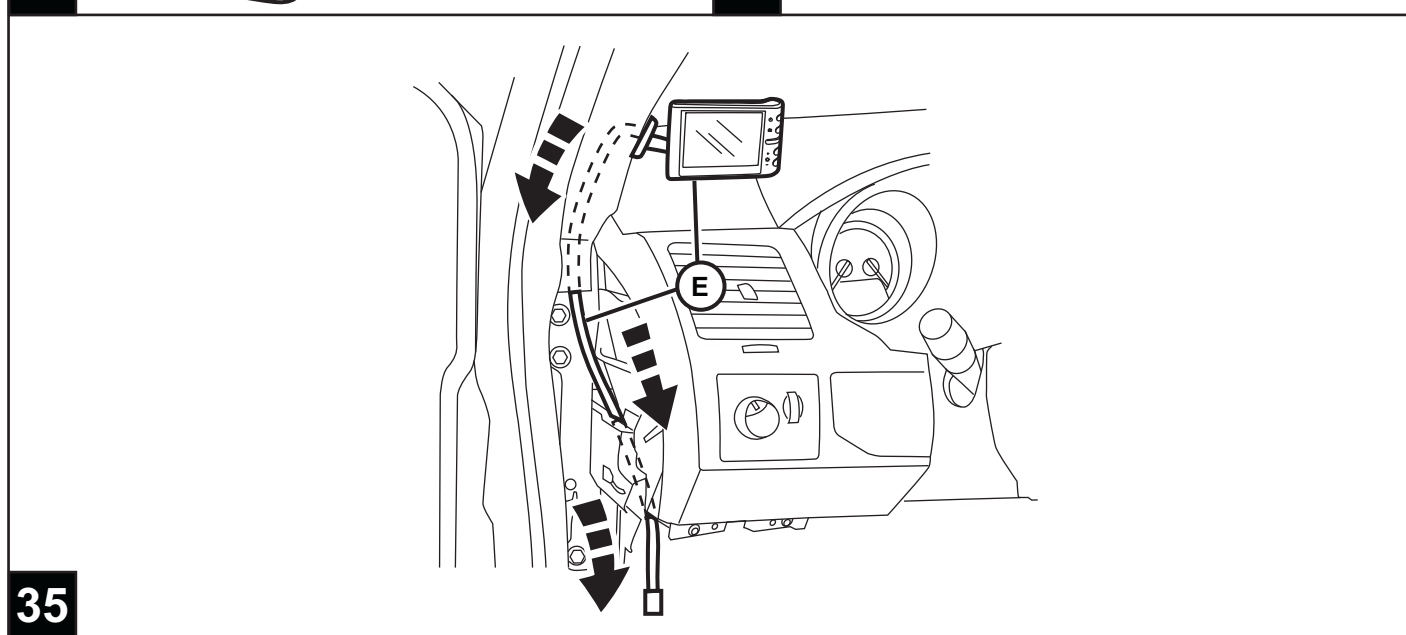


35

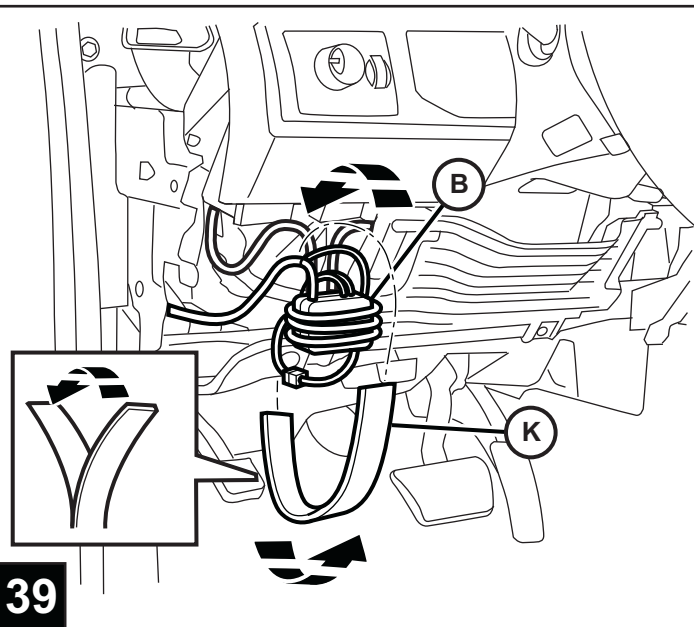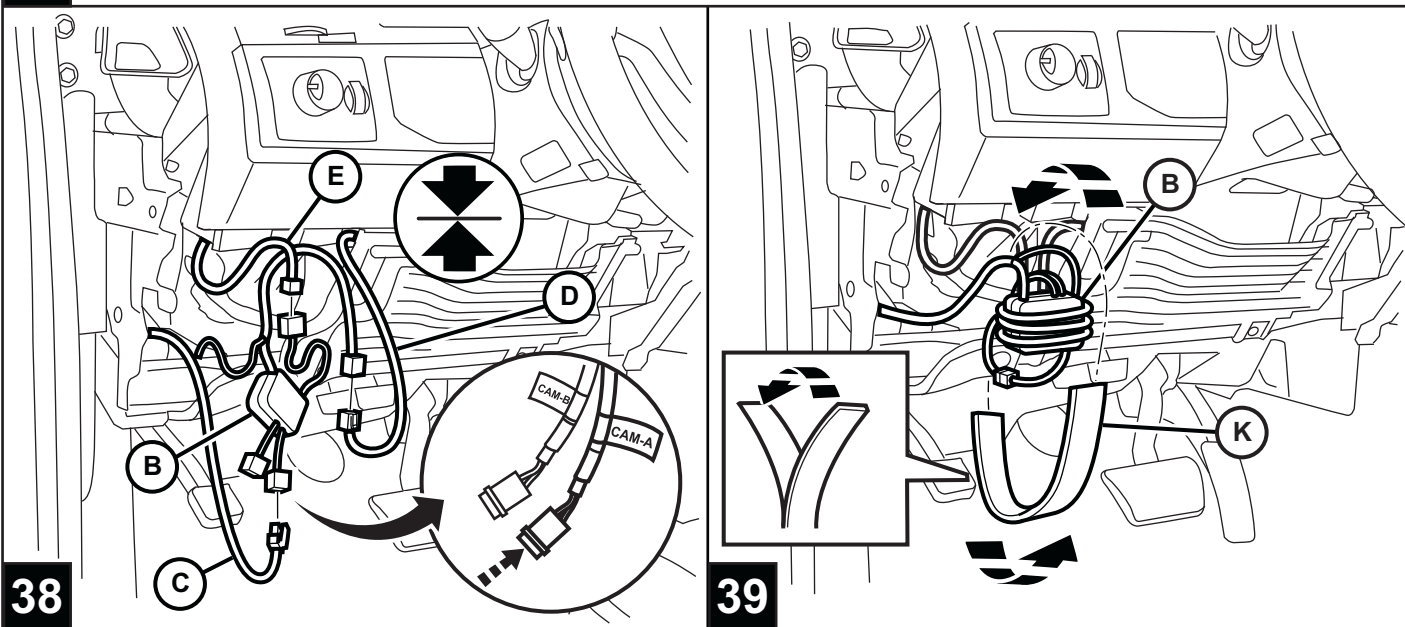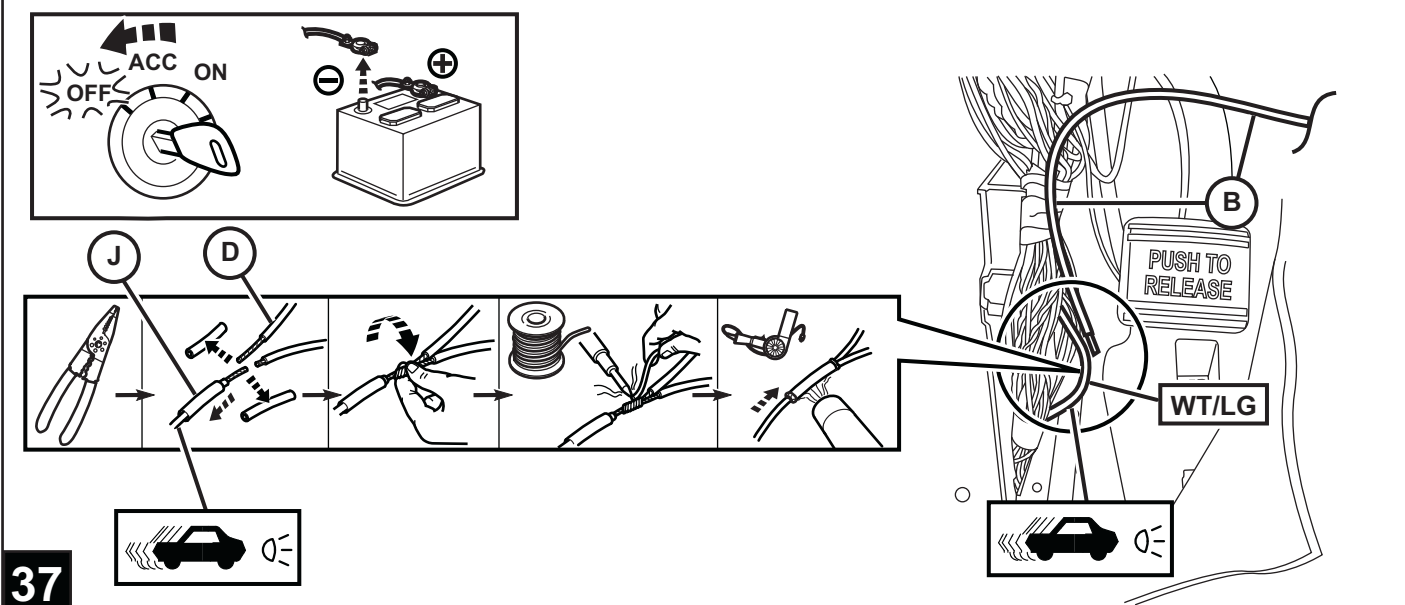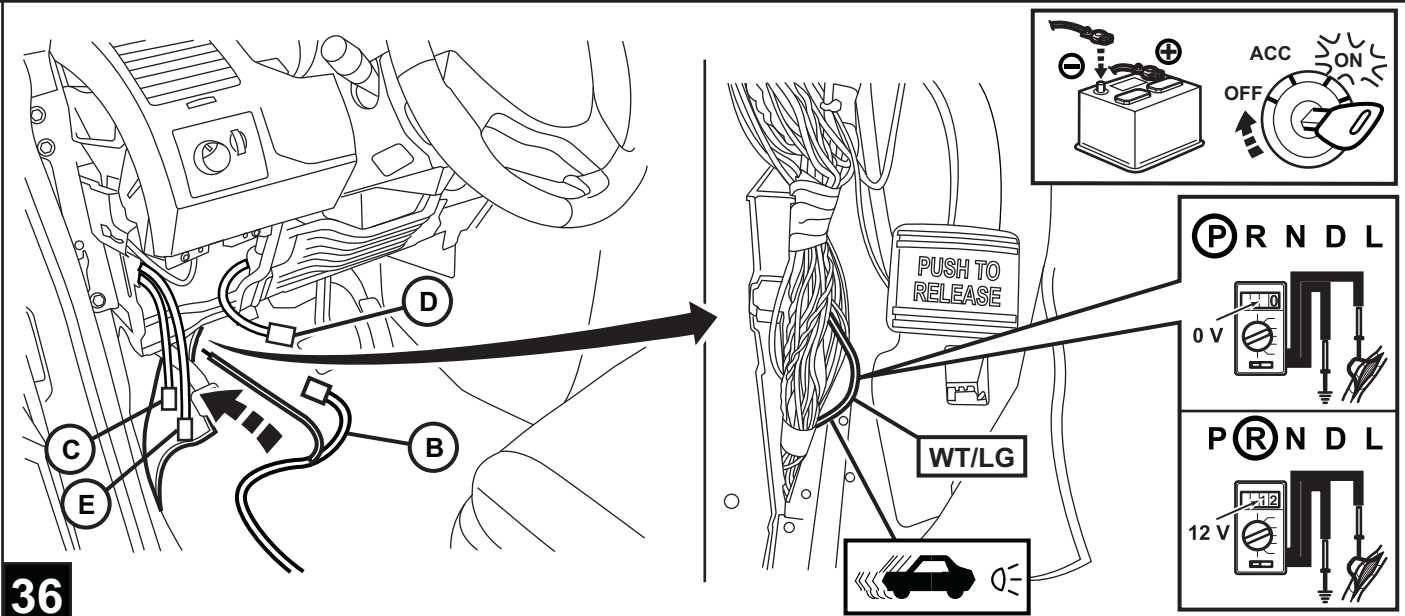


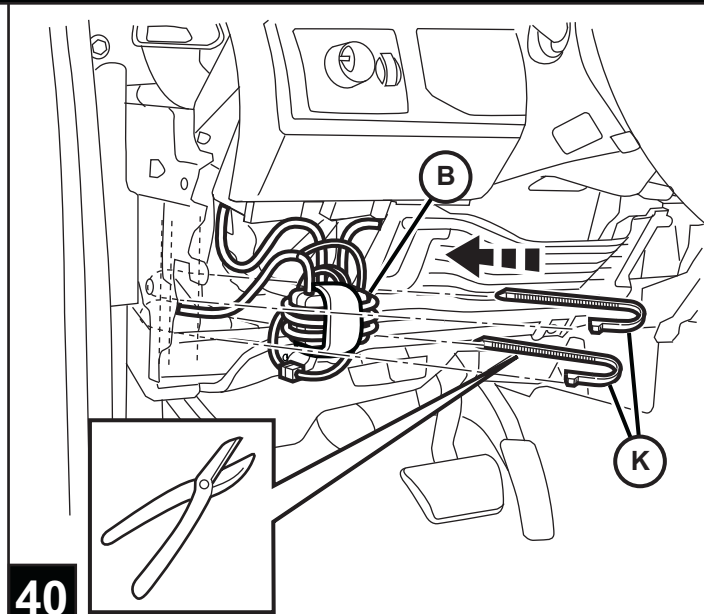


40

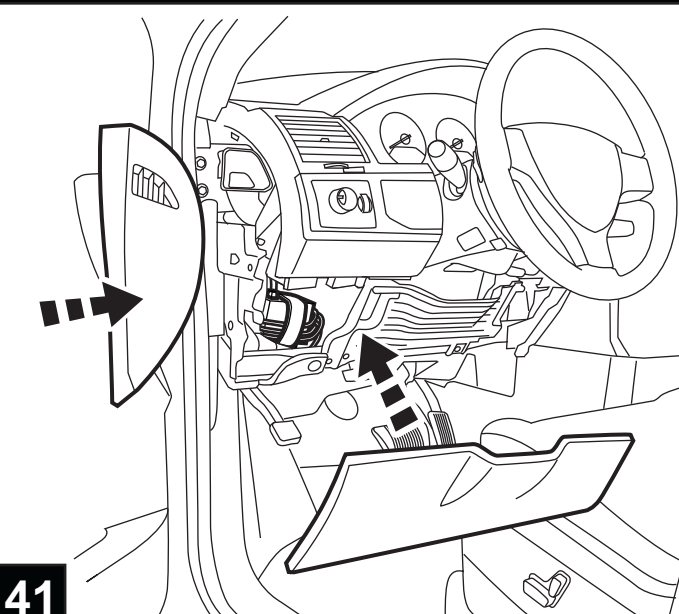


41

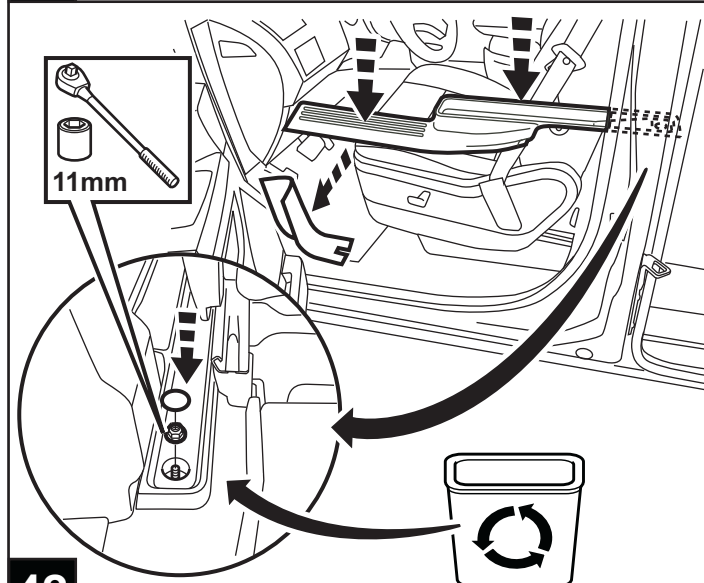


42

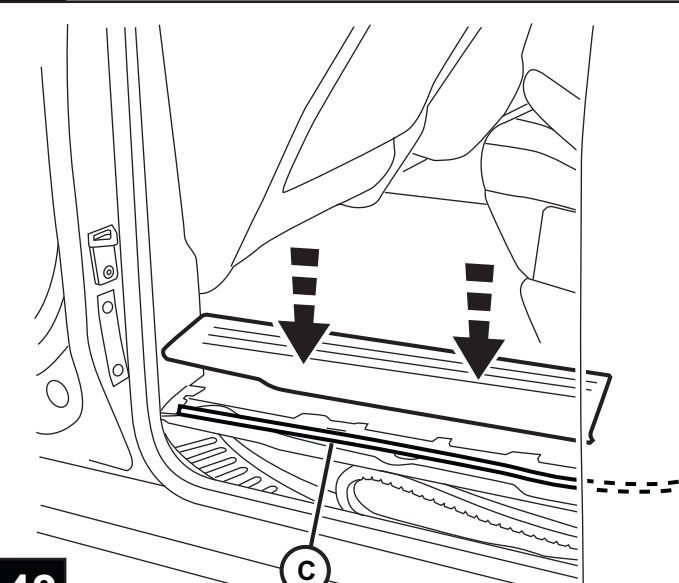








43

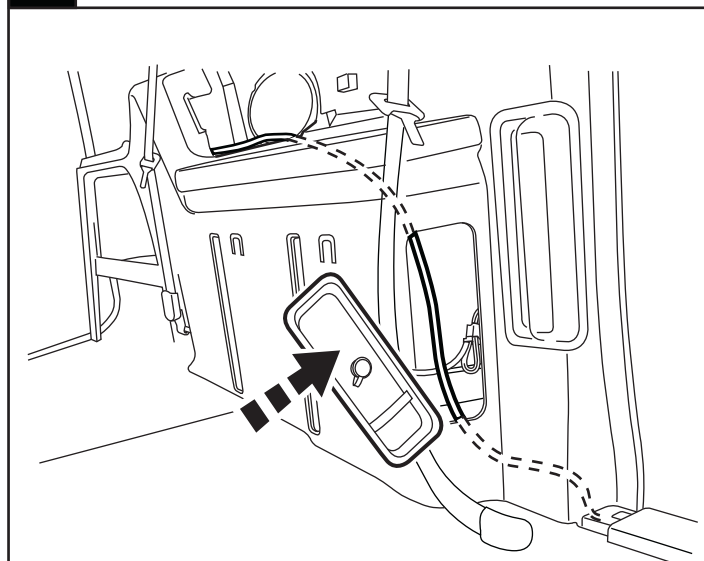

44

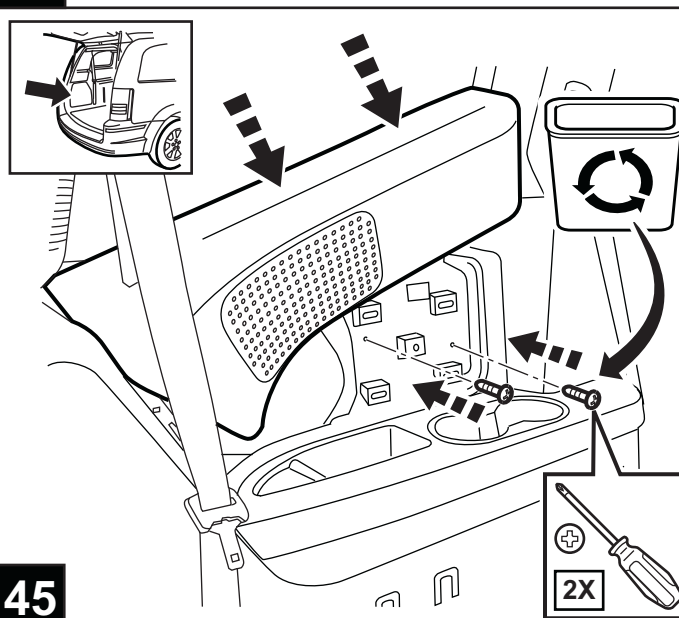

45

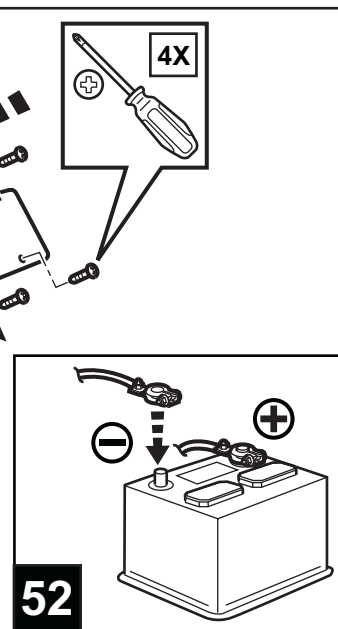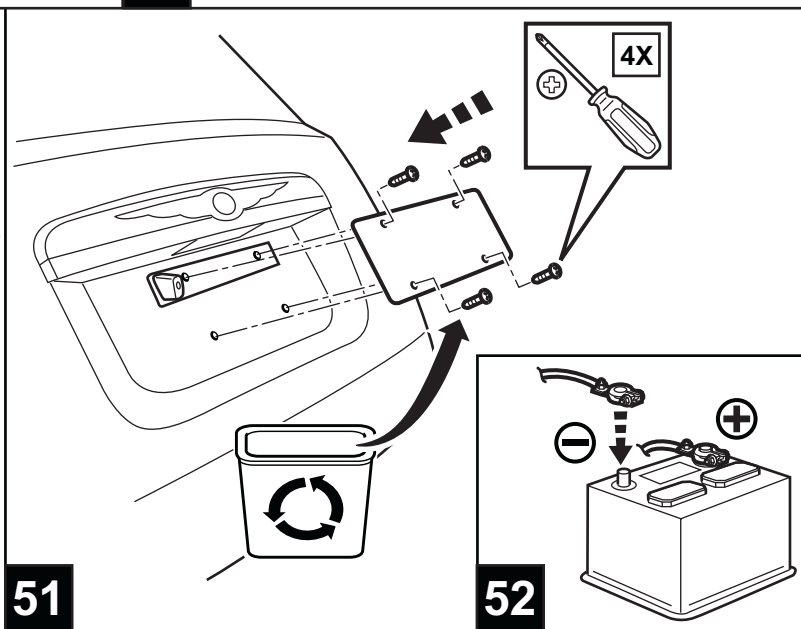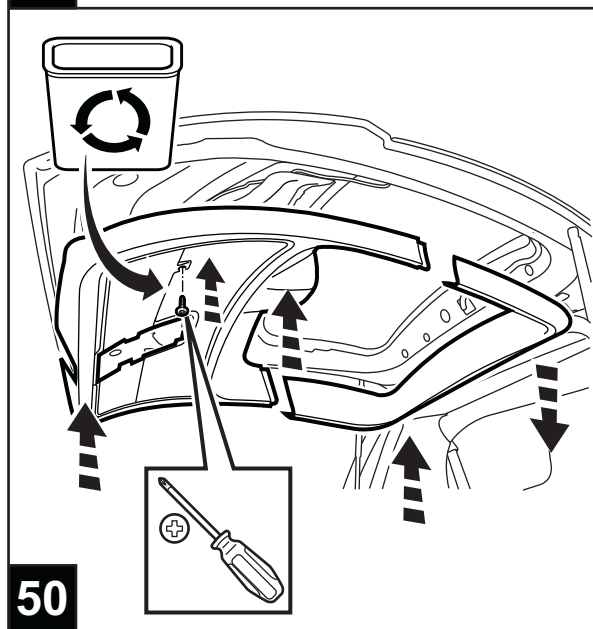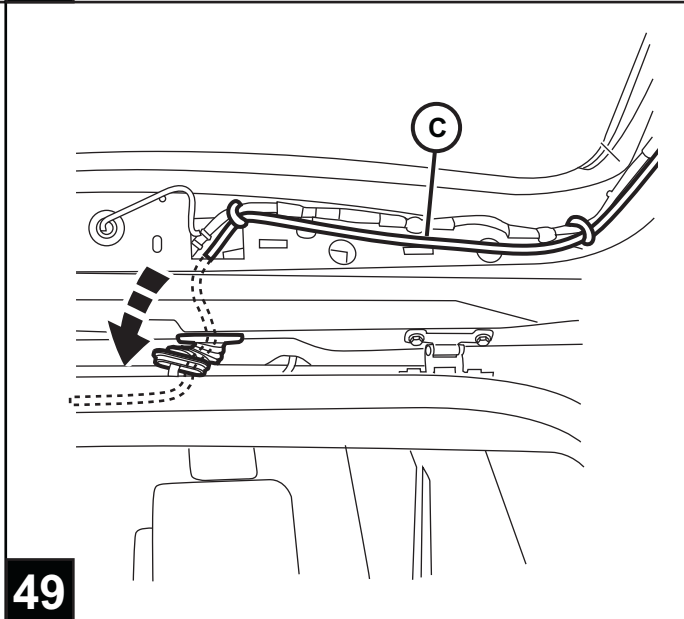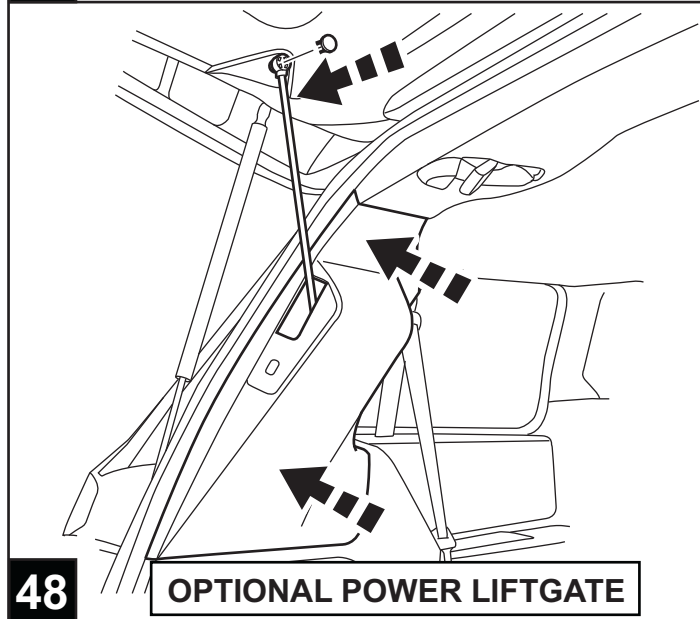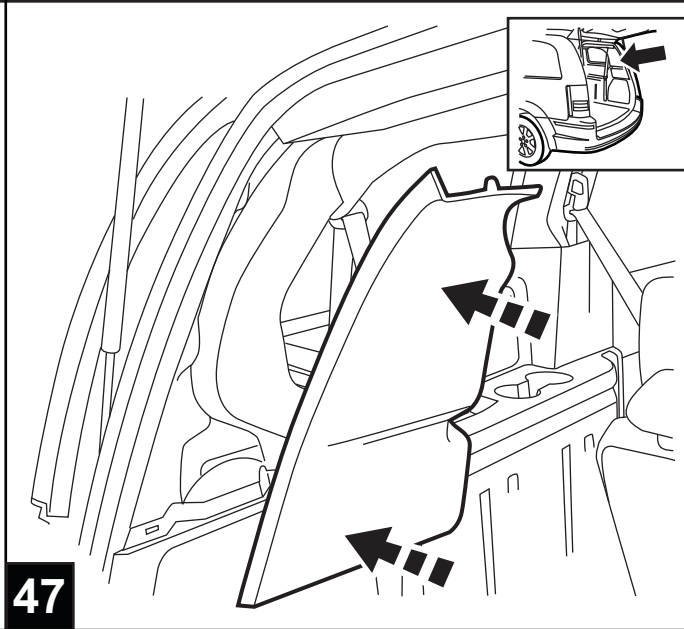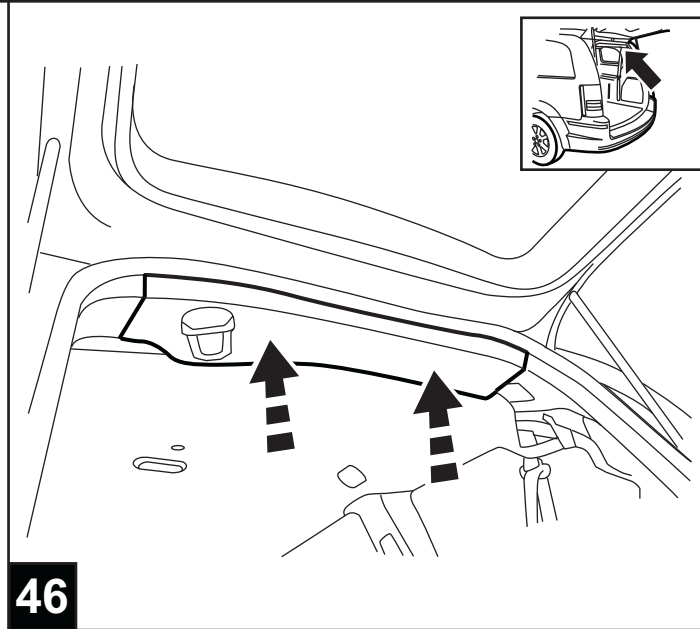





JEEP LIBERTY


Rear Backup Camera Kit

			7mm 10mm 13/16" T-30 T-45				
			1/2" (12mm)				PN 82300508
						1/8" (3mm) 3/8" (9mm)	

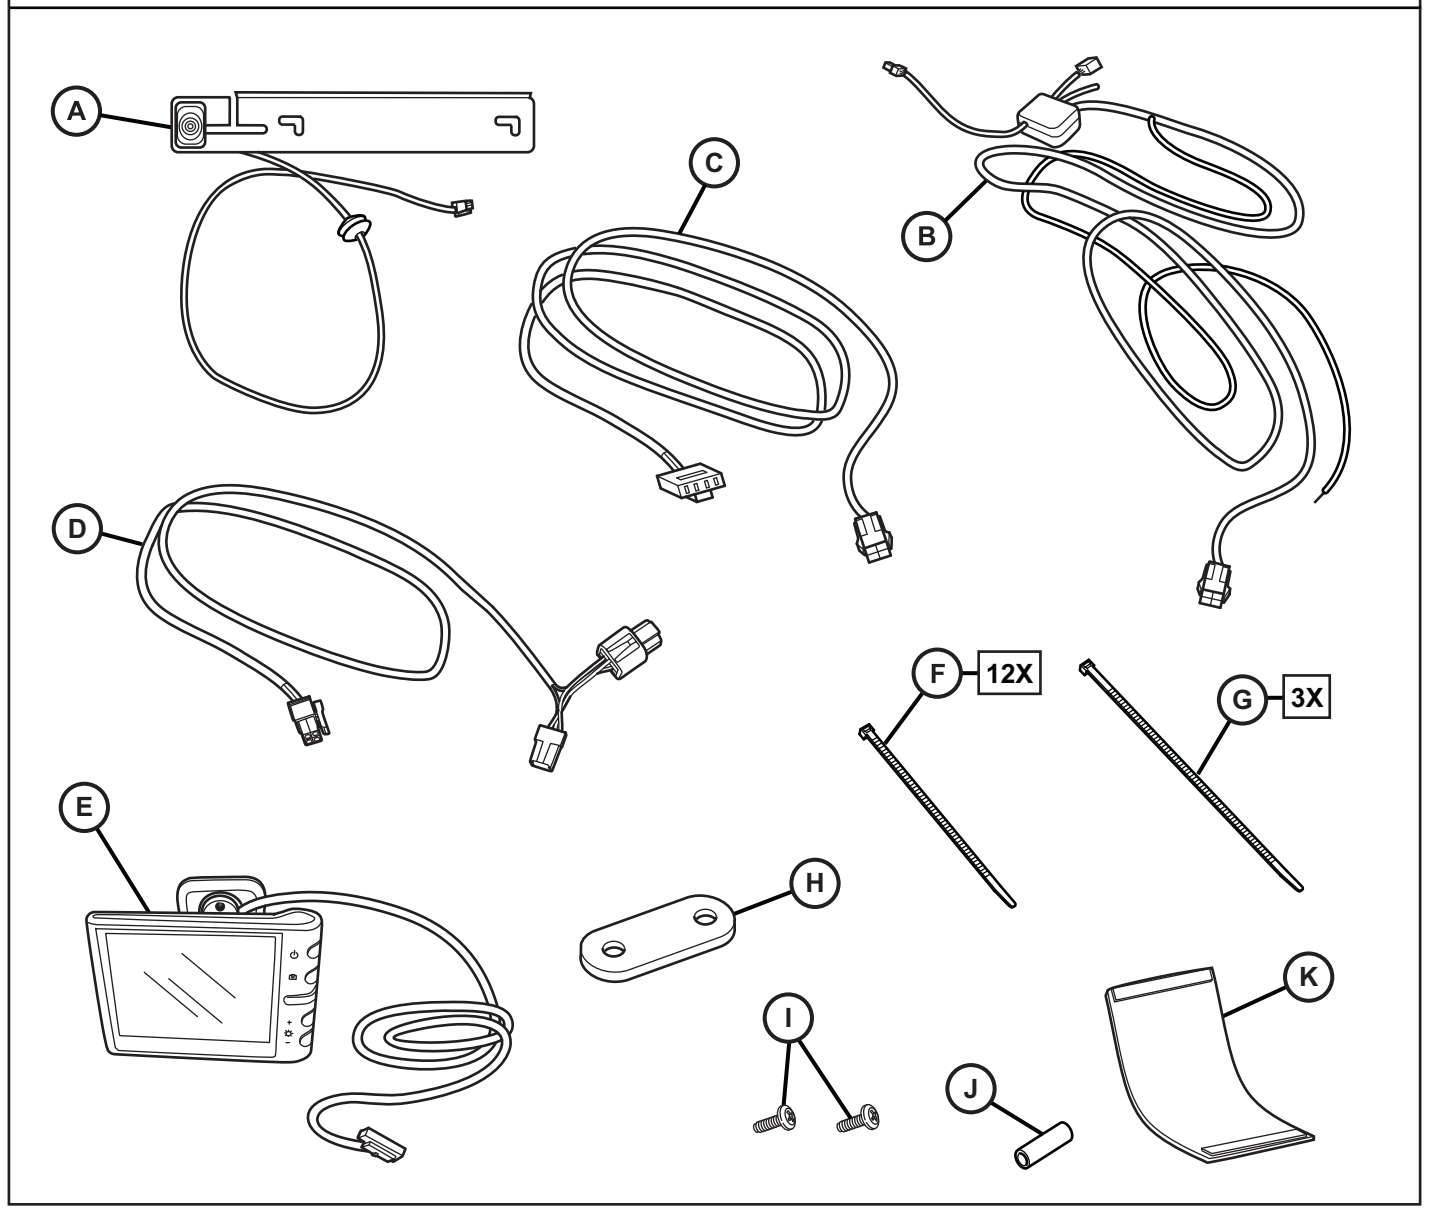


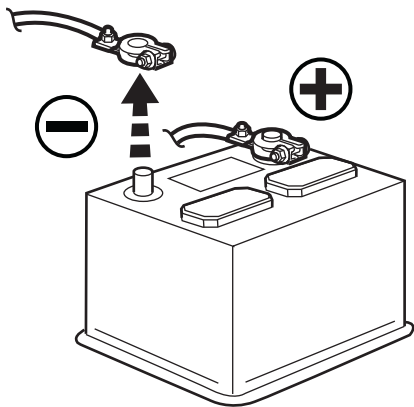


1

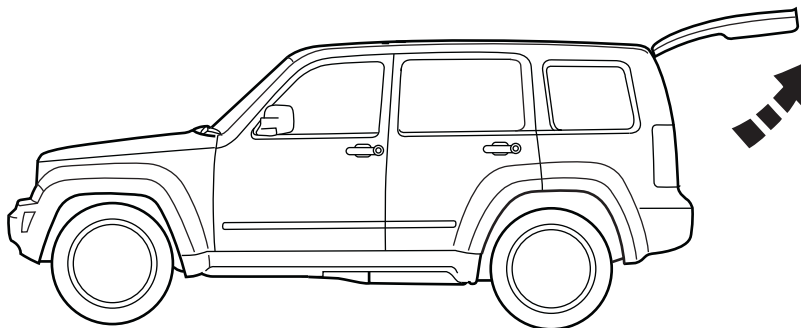


2

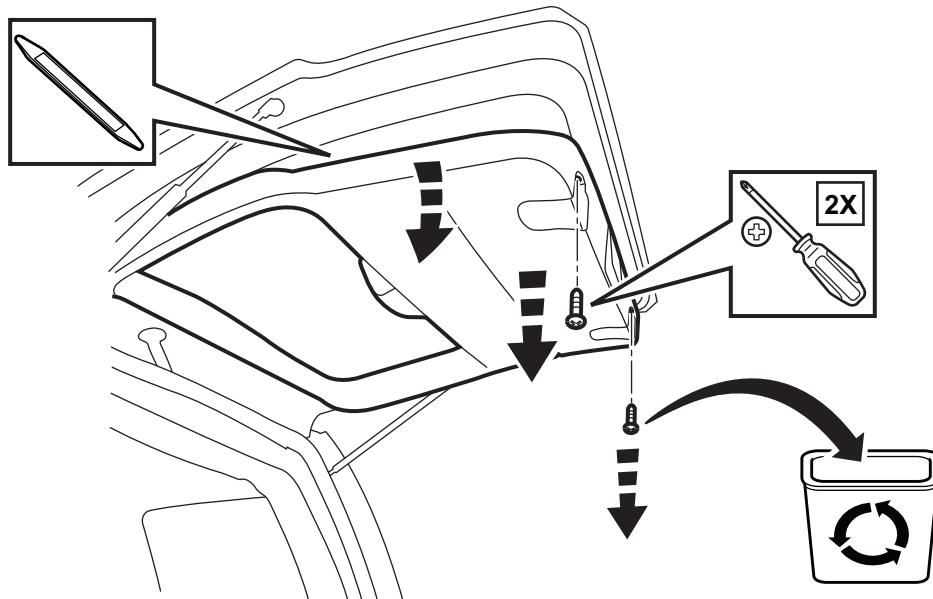






3






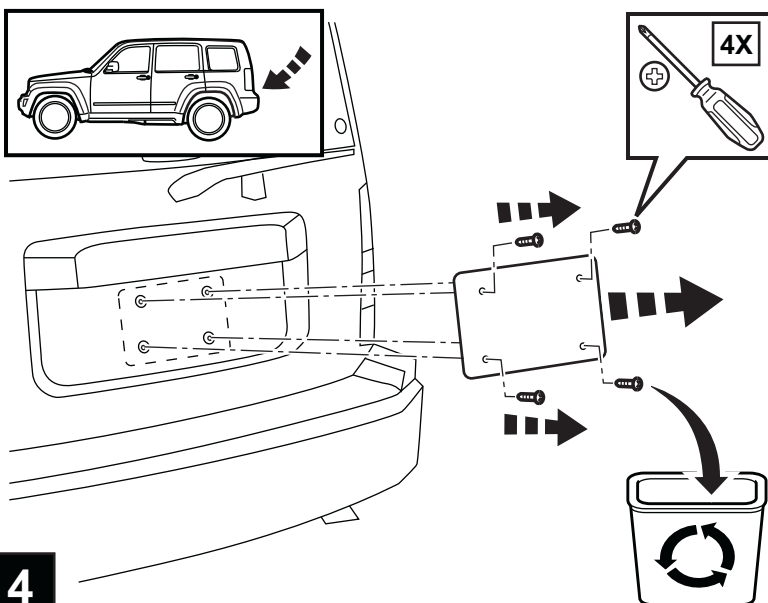


4

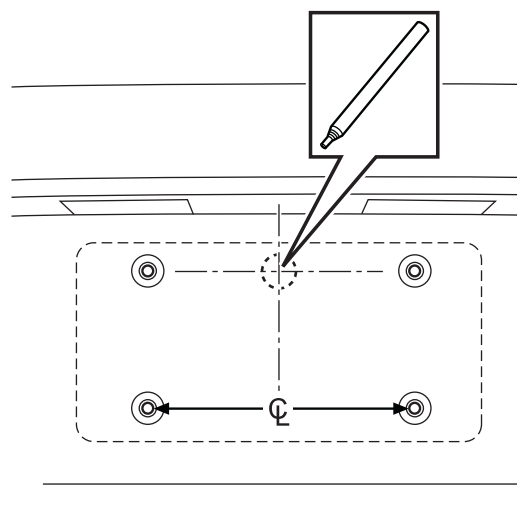


5

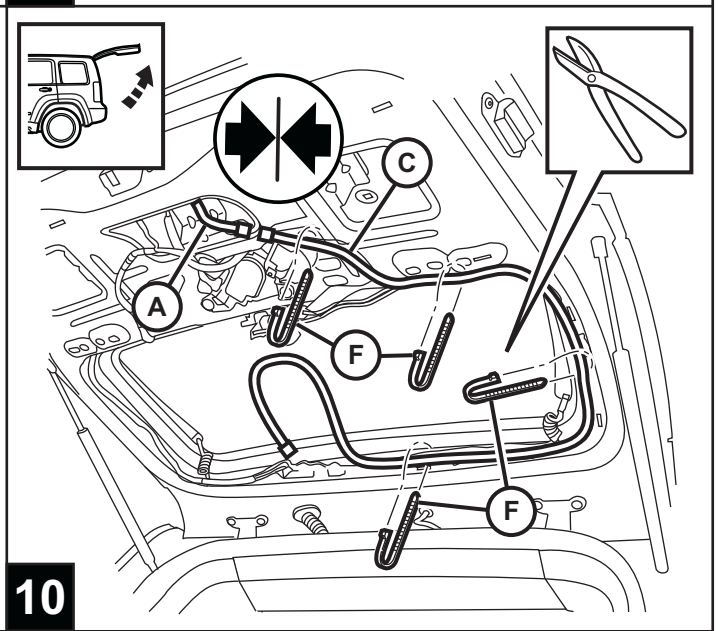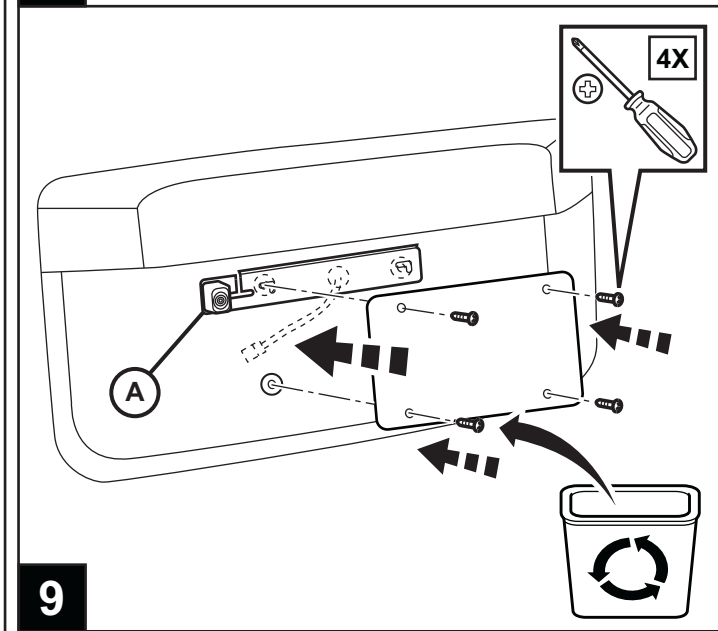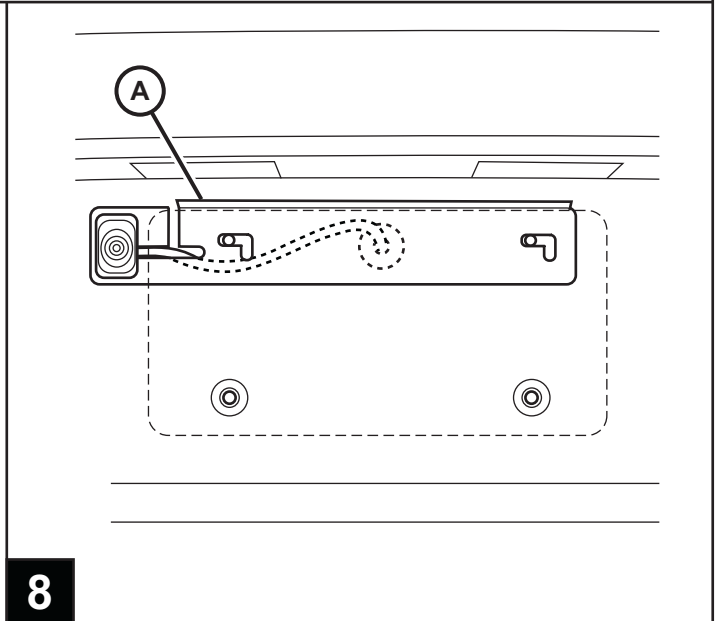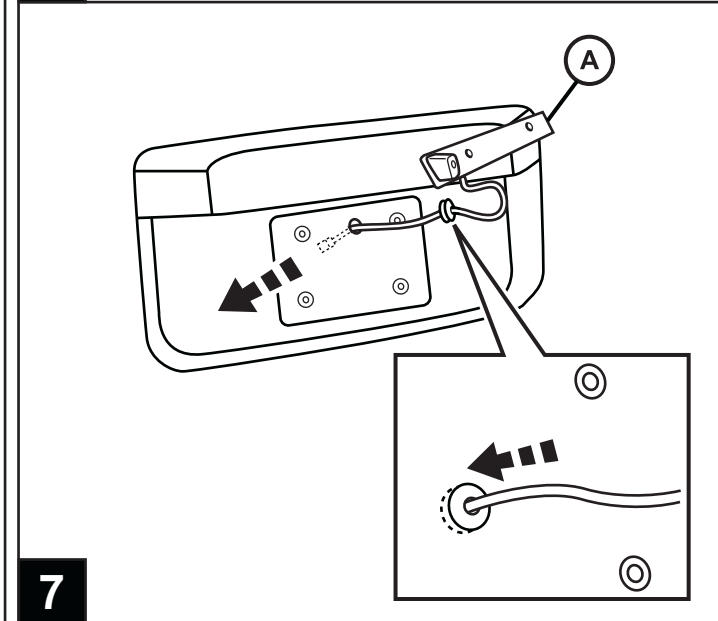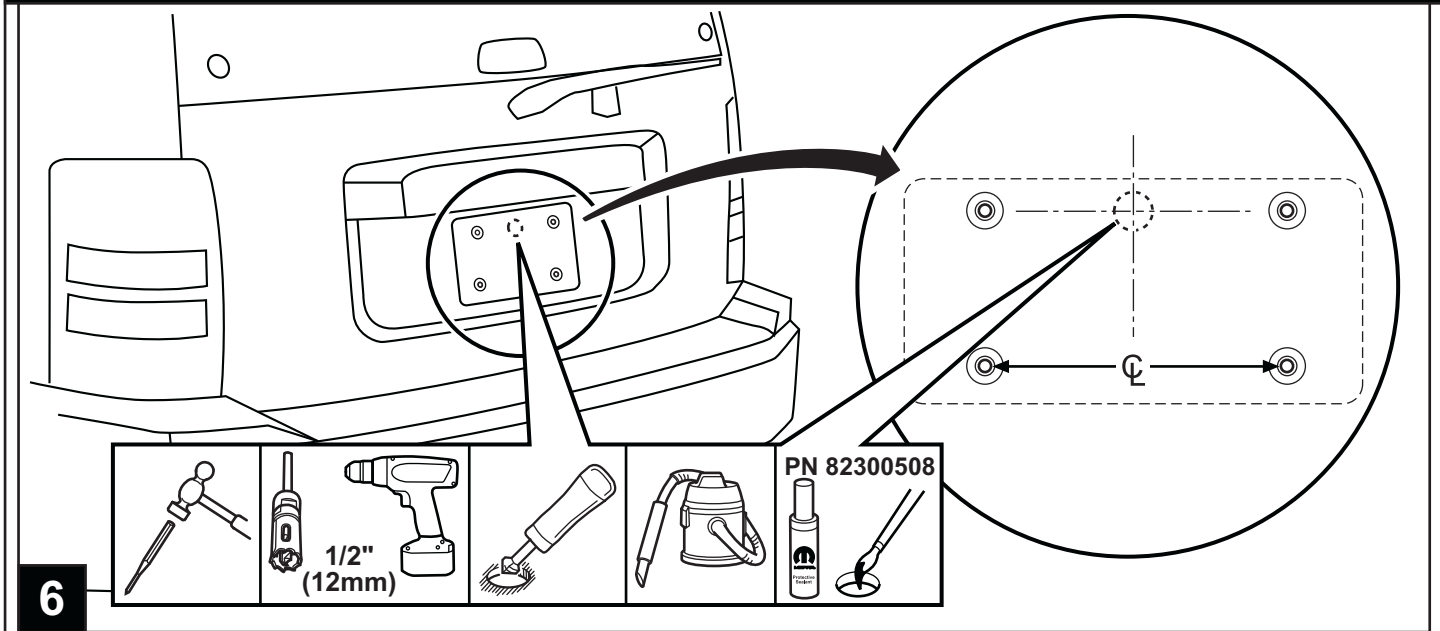


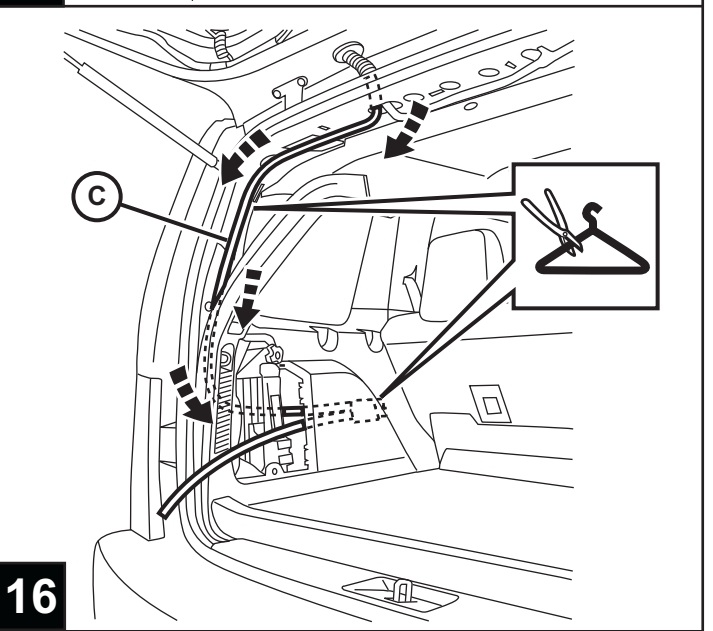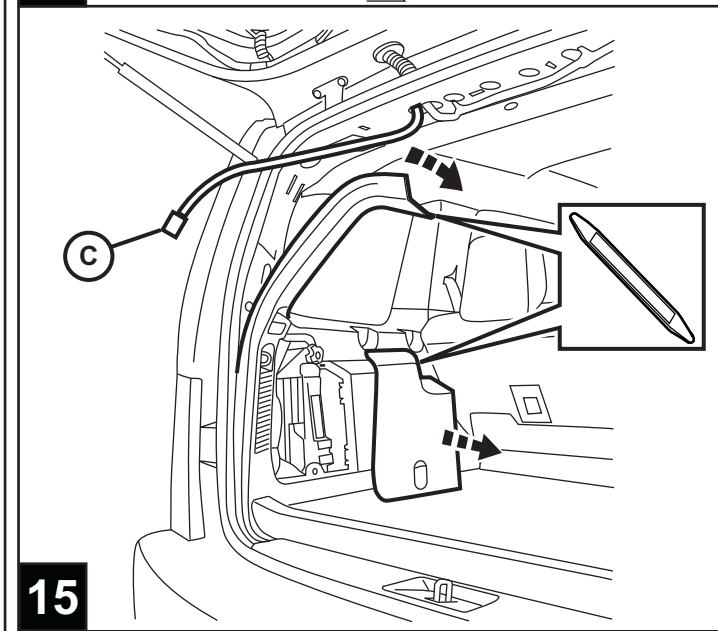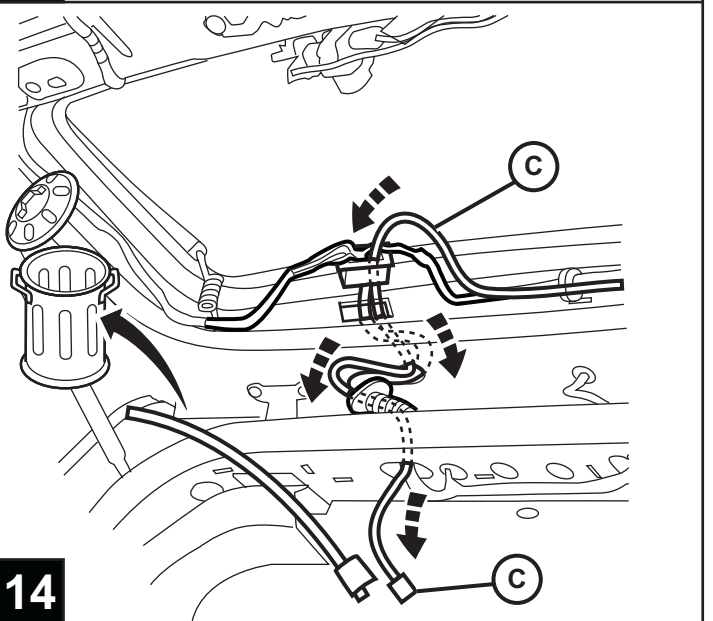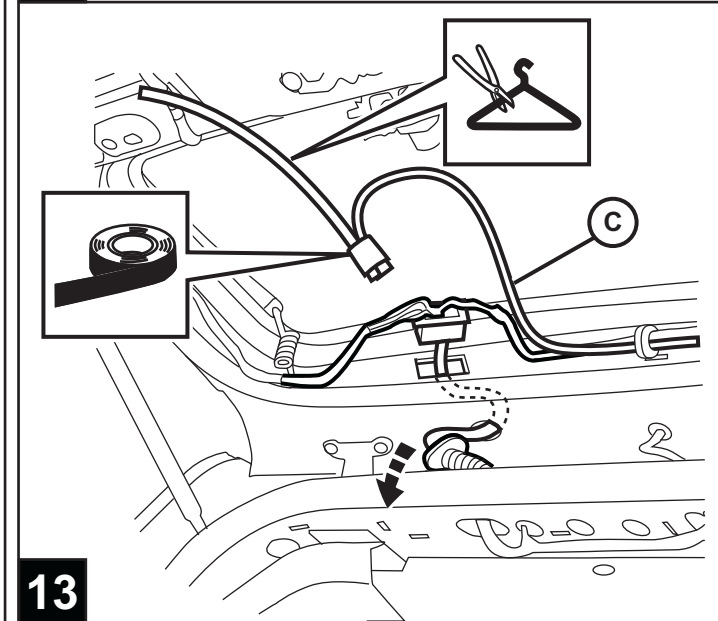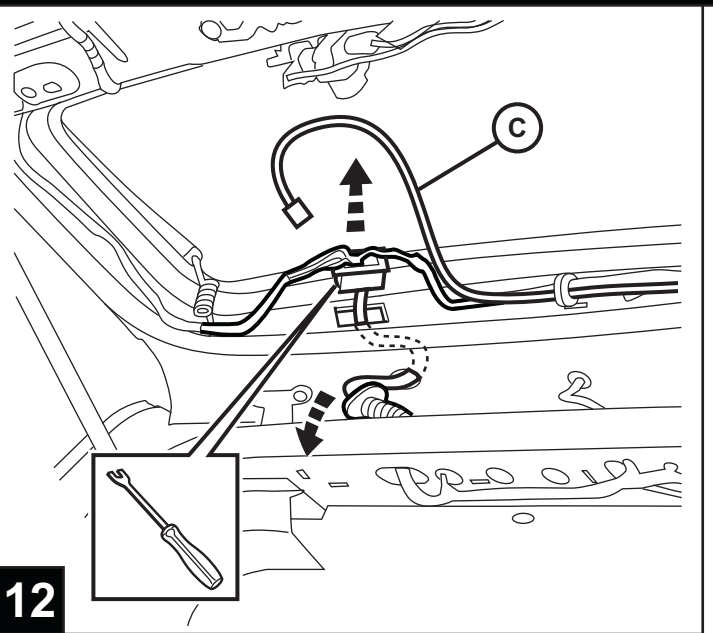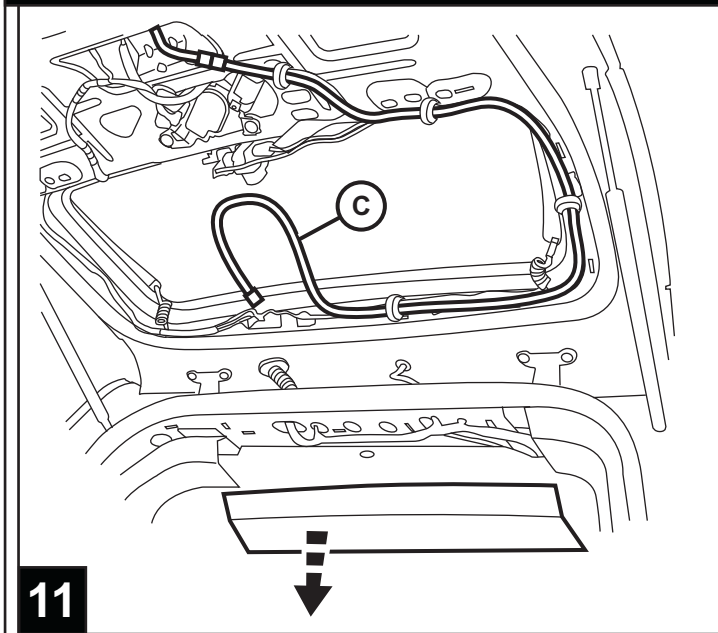


17

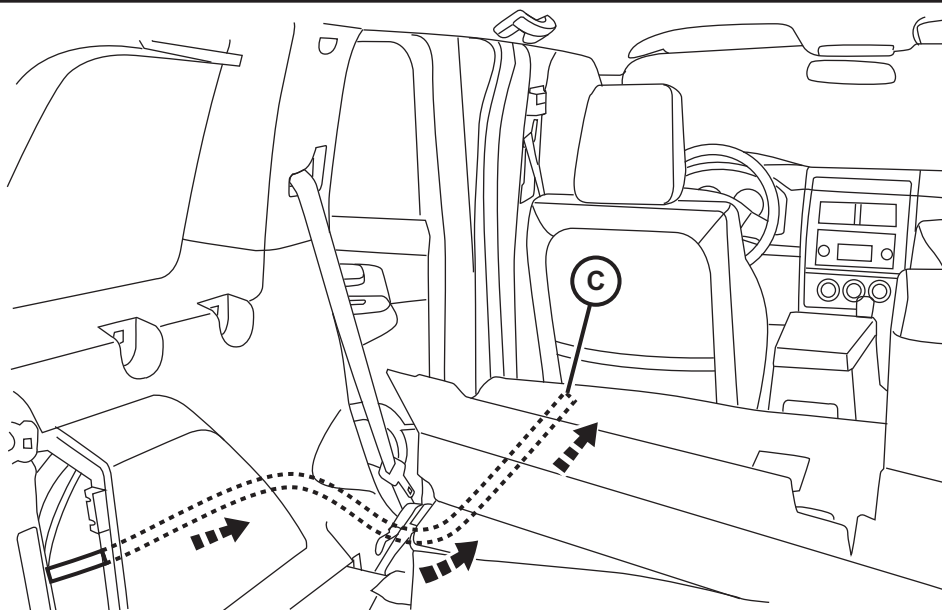


18

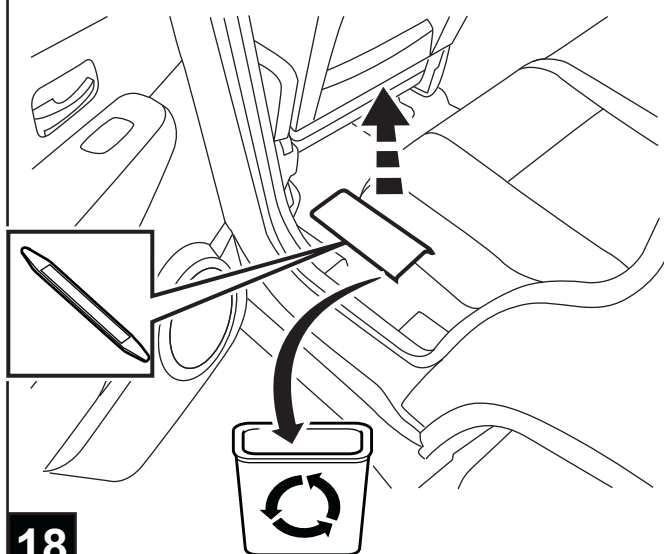


19

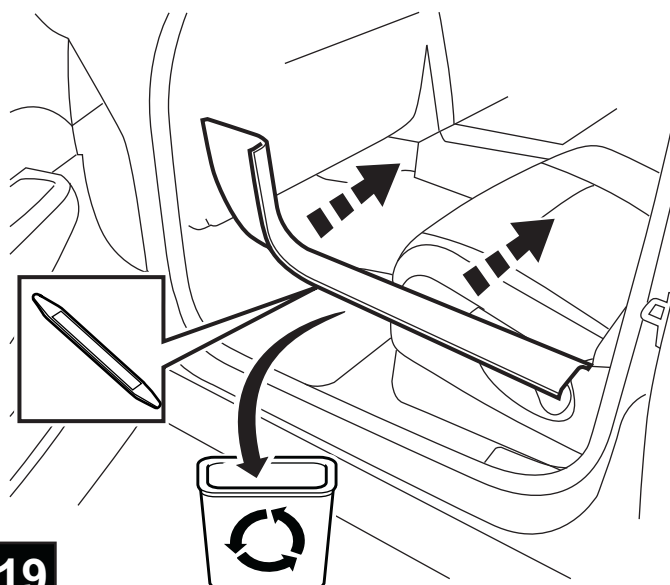


20

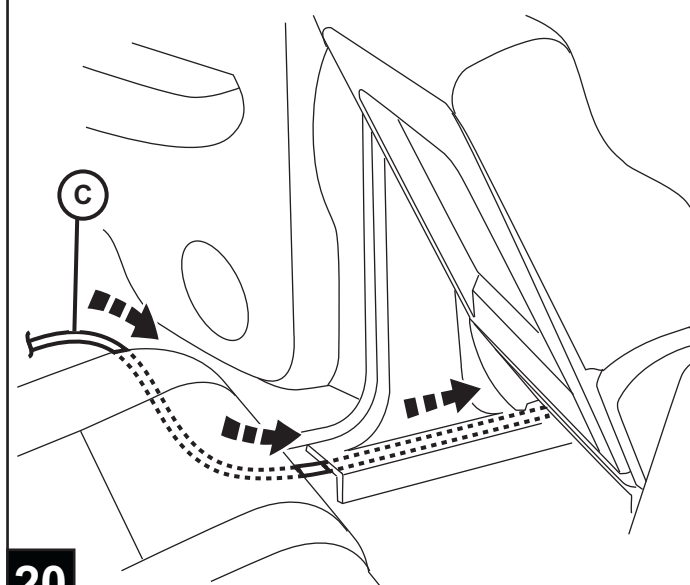


21

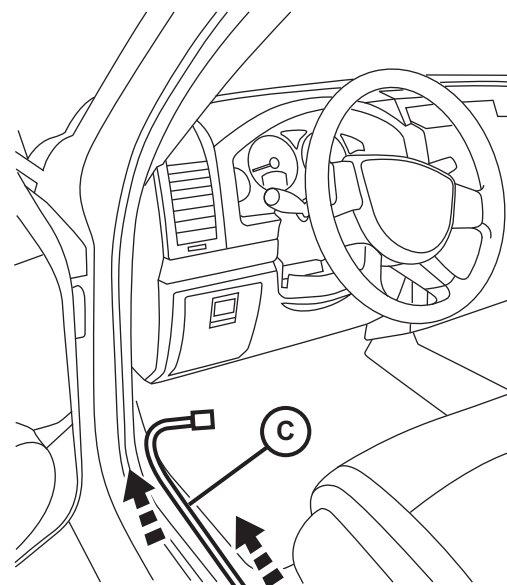


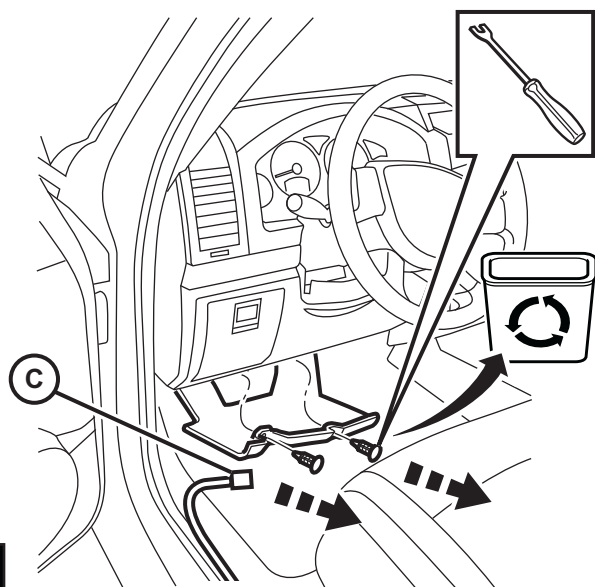


22

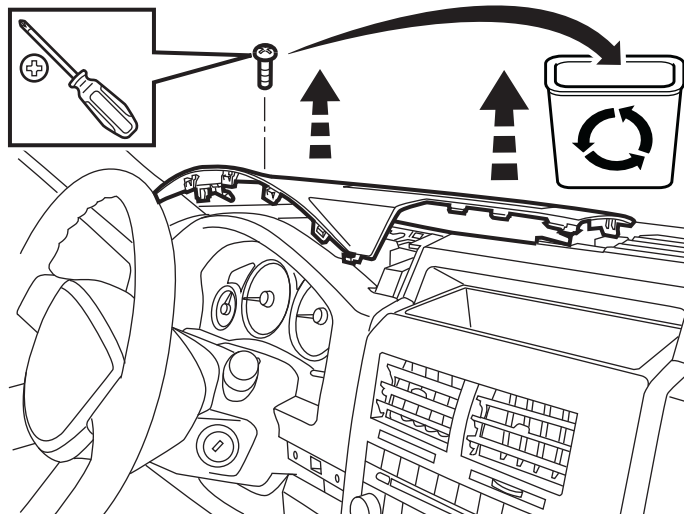


23

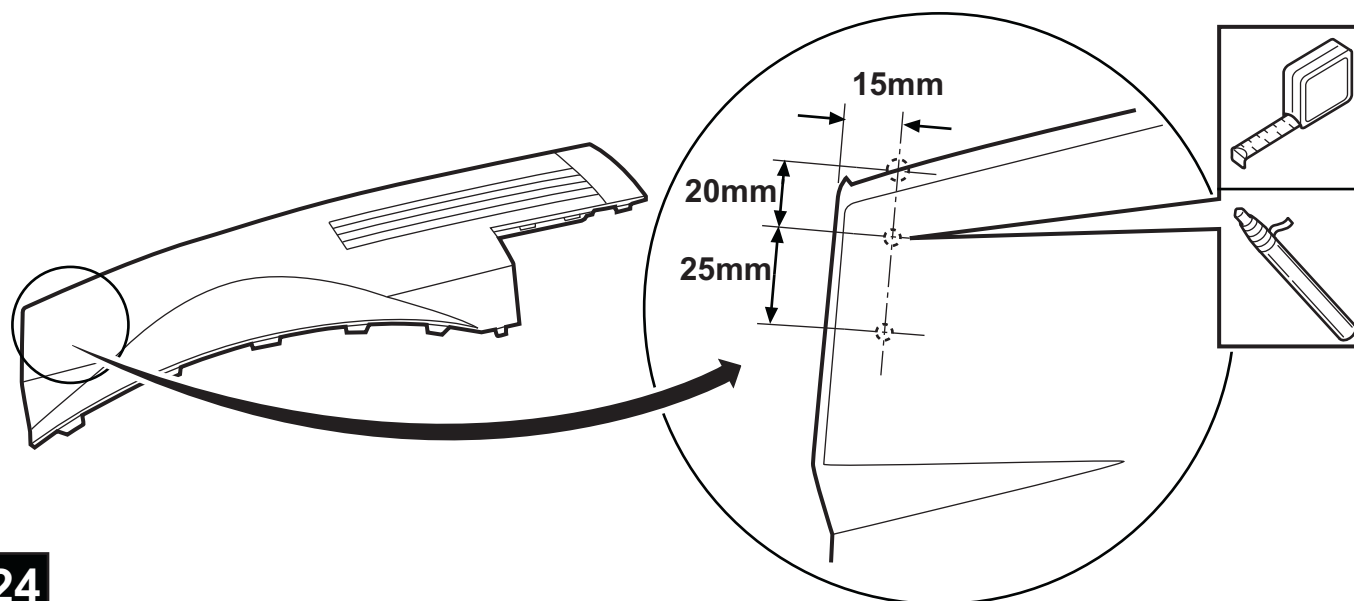


24

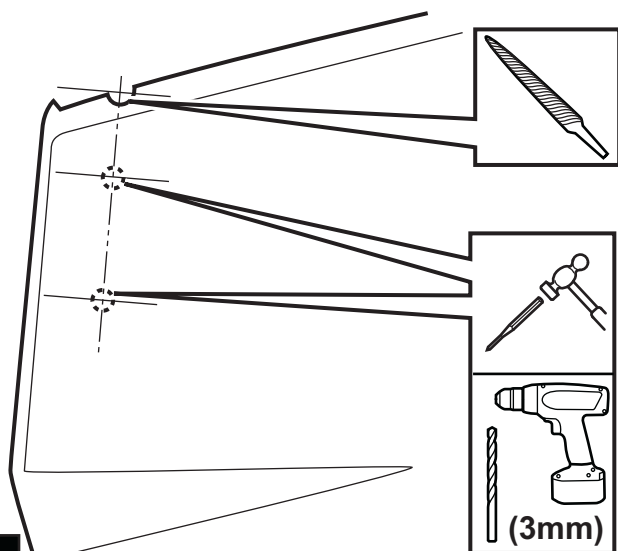


25

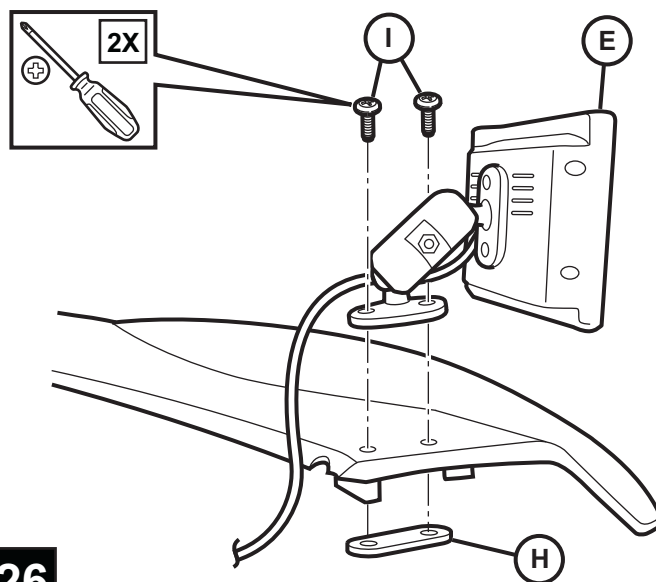


26

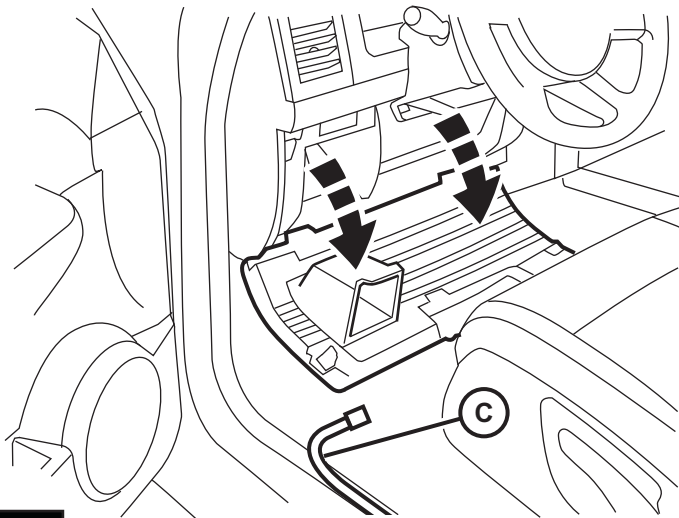


27

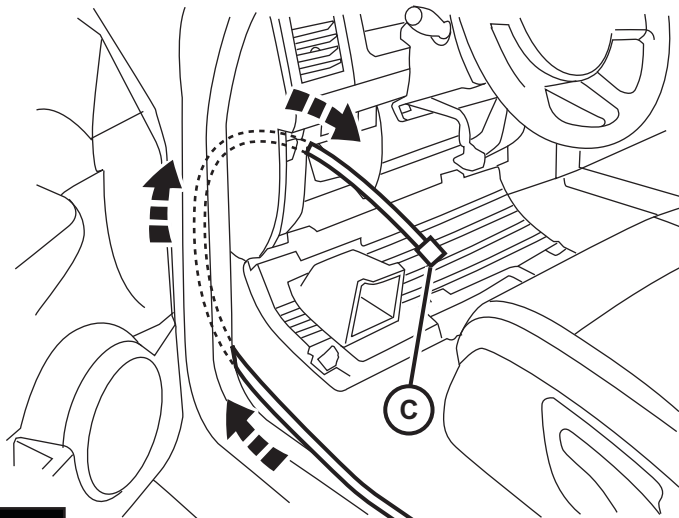


28

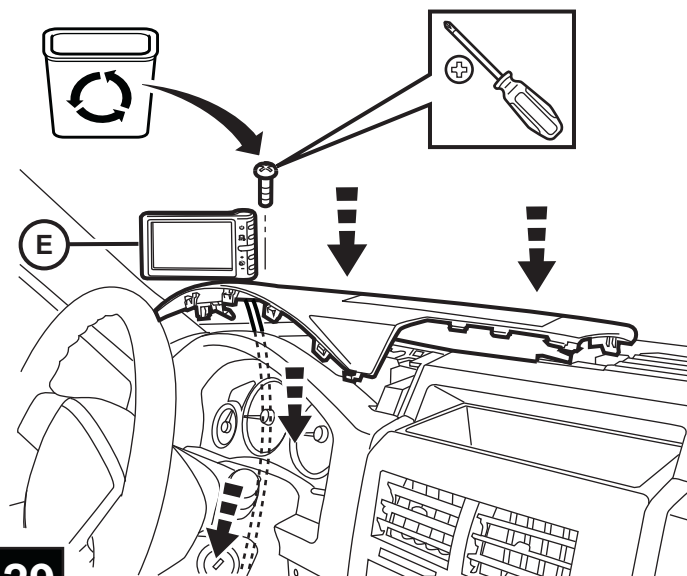


29

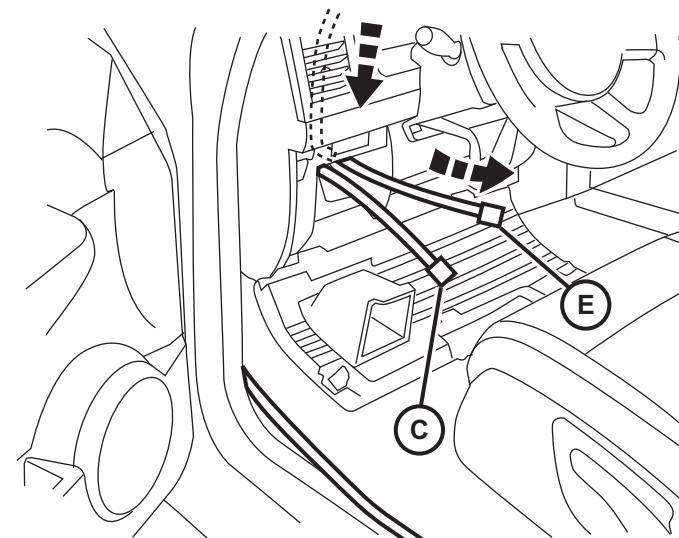


30

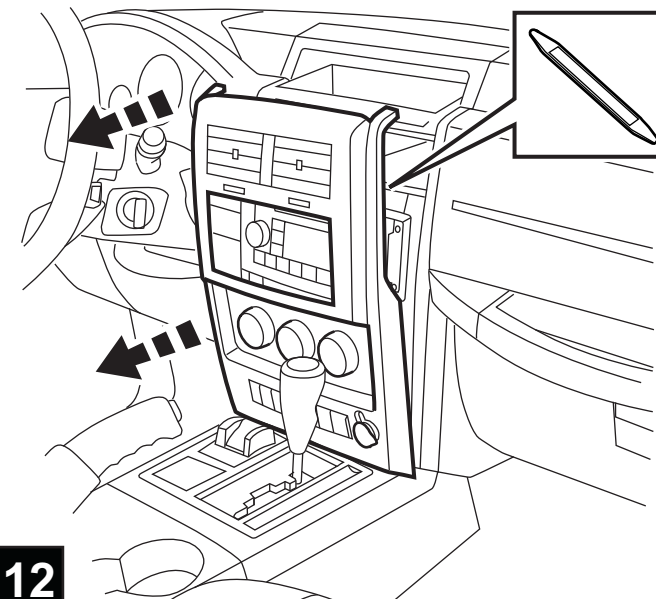


12

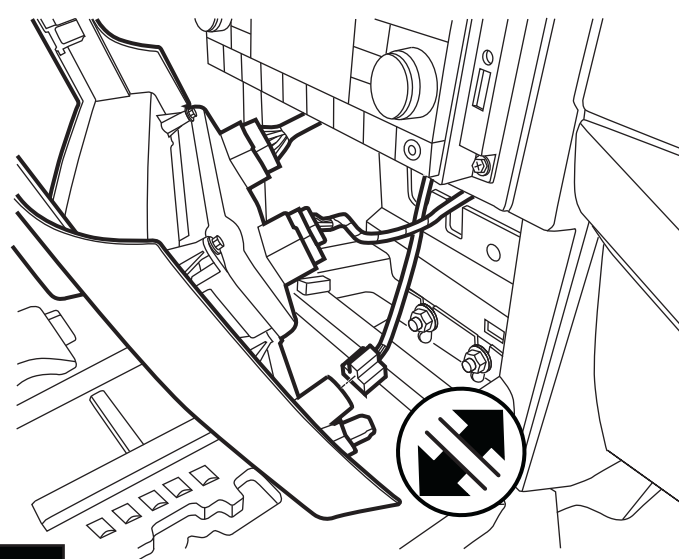


32

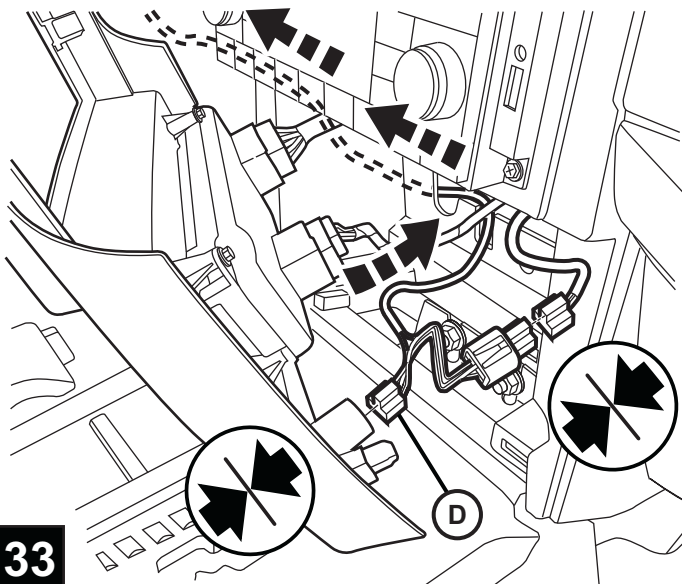




33

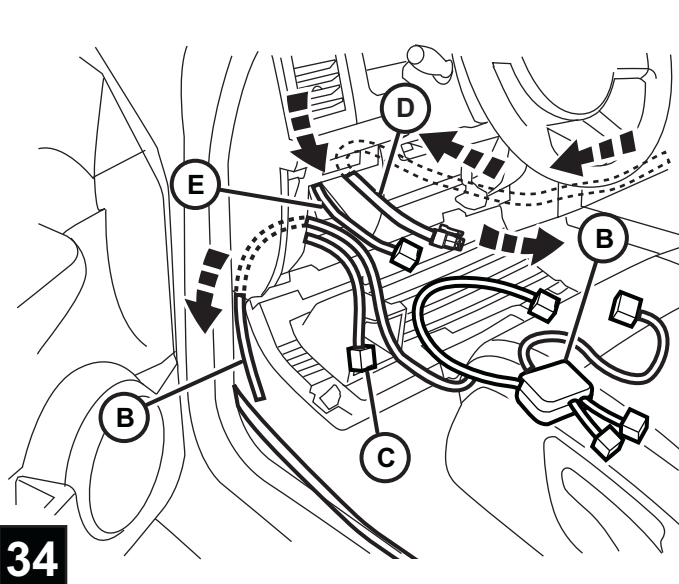


34






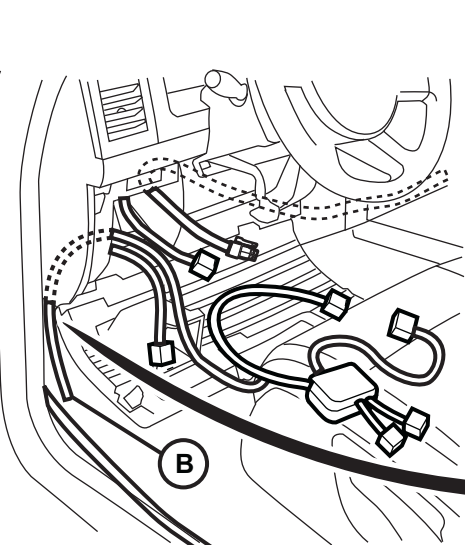




35

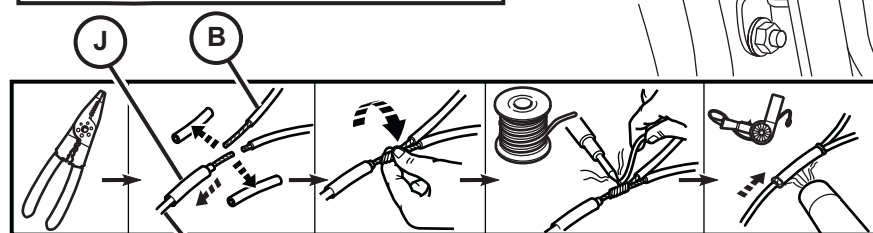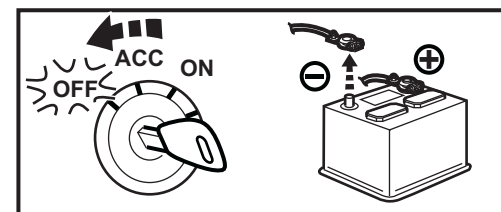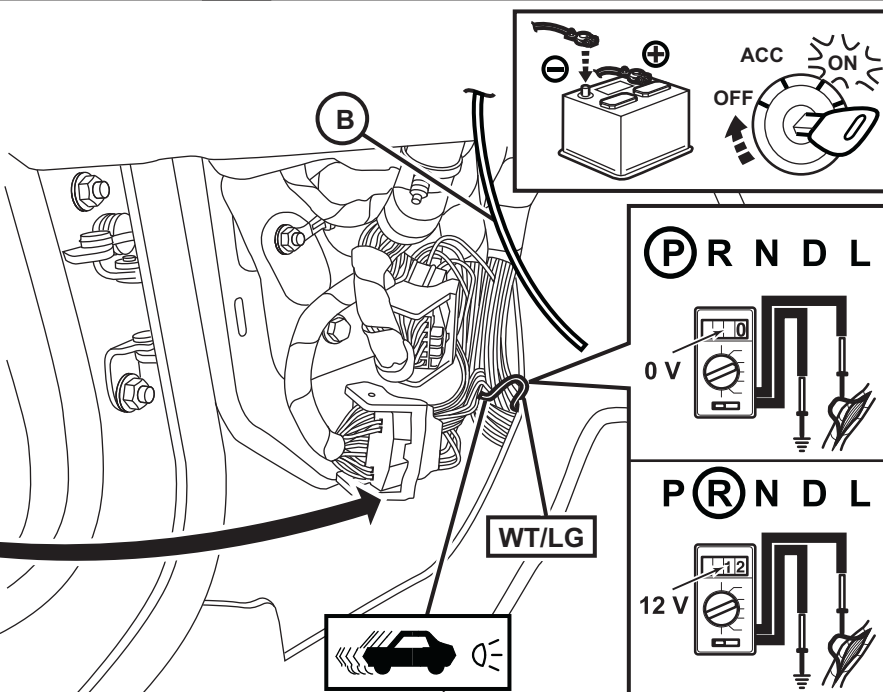



36

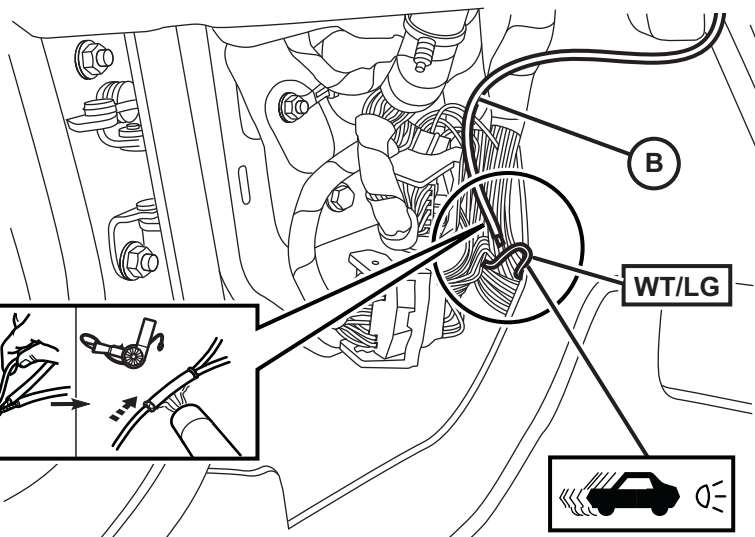

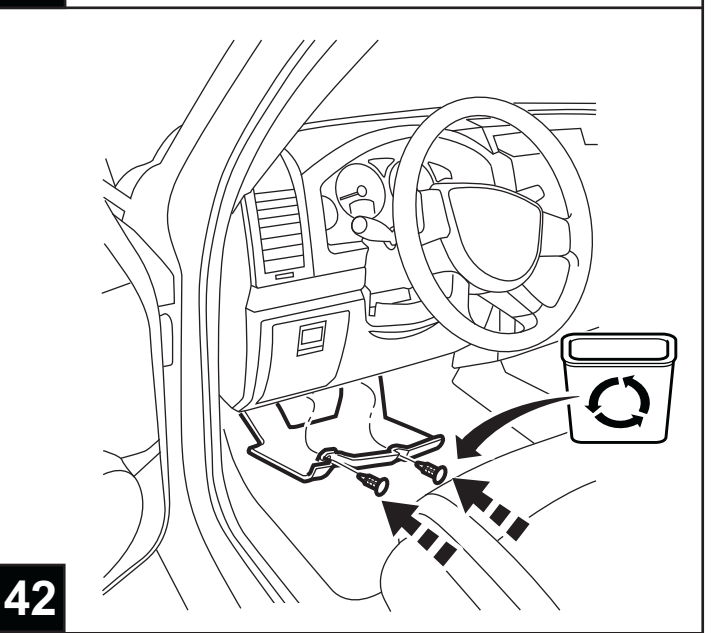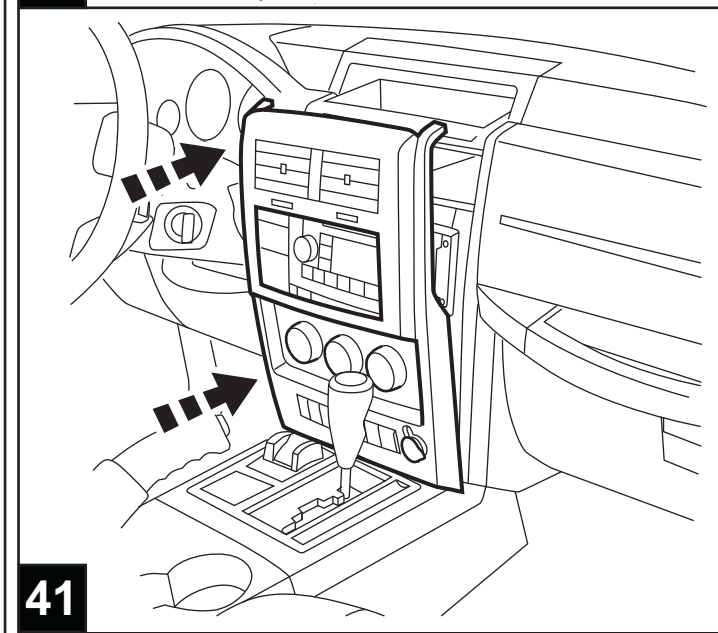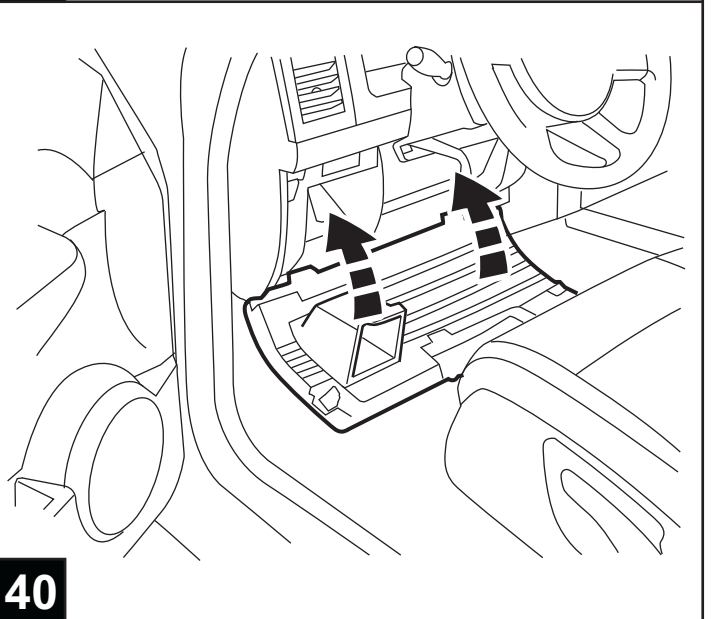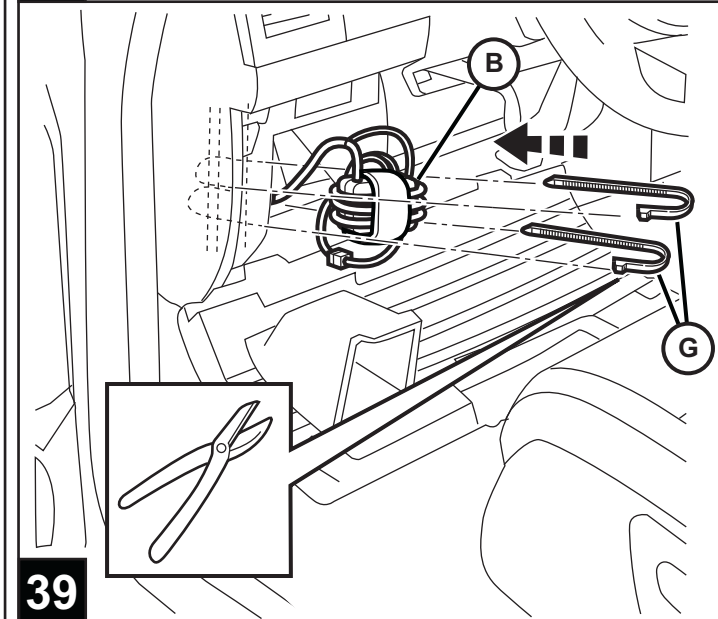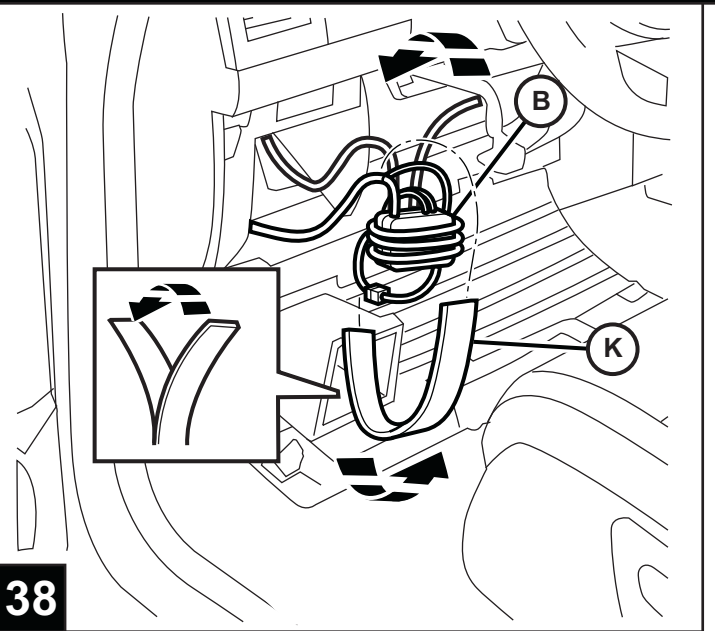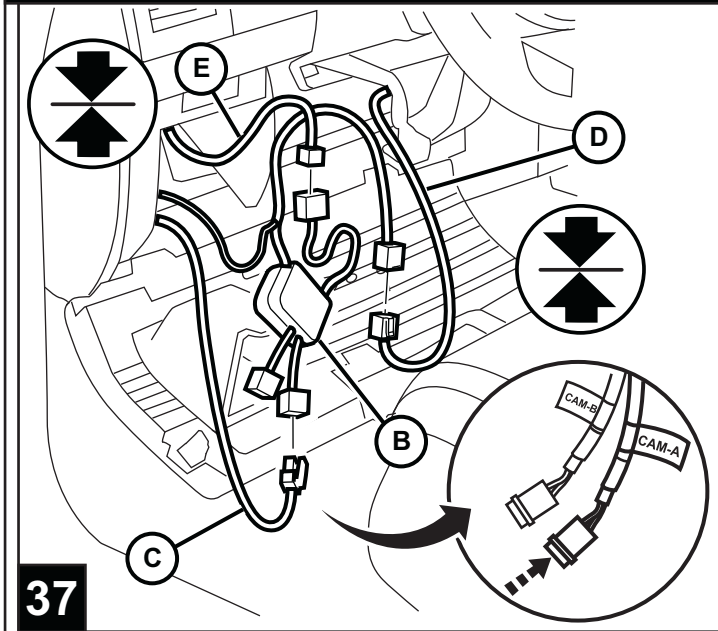


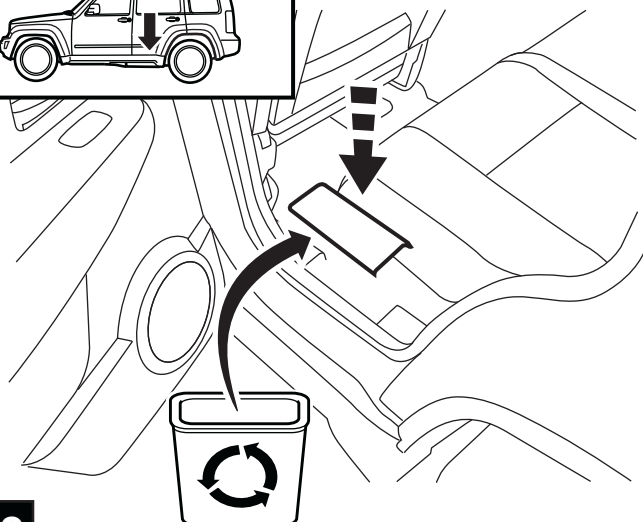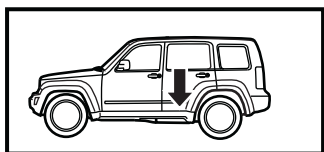


43

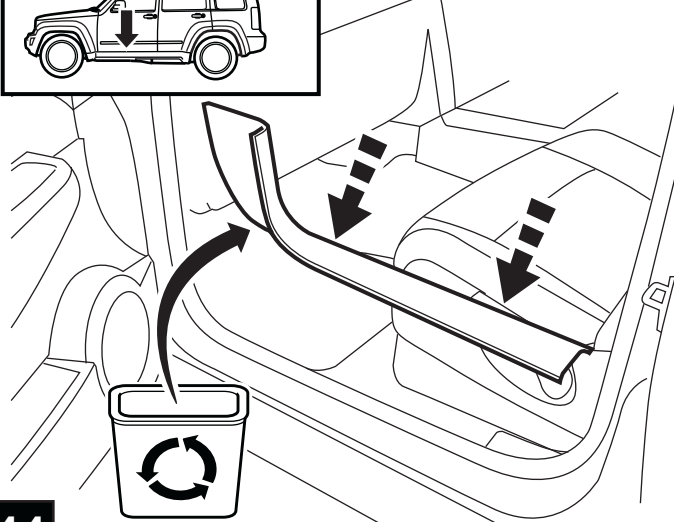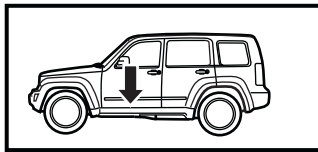


44

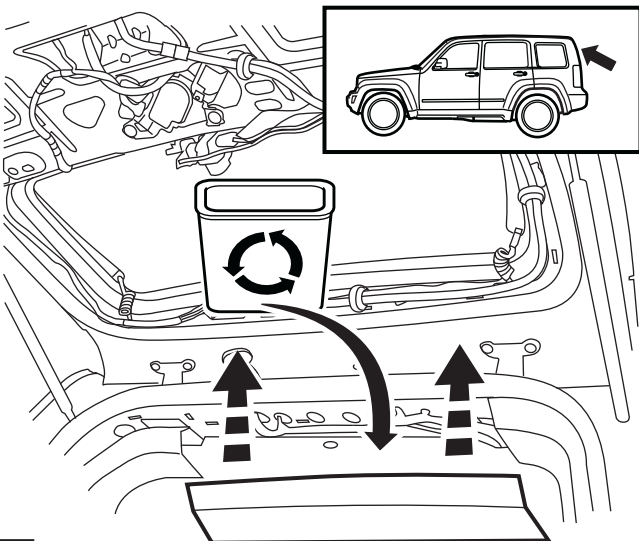

45

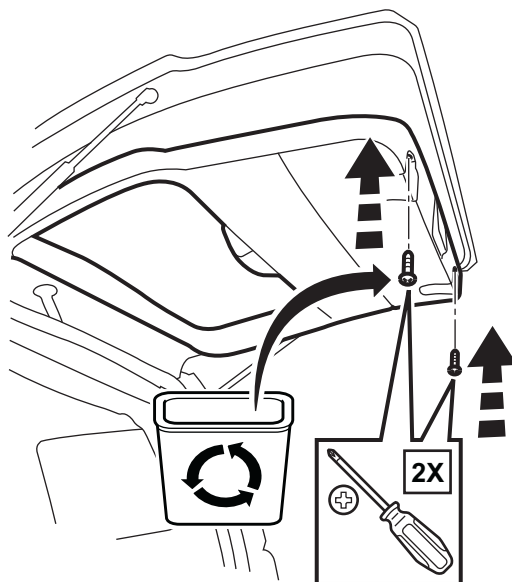

46

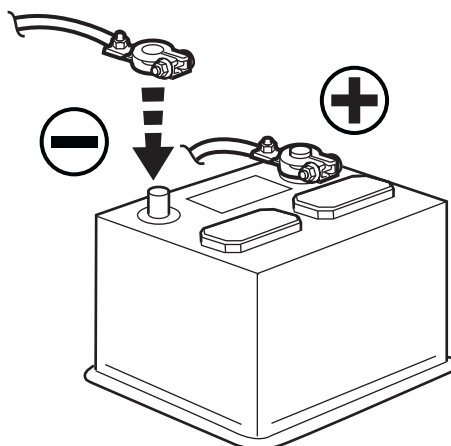


47




DODGE JOURNEY


Rear Backup Camera Kit

 T-20 T-25 T-30			 7mm 10mm 13/16"				
					 1/2" (12mm)	 1/8" (3mm) 3/8" (9mm)	

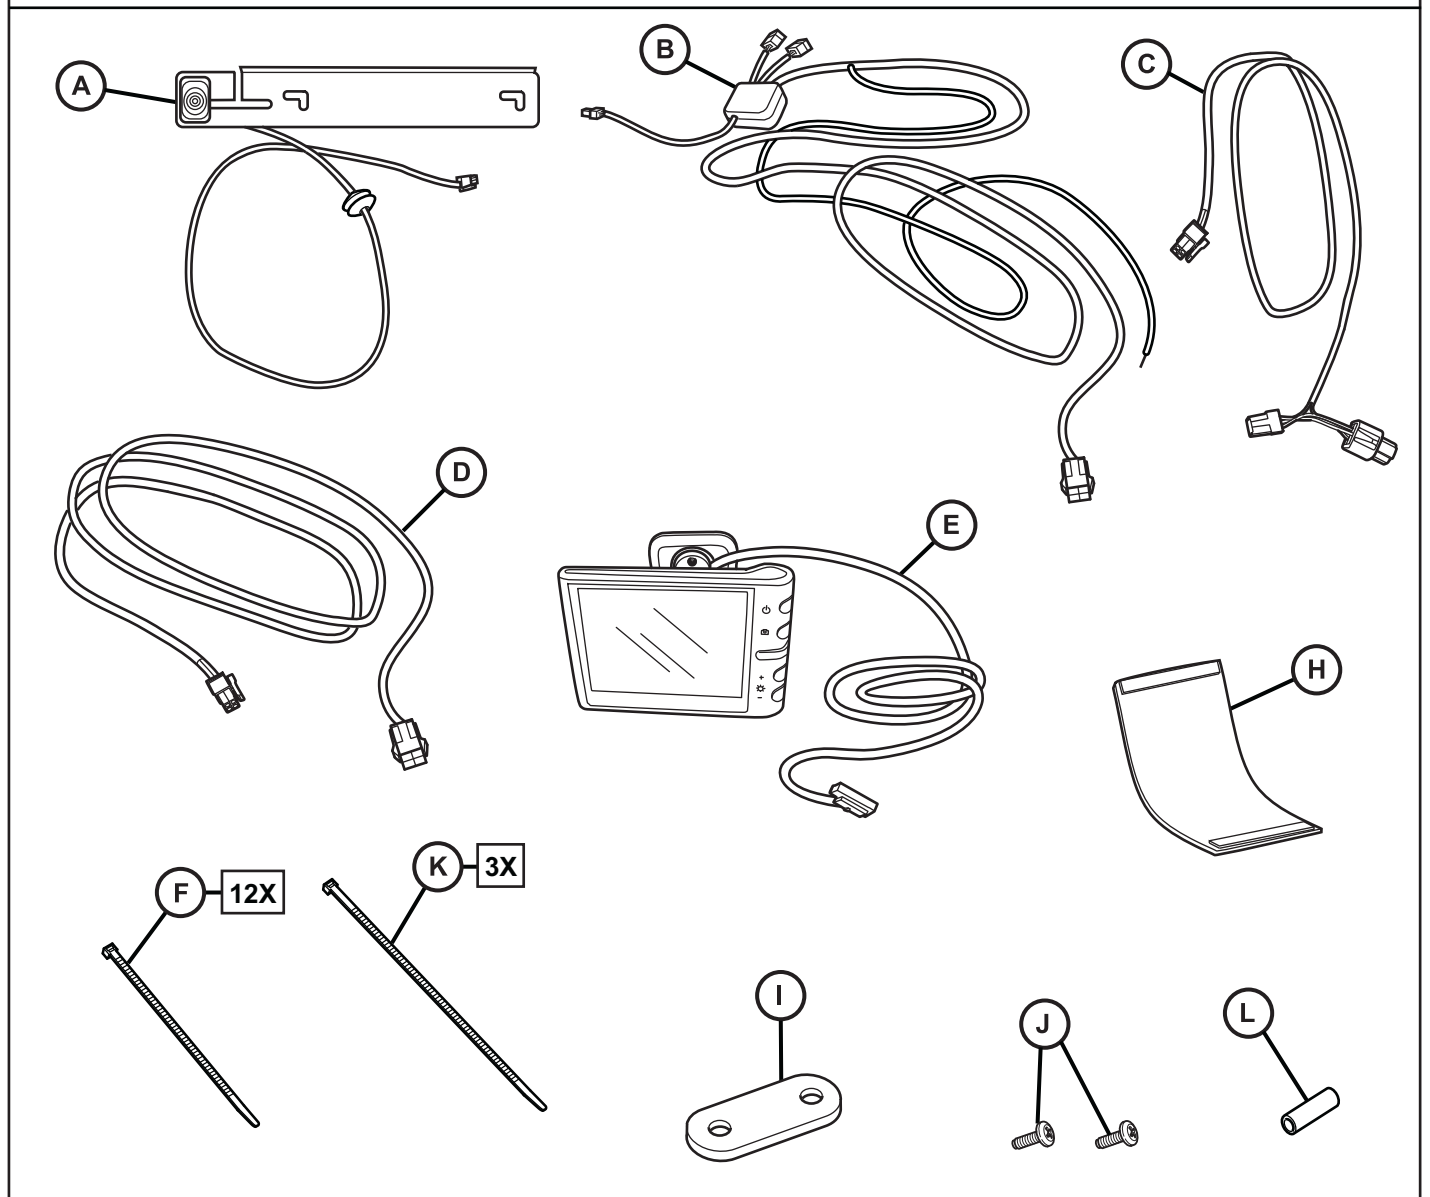


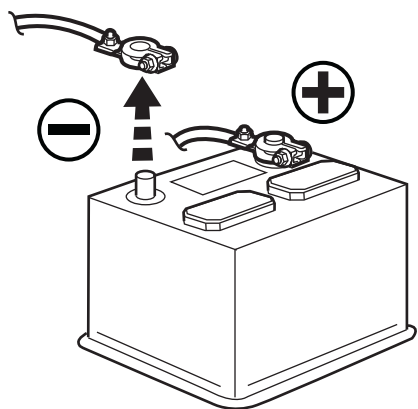


1

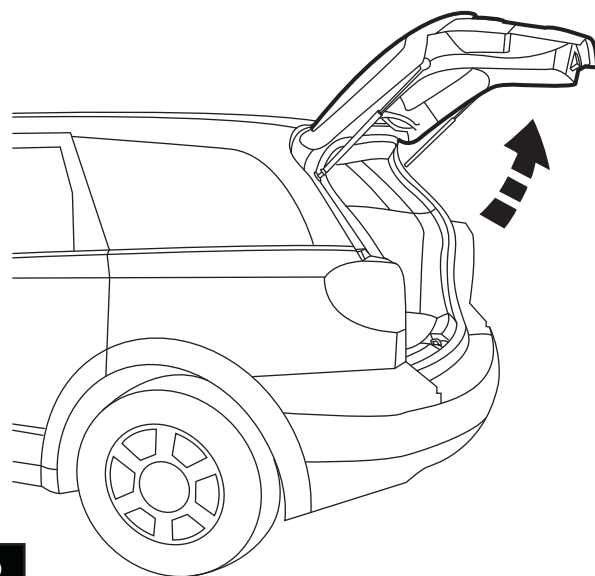


2

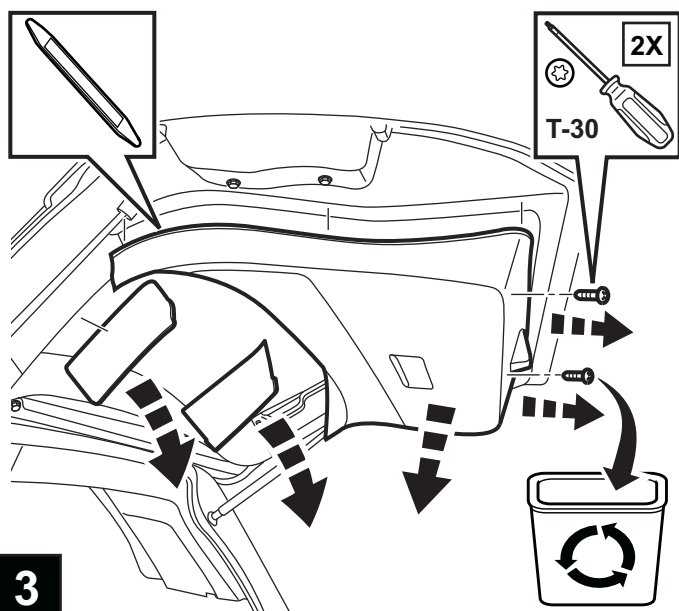


3

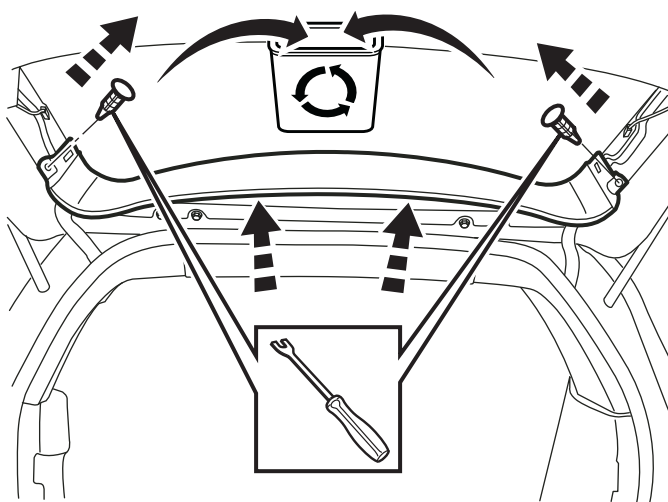






4

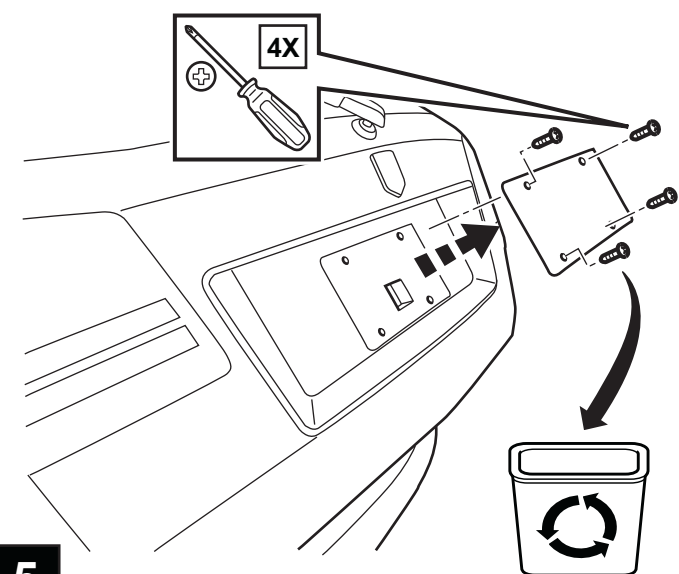


5

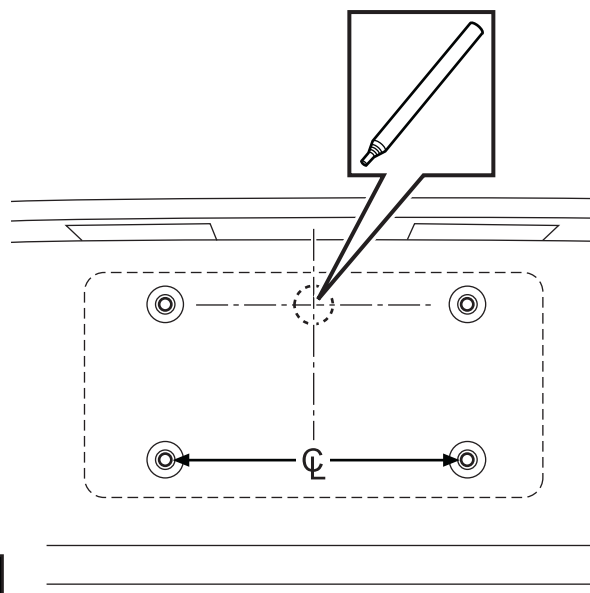


6

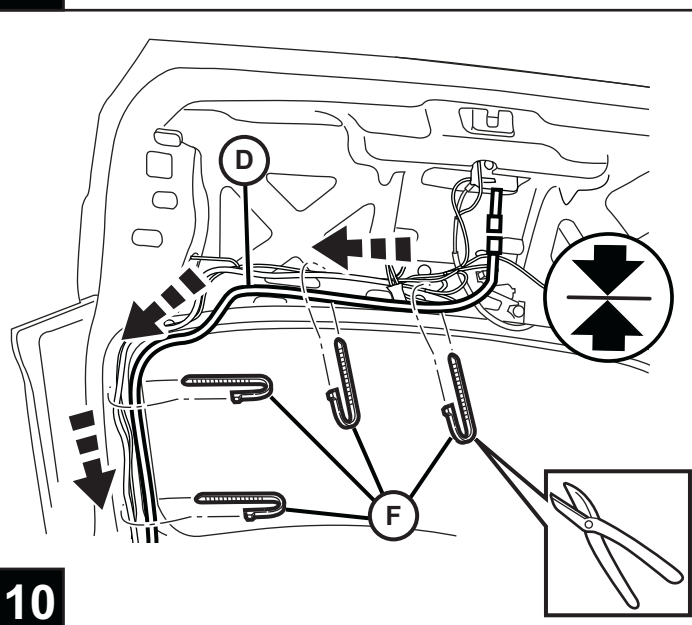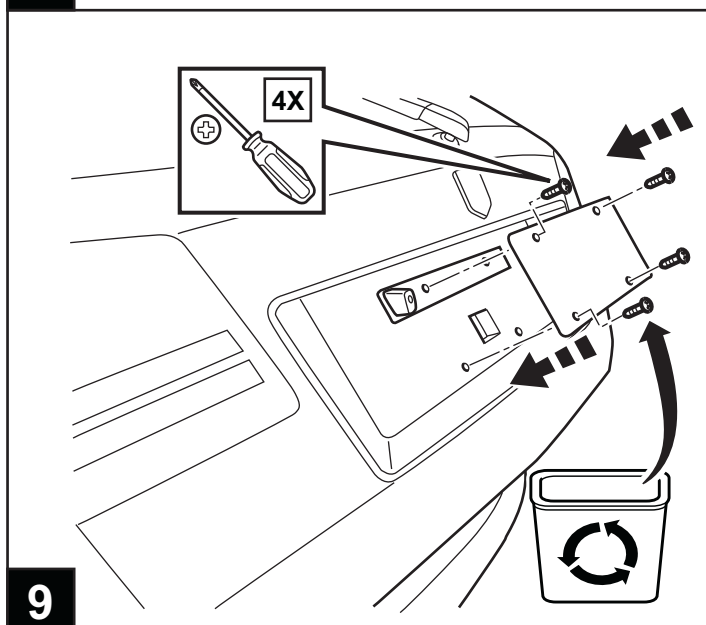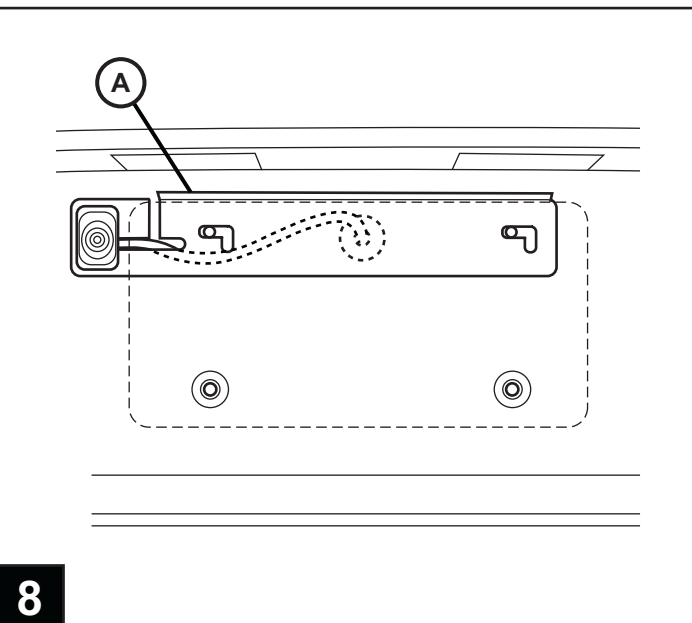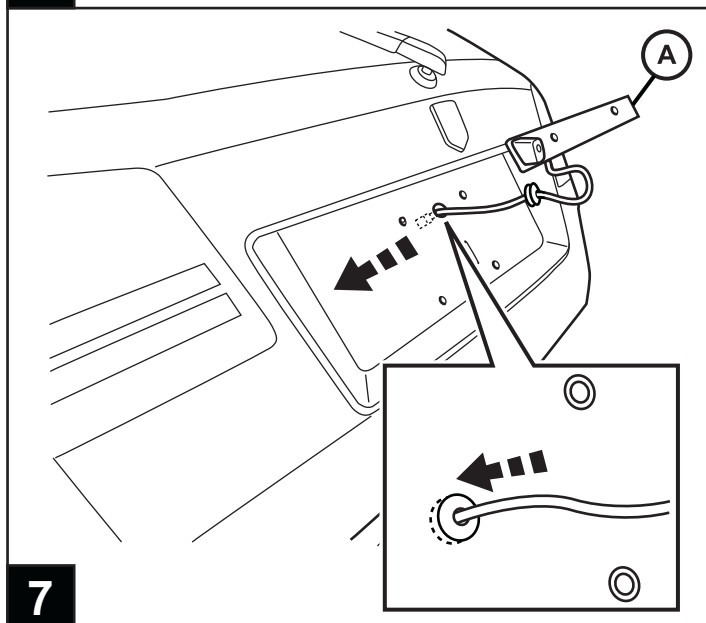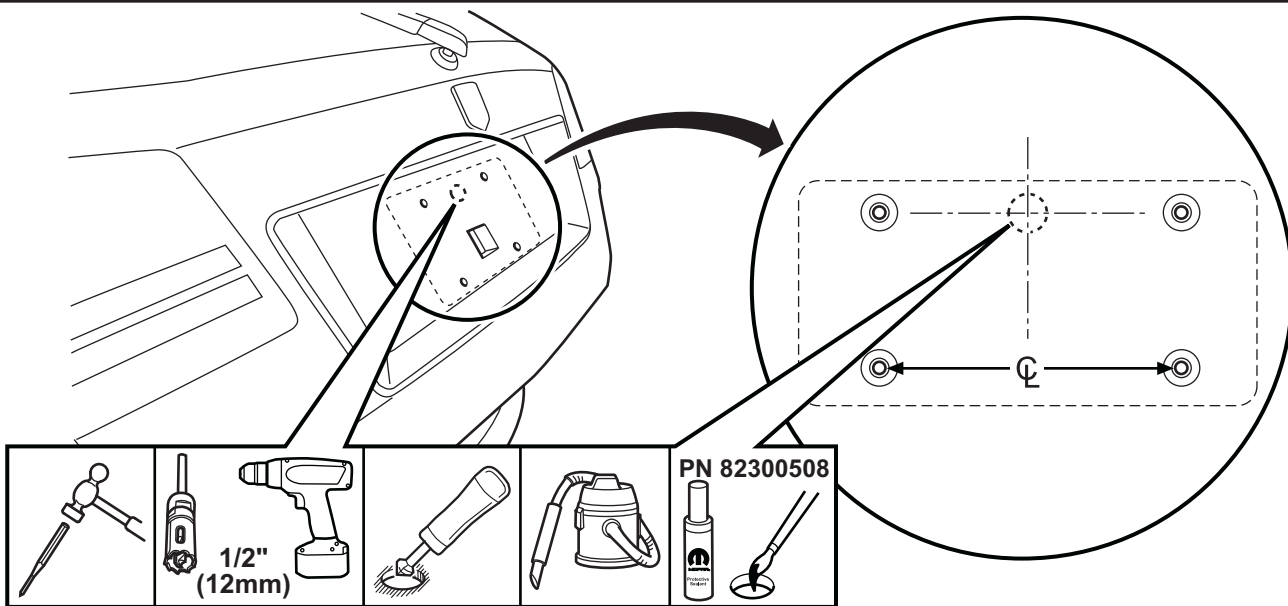


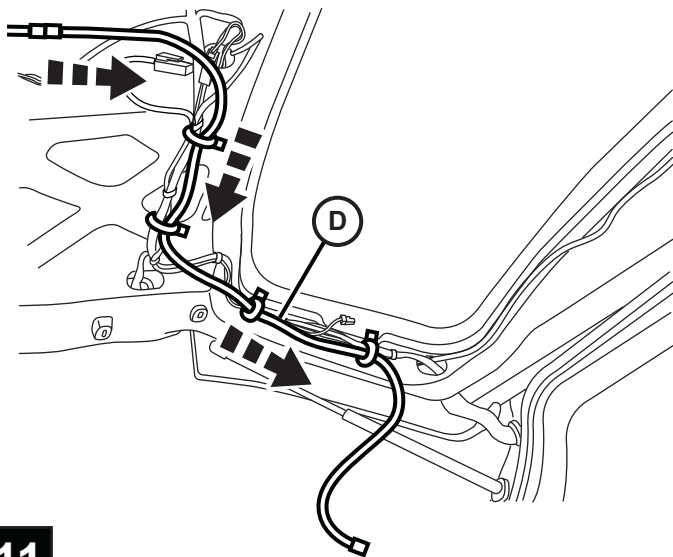


11

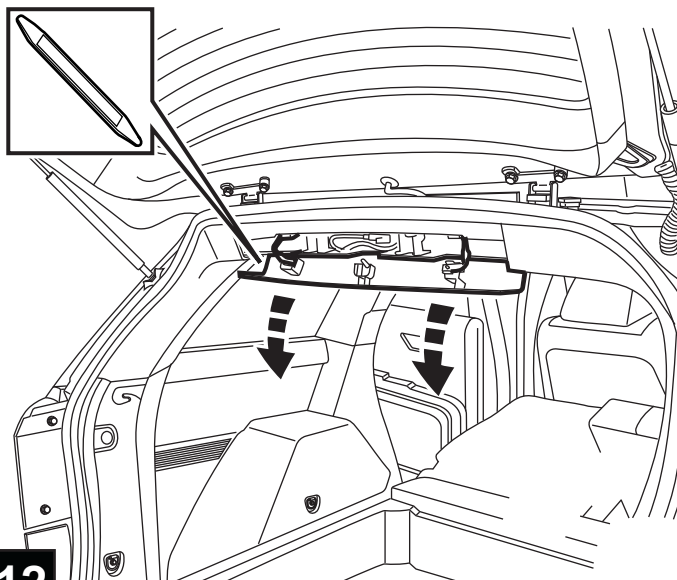


12

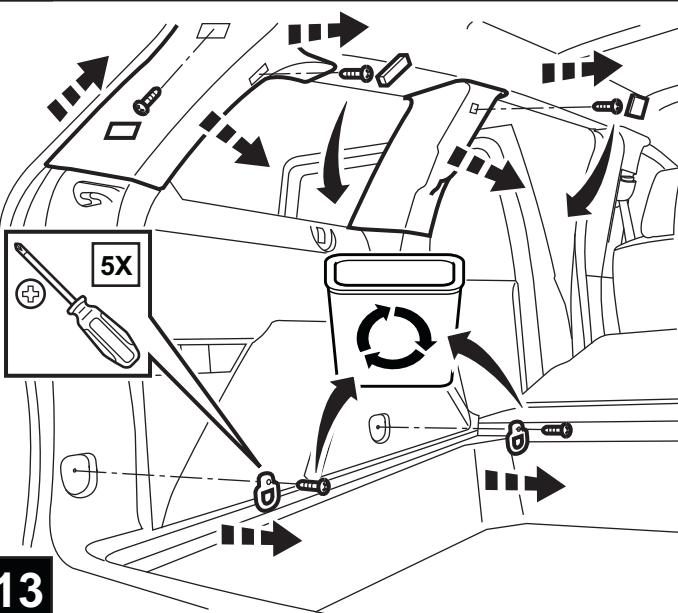


13

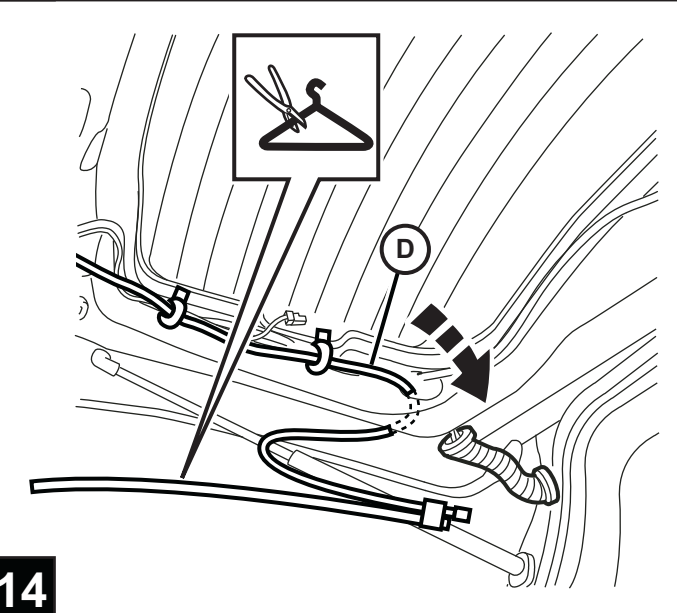


14

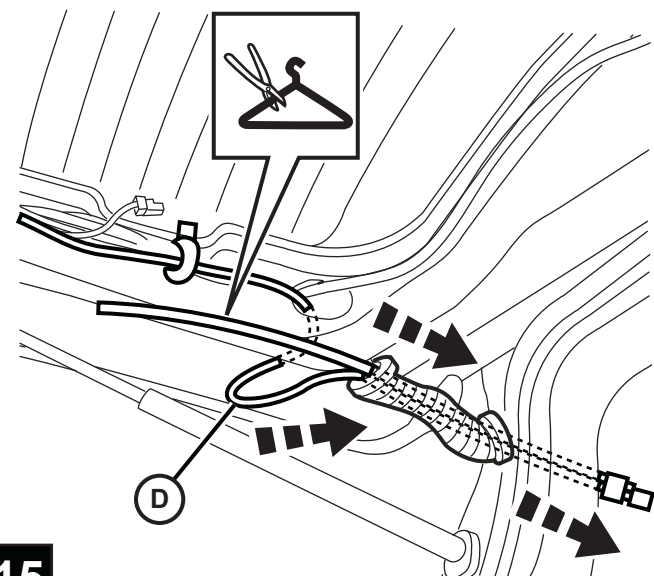


15

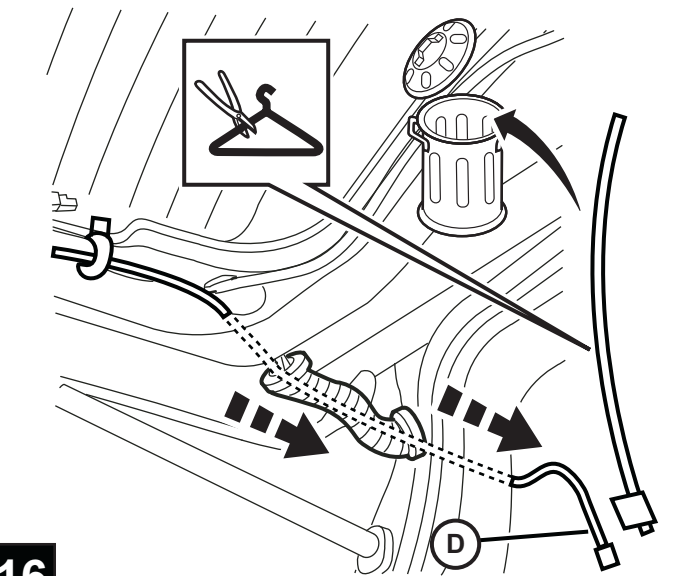


16

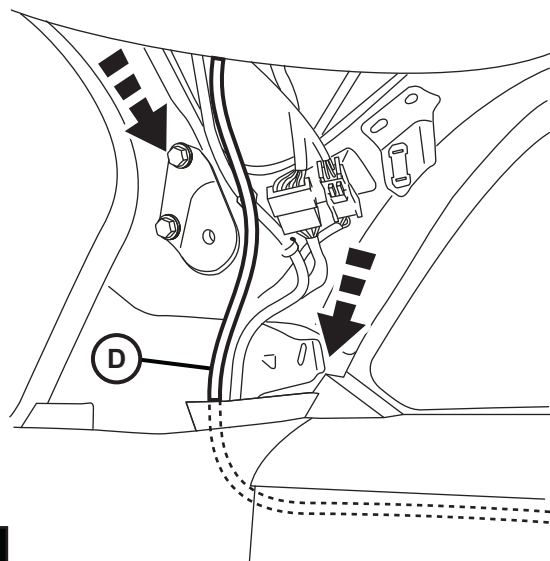


17

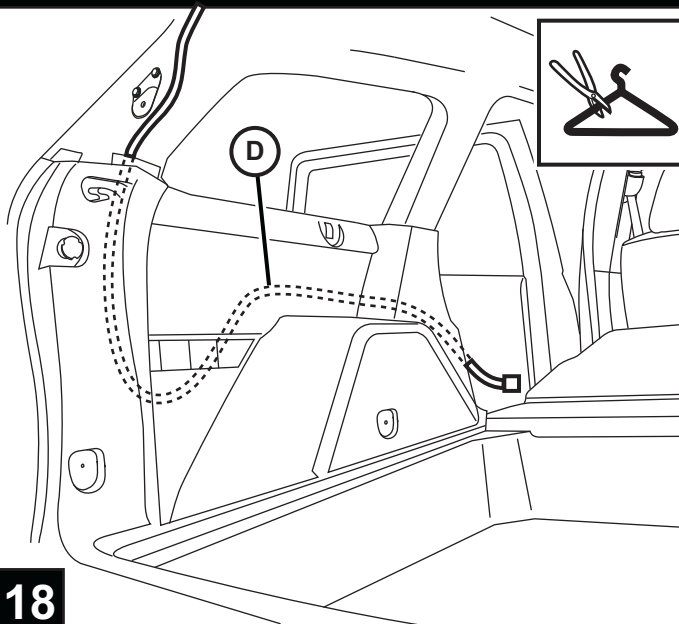


18

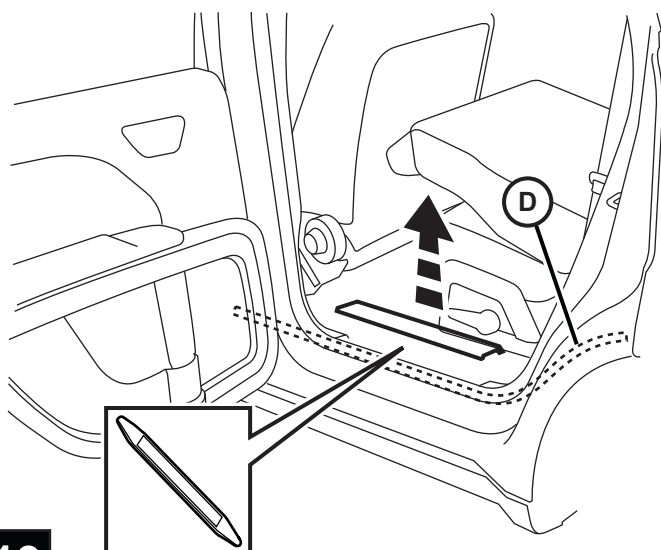







19





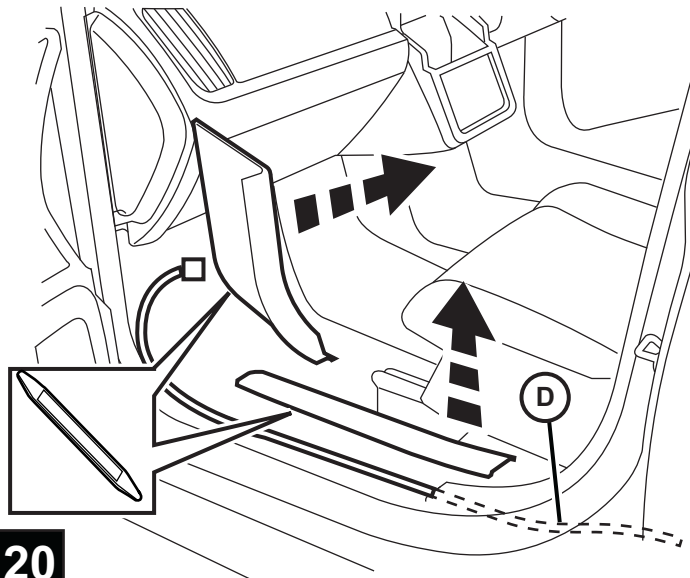



20

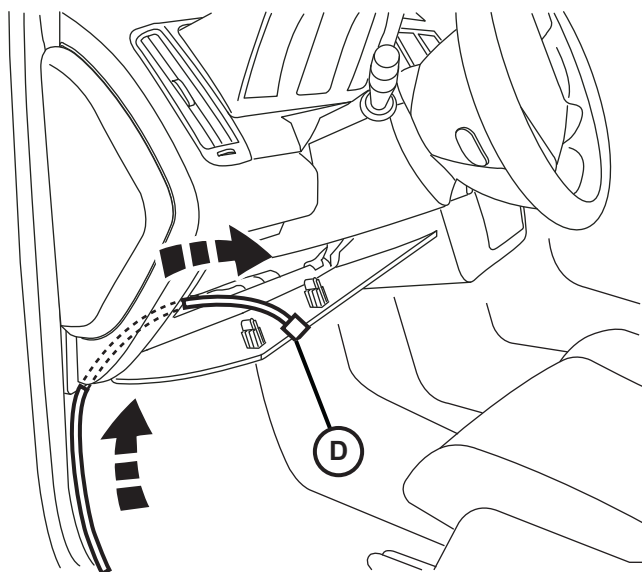


21

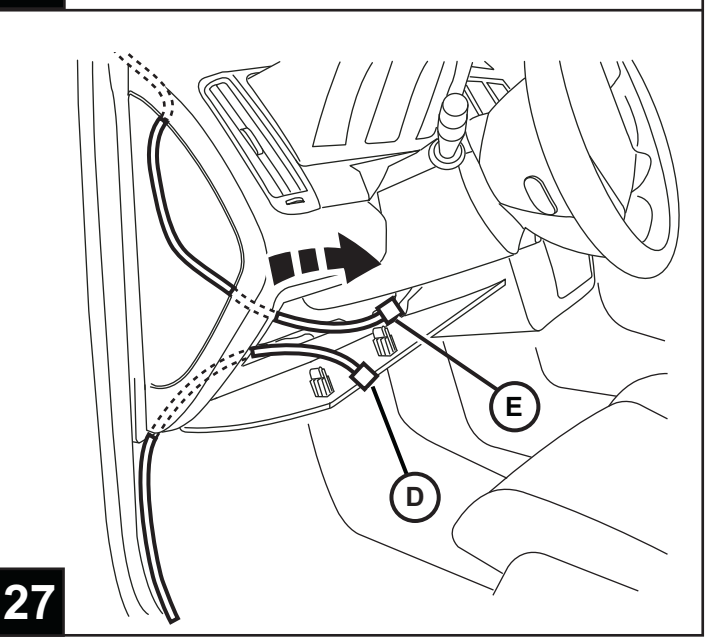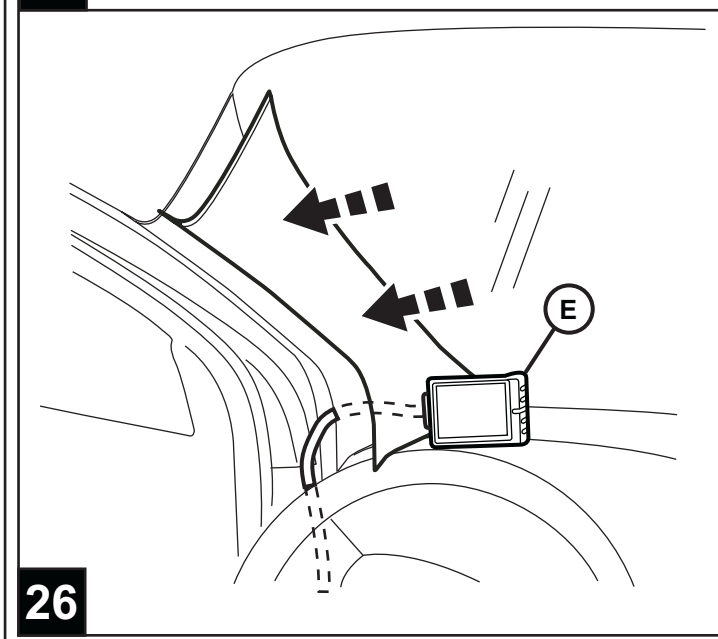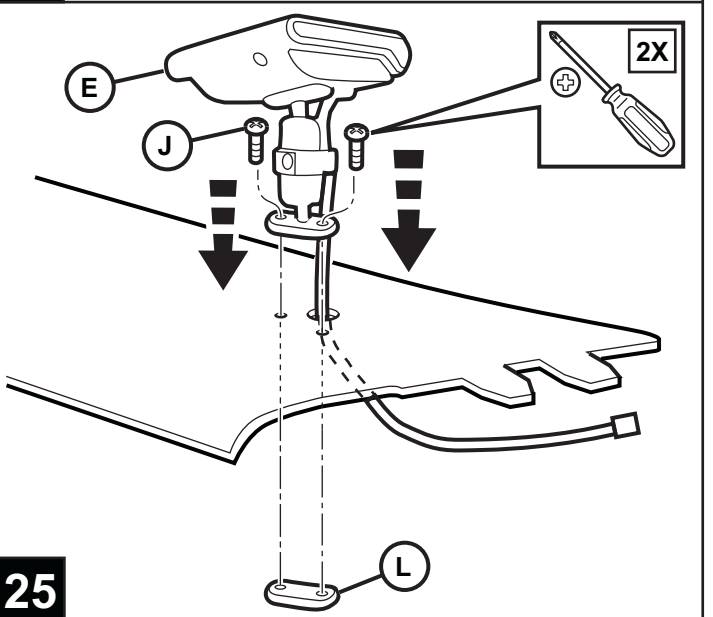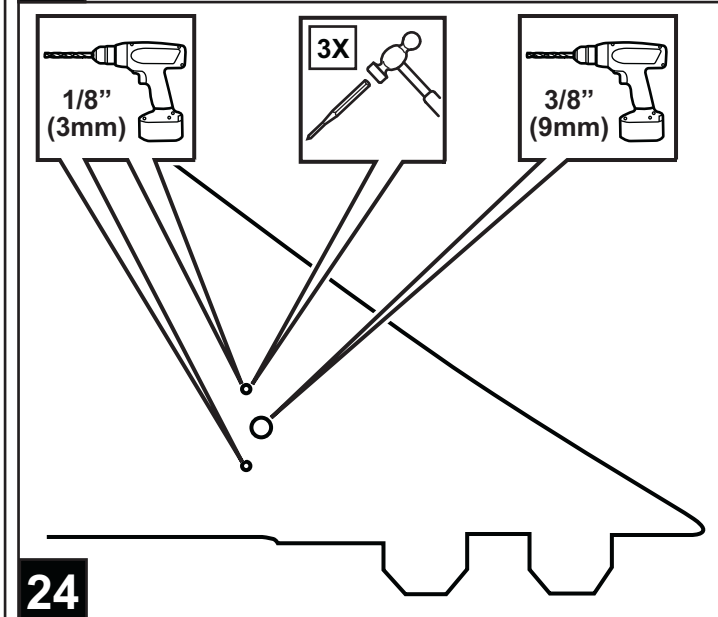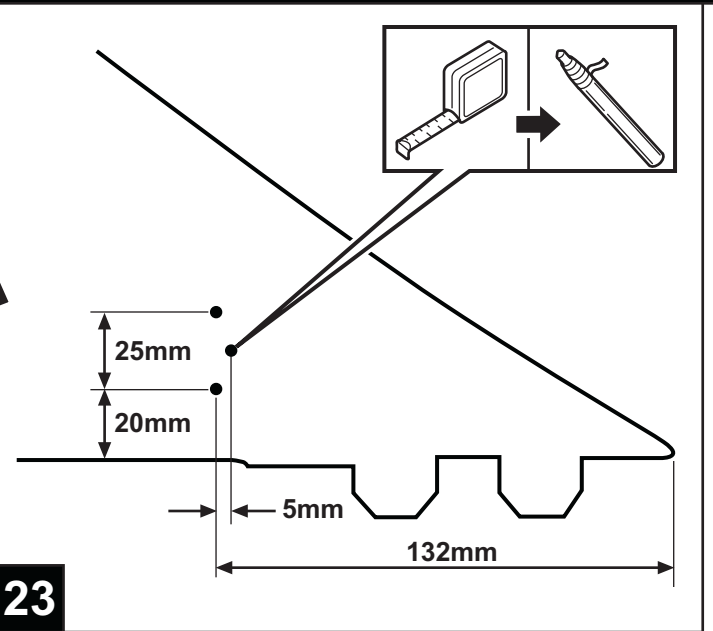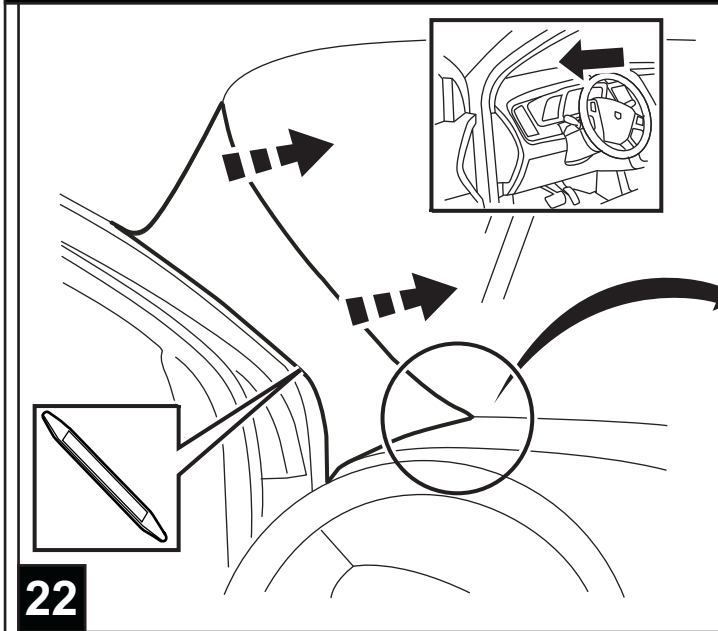

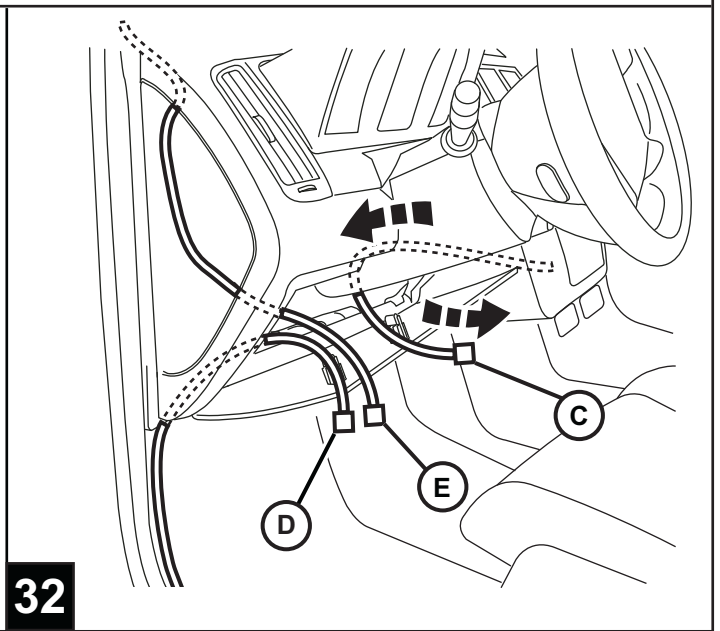
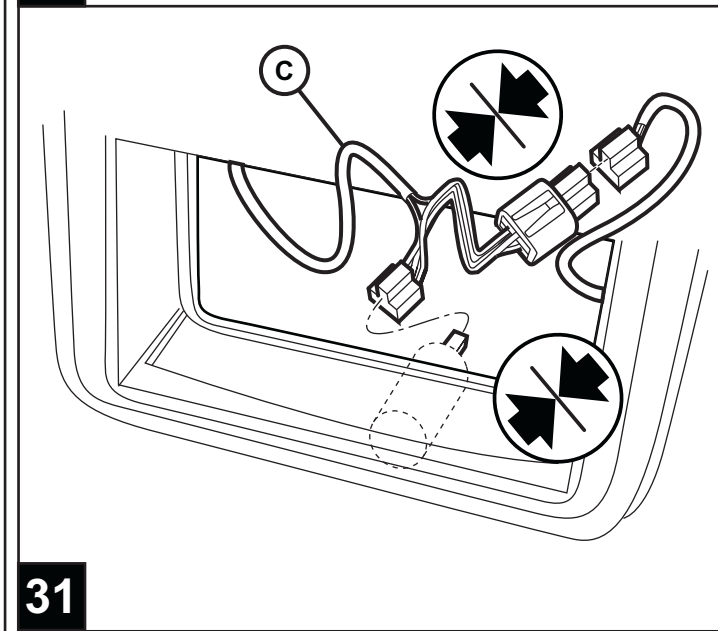
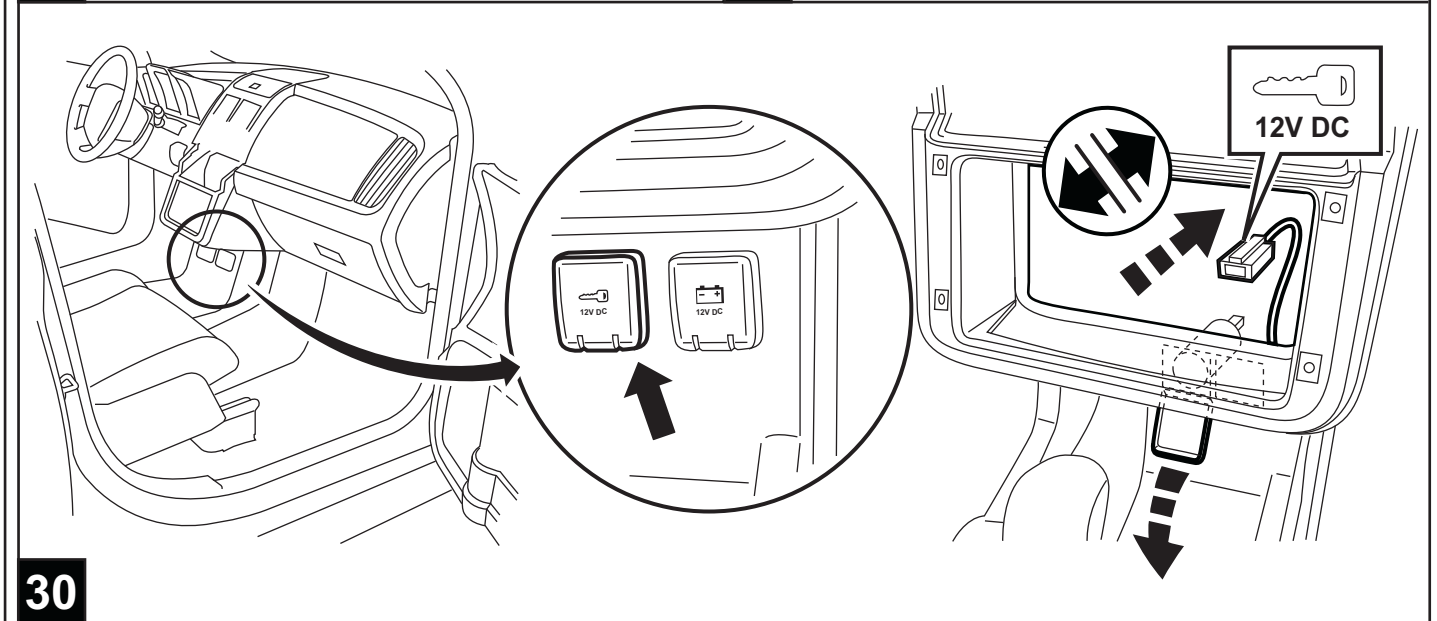
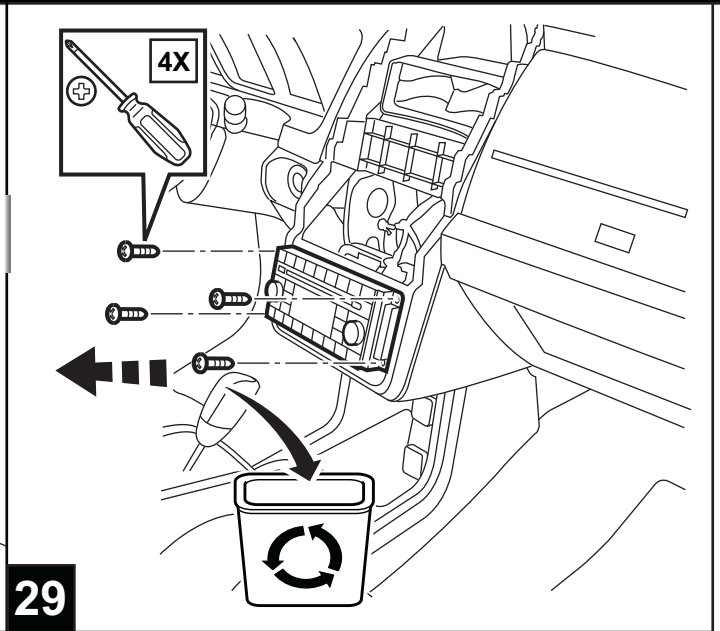
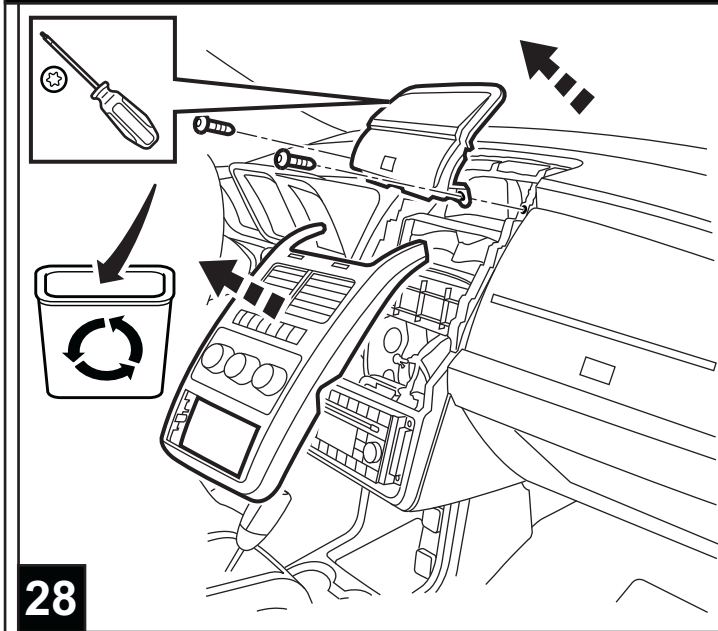


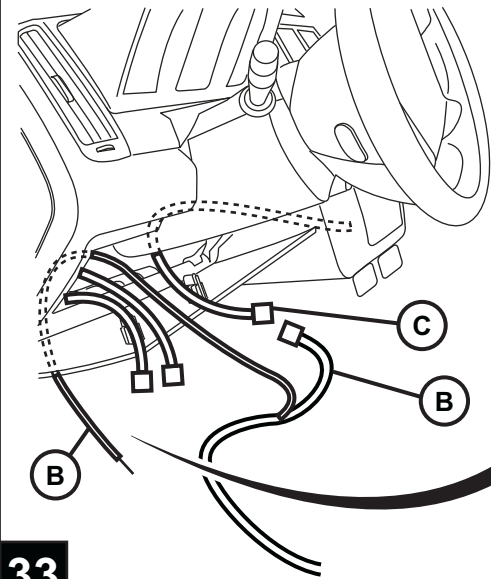


33

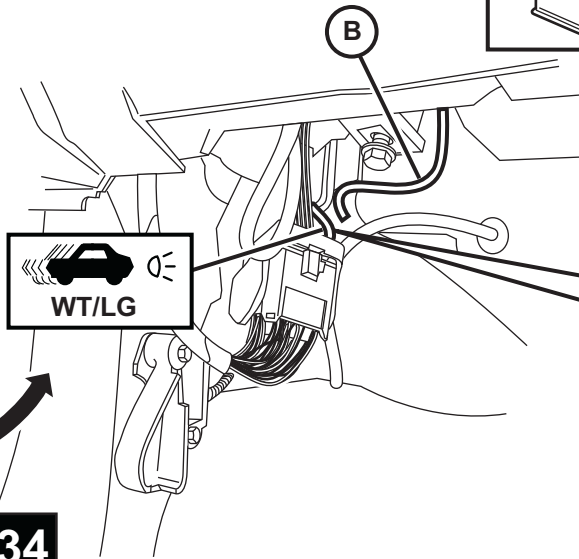


34

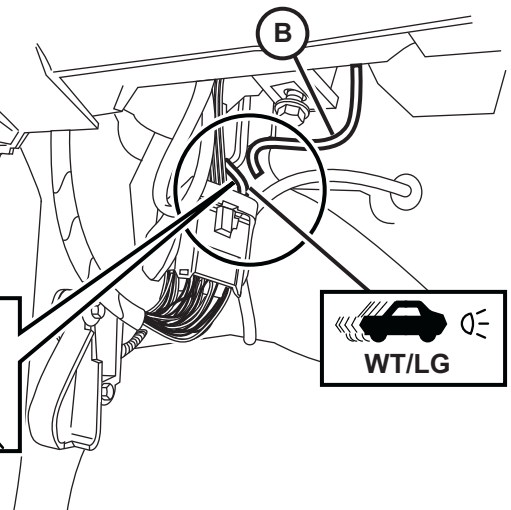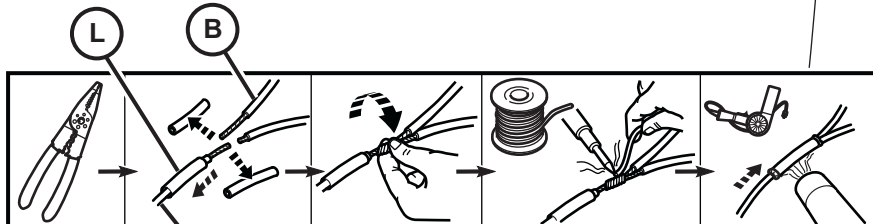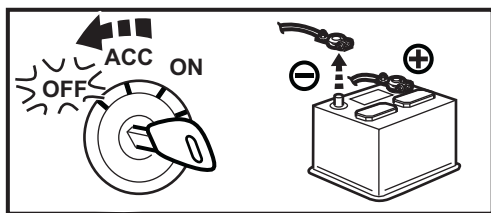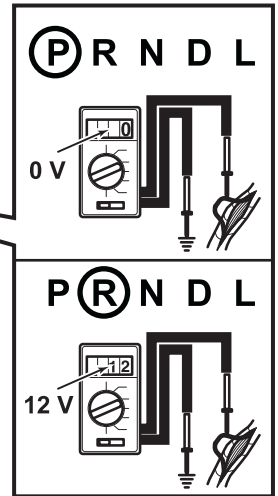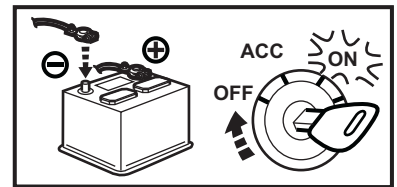







35

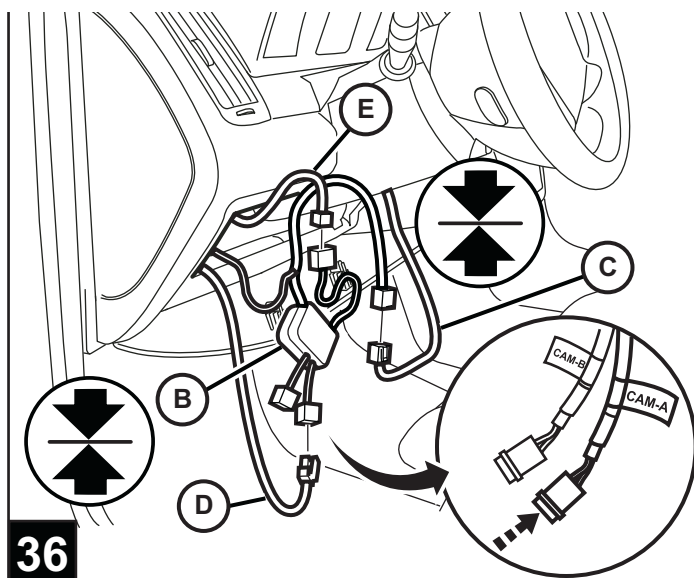


36

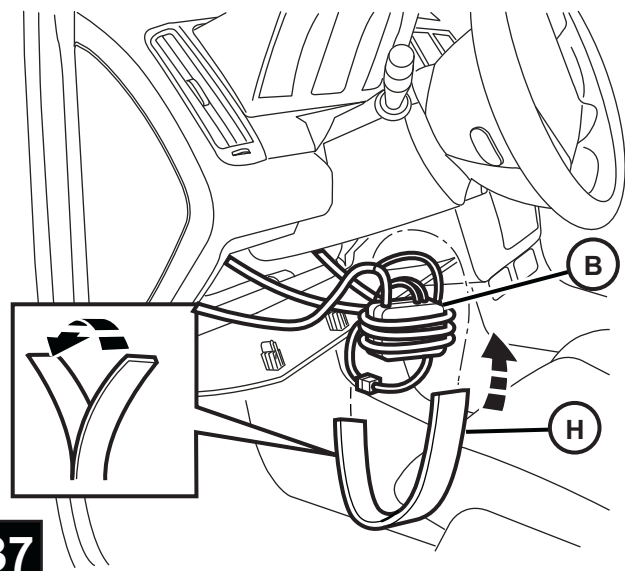


37

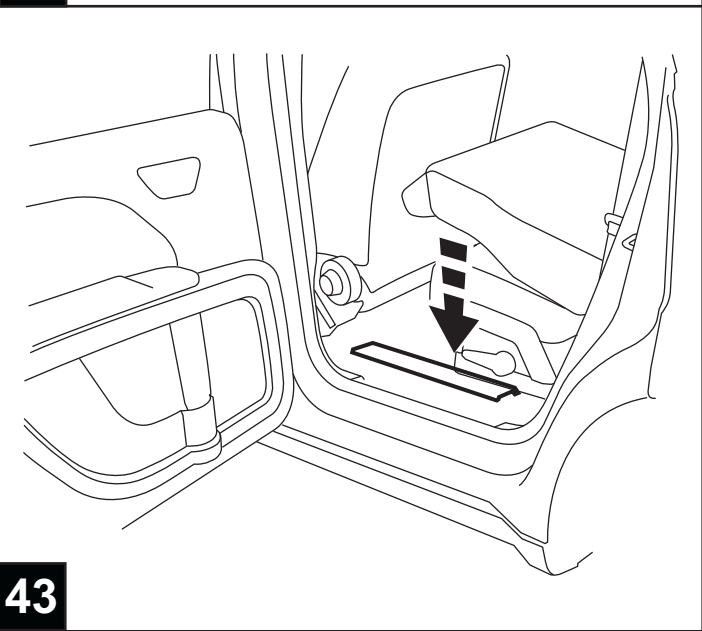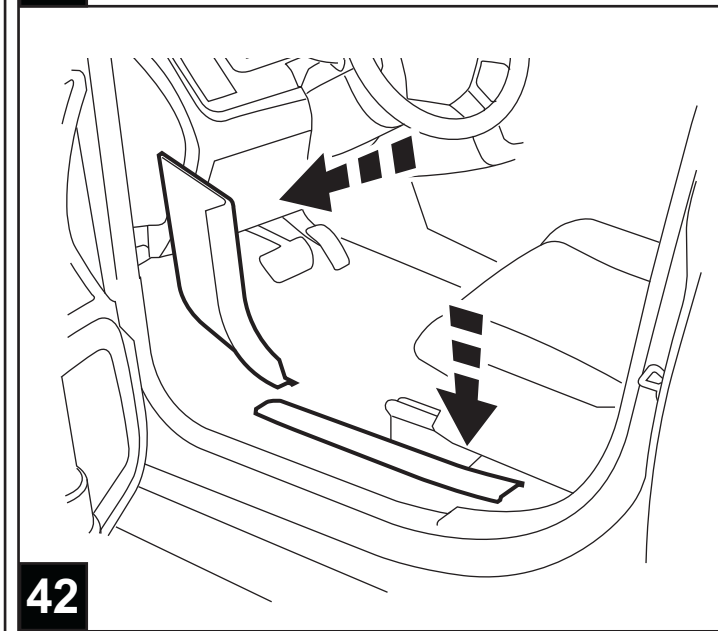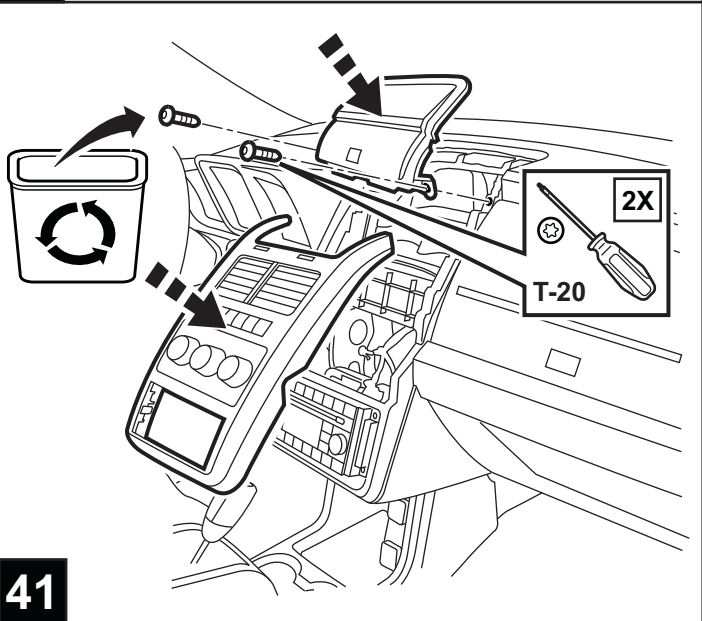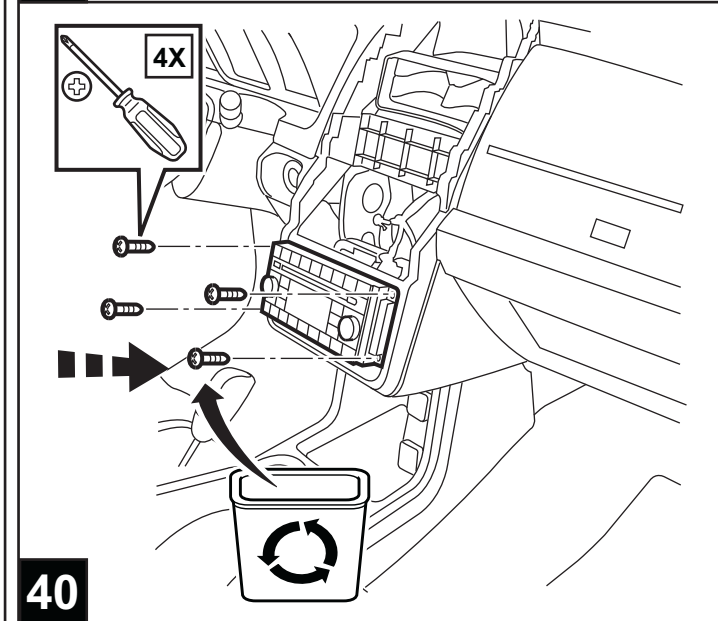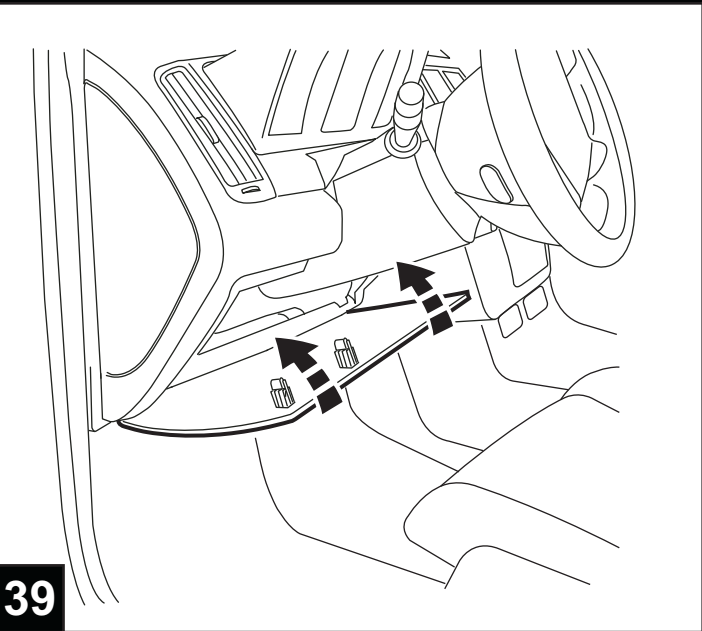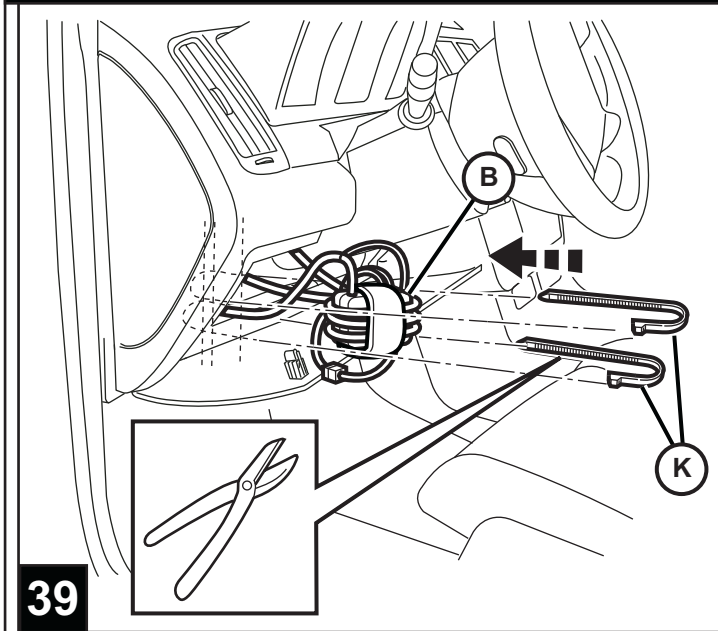


44

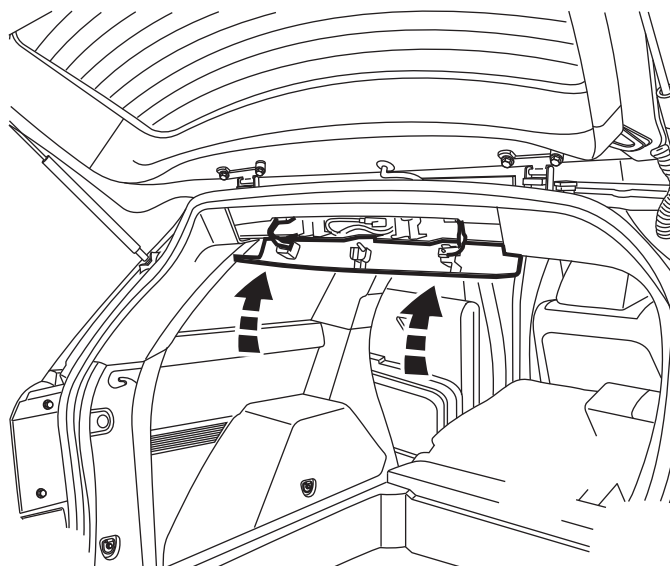

45

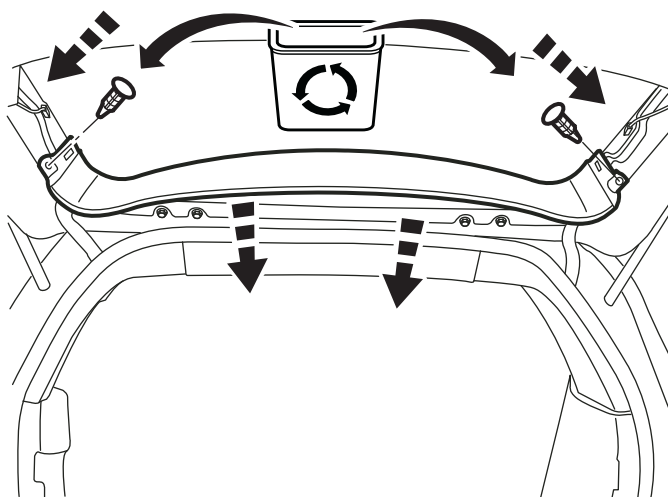

46

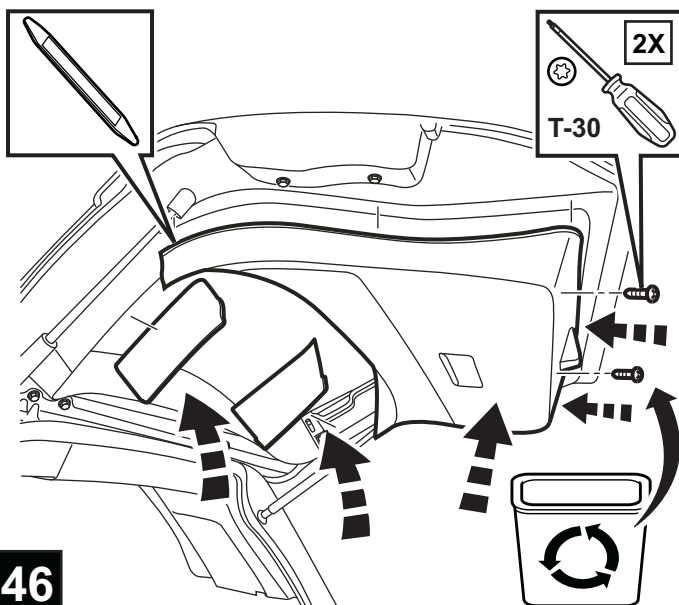

47

