



MOPAR KEY FOB ASSEMBLY



(A1)

Mopar Logo
Logo Mopar
Mopar Logo

A KIT CONTENTS

CONTENU DU KIT

CONTENIDO DEL KIT



Pry Tool
Levier de l'outil
Palanca de herramienta



Alcohol Wipes
Tampons d'Alcool
Limpiador con Alcohol


B TOOLS REQUIRED

OUTILS NECESSAIRES

HERRAMIENTAS REQUERIDAS



Installed view of Mopar Logo
Vue du logo Mopar installés
Ver instalada de Mopar Logo

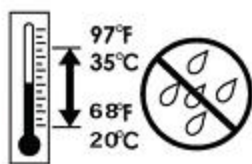

APPLICATION:
APPLICATION:
INSTALACIÓN:

IMPORTANT NOTICE **AVIS IMPORTANT** **NOTA IMPORTANTE**

Prior to installation, check the entire kit for possible damage or defects.
Avant l'installation vérifier le dossier complet sur d'éventuels dommages ou de défauts
Antes de instalar, verifique que todas las partes estén en buenas condiciones

IF PARTS ARE DAMAGED OR CONTAIN DEFECTS DO NOT INSTALL.
YOU MUST RETURN THE COMPLETE KIT IF YOU WISH TO MAKE A WARRANTY CLAIM.
SI LES PIÈCES SONT ENDOMMAGÉES OU CONTIENNENT DES DÉFAUTS DE NE PAS INSTALLER.
VOUS DEVEZ RENVoyer UN KIT COMPLET SI VOUS SOUHAITEZ FAIRE UN DEMANDE DE GARANTIE
SI HAY PARTES DAÑADAS O DEFECTUOSAS NO PROCEDA CON LA INSTALACIÓN.
PARA HACER UN RECLAMO BAJO GARANTÍA, TODAS LAS PARTES DEBEN SER RETORNADAS



MOPAR KEY FOB ASSEMBLY



Remove existing Dodge Logo with pry tool.

Retirer existants Logo Dodge avec l'outil de levier.

Eliminar los actuales Logo Dodge con herramienta de palanca.

1



Clean surface with alcohol wipe. Let dry for 30 seconds

Nettoyer la surface avec tampon imbibé d'alcool. Laissez sécher pendant 30 secondes

Limpie la superficie con alcohol. Deje secar durante 30 segundos

2



Align "M" to the keyring. Press evenly into place: 3M suggested 15psi for 3 - 5 seconds

Aligner «M» pour le trousseau de clés. Presser uniformément en place: 3M suggéré 15psi pour les 3 - 5 secondes

Alinear a la "M" al anillo de llaves. Prensa en forma pareja en el lugar: 3M sugiere 15 psi durante 3 - 5 segundos

3