

INSTALLATION INSTRUCTIONS

AEROGUARD

INSTALLATION INSTRUCTIONS

1. Thoroughly clean and dry the installation area. Trial fit Aeroguard onto hood.

Note: Front edge of Aeroguard must run parallel to front edge of hood. (A second person may be needed to assist.)


Note the four slots in the reverse tags of Aeroguard. Accurately mark the centers of each slot onto the hood, using a felt pen or pencil. Drill each mark using a 9/32" drill bit.

2. Refit Aeroguard onto hood. Secure Aeroguard to hood.

Use the supplied hardware in the following order from top: Hex Head Screw, Metal Washer, Aeroguard, Hood, Metal Washer and Nylon Hex Nut. Secure screw from underside of hood.

To Clean: Use mild detergent and water solution. (Do **NOT** use solvents).

1

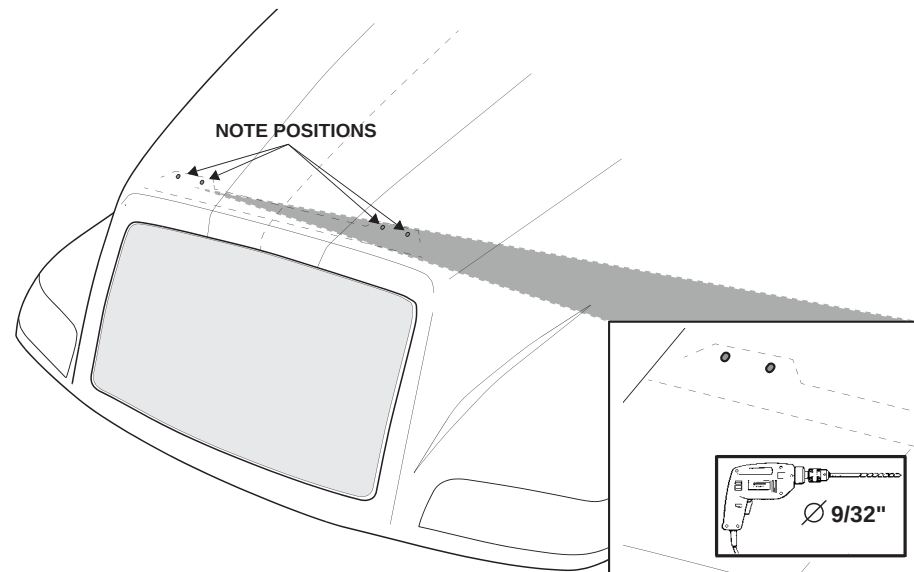

2

