


INSTALLATION INSTRUCTIONS

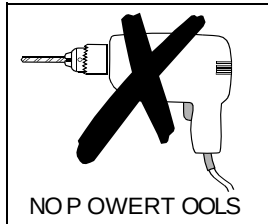

- Do not use power tools to install this product.
- No Battery operated screws guns
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

INSTALLATION INSTRUCTIONS

1. Position **HOOD PRODUCT** centrally on hood.
 - Remove the rubber trim.
 - NOTE: Do not discard rubber seal screw plugs, retain in glove box.**
 - Note the holes in underside of hood corresponding to the slots in **HOOD PRODUCT** tags.
 - Remove **HOOD PRODUCT**.
 2. Locate screw plugs into previously noted holes in hood.
 3. Refit **HOOD PRODUCT**.
 - Re - install rubber trim.
 - Secure **HOOD PRODUCT** and rubber trim with screws and washers provided.
- **Correct sequence is:**
Screw Plugs, **HOOD PRODUCT**, Rubber Trim, Washers and Screws.
DO NOT OVERTIGHTEN SCREWS.

To Remove: Reverse above procedure.

To Clean: Use mild detergent and water solution. (Do **NOT** use solvents).

Avoid the use of automatic "Brush Style" car washes. When closing the hood, do **NOT** pull on **HOOD PRODUCT**.

